
What's in the Box? 2-Slot Cradle


- 1 x KDC185 2-Slot Cradle
- 2 x No-Boot Spacers (mounted on the Cradle)
- 2 x Ring Trigger Spacers (Optional)
- ▶ 2 x Ring Trigger No-Boot Spacers (Optional)
- ▶ 1 x USB Type-C Cable
- 1 x USB Wall Adaptor

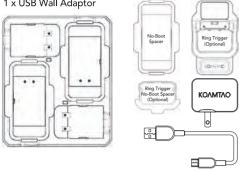


* The shape of the adaptor may vary by country.

What's in the Box? 10-Slot Cradle

- 1 x KDC185 10-Slot Cradle
- ▶ 10 x No-Boot Spacers (mounted on the cradle)
- ▶ 10 x Ring Trigger Spacers (Optional)
- ▶ 10 x Ring Trigger No-Boot Spacers (Optional)
- 1 x 12V/10A DC Power Adaptor

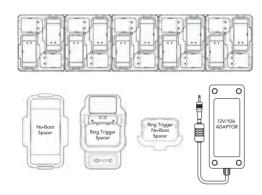

Cradle Power LED Status

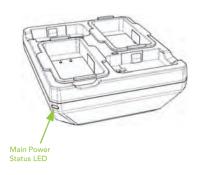

Green: Always on when the cradle is powered on

Additional Accessories

- ▶ KDC185 Safety Glove
- ► KDC185 Ring Trigger
- ▶ Protective Rubber Boot
- USB Type-C Cable




116 Village Blvd, Ste 305, Princeton, NJ 08540 +1 609-256-4700 p | +1 609-228-4373 f info@koamtac.com | www.koamtac.com

Charging via Type-C Port (2-Slot)


Connect the USB wall adaptor and the USB cable, then connect the cable to the USB Type-C port on the back of the charging cradle. (A)



Battery LED Status

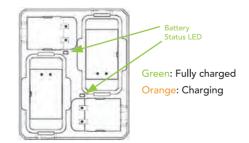




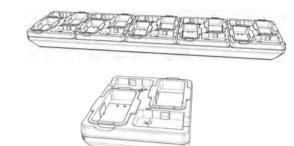


Charging via DC Connector (10-Slot)

Connect the Power Adaptor to the DC Jack on the back of the 10 Slot cradle. (B)

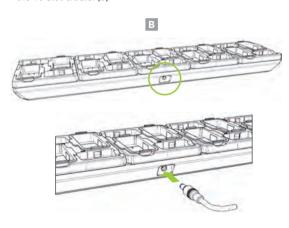


Charging without a Protective Boot

Make sure the No-Boot Spacer is installed on the cradle. Insert the KDC185 into the cradle with the device mounting direction as shown below (C)

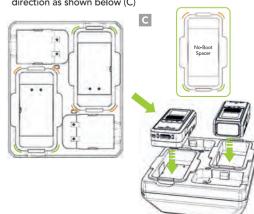


Charging with a Protective Boot

1. Remove the No-Boot spacer from the cradle by pulling up tabs on the front and rear of each spacer. (D)

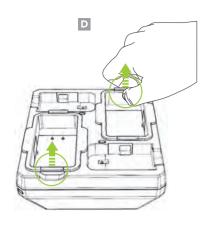


2. Insert the Ring Trigger Spacer into the cradle in the orientation shown below. (G)

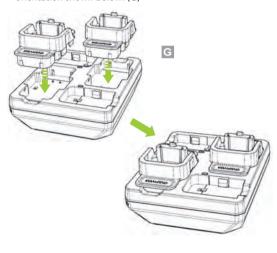

Ring Trigger No-Boot Spacer Removal

Remove the Ring Trigger No-Boot Spacer from the cradle by pulling the tab on the front of the spacer up. (J)

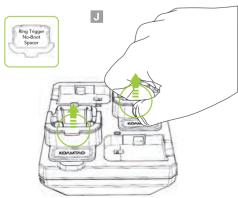


* Requires optional Ring Trigger No-Boot Spacers.

2. Insert the KDC185 with a Protective Boot into the cradle with the device mounting direction as shown below. (E)




3. KDC185 Ring Trigger can now be charged while wearing a protective boot. Charge the device by placing the device on the cradle with the scan engine facing upward. (H)

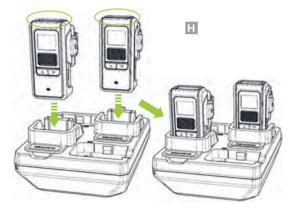

Ring Trigger Spacer Removal

Hold the grooves on both sides of the spacer and pull them up to remove the Ring Trigger Spacer from the cradle. (K)

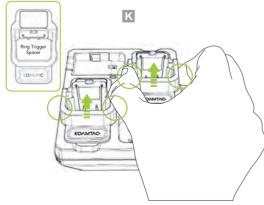

* Requires optional Ring Trigger Spacers.

Charging Ring Trigger and Protective Boot


Flip the Ring Trigger Spacer upside down and locate the pogo contacts. Next, flip the Ring Trigger Spacer back over and insert it into the cradle making sure the pogo contacts on the Spacer make contact with pogo pins on the cradle. (F)



* Requires optional Ring Trigger Spacers.

Charging Ring Trigger without Protective Boot

Attach the Ring Trigger No-Boot Spacer to the cradle. Insert the KDC185 Ring Trigger without Protective Boot into the cradle with the scan engine facing upward. (I)

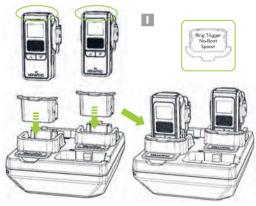

* Requires optional Ring Trigger No-Boot Spacers.

500mAh Battery Charging

Place the battery on the cradle by aligning the direction of the battery with the shape of the battery slot. (L)

