

User's Manual
Manuel Utilisateur
Manual del usuario

Tuner Module DS1-TM01



English



Français



Español

Table of contents

Important Information.....	English-2
Supplier's Declaration of Conformity	English-3
Contents	English-4
Installation	English-5
Part Names.....	English-7
Connections	English-8
Basic Operation.....	English-9
Navigating The On-Screen Menu	English-10
Channels Menu	English-10
Setup Menu.....	English-10
Troubleshooting.....	English-12
Specifications	English-13

Important Information



Refer to the “Important Information” and “Recommended Use & Maintenance” of the LCD Monitor in the User’s Manual for notes on handling.

Safety Precautions and Maintenance







FOR OPTIMUM PERFORMANCE, PLEASE NOTE
THE FOLLOWING WHEN SETTING UP AND
USING THE TUNER MODULE:







About the Symbols

To ensure safe and proper use of the product, this manual uses a number of symbols to prevent injury to you and others as well as damage to property. The symbols and their meanings are described below. Be sure to understand them thoroughly before reading this manual.




 WARNING	Failing to heed this symbol and handling the product incorrectly could result in accidents leading to major injury or death.
 CAUTION	Failing to heed this symbol and handling the product incorrectly could result in personal injury or damage to surrounding property.

Examples of symbols

	<p> Indicates a warning or caution. This symbol indicates you should be careful of electric shocks.</p>
	<p> Indicates a prohibited action. This symbol indicates something that must be prohibited.</p>
	<p> Indicates a mandatory action. This symbol indicates that the power cord should be unplugged from the power outlet.</p>

 WARNING	
	Do not use the monitor if the monitor was dropped or the cabinet is damaged. It may cause an electric shock or fire.
	Do not insert objects of any kind into the cabinet slots, as they may touch dangerous voltage points, which can be harmful or fatal, or may cause electric shock, fire or equipment failure.
	
	When cleaning the monitor - Do not use flammable gas sprays to remove dust. Doing so could lead to a fire.
	Do not play with the plastic bag which covers the monitor. Do not use this bag for any other purpose. To avoid the danger of suffocation, do not place this bag over your head, nose or mouth. Do not place this bag over another person’s head, nose or mouth. Keep this bag away from children and babies.

 **CAUTION**

 	<p>Please install the monitor in accordance with the following information. Improper installation of the monitor may result in damage to the monitor, an electric shock or fire.</p> <p>Do not install the monitor in the locations below:</p> <ul style="list-style-type: none">- Near a radiator, other heat sources, or in direct sunshine.- Continual vibration areas.- Humid, dusty, steamy or oily areas.- Outdoors- High-temperature environment where humidity changes rapidly and condensation is likely to occur. <p>Do not mount this product face up, face down, or upside down for an extended period of time as it may cause permanent damage to the screen.</p>
	<p>To ensure the monitor's reliability, please clean the ventilation holes at the rear side of the cabinet at least once a year to remove dirt and dust.</p>

Supplier's Declaration of Conformity

FCC SDoC

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions. (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

U.S. Responsible Party:	NEC Display Solutions of America, Inc.
Address:	3250 Lacey Rd, Ste 500 Downers Grove, IL 60515
Tel. No.:	(630)-467-3000

Type of Product: Tuner Module
Equipment Classification: Class B Peripheral
Model: DS1-TM01



FCC Information

The Federal Communications Commission does not allow any modifications or changes to the unit EXCEPT those specified by NEC Display Solutions of America, Inc. in this manual. Failure to comply with this government regulation could void your right to operate this equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

Canadian Notice

 
Cable-Compatible Analog and Digital Television Receiving Apparatus — Appareil de réception de télévision analogique et numérique câblcompatible, Canada BETS-7 / NTMR-7.




Manufactured under license from Dolby Laboratories.

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.

Contents

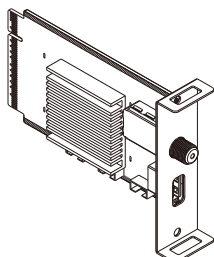

DS1-TM01

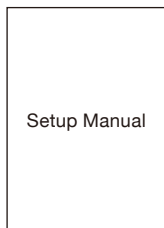 

Setup Manual

Installation

Contact your dealer about the compatible monitor models.

⚠ WARNING:

- Before installing or removing this product, disconnect the monitor power cord from the power outlet.
- Pay careful attention not to insert foreign objects into the monitor while installing this product. Also, use care not to drop this product and the expansion slot cover.

 
⚠ CAUTION

Ensure the Option Board is securely fastened using the original screws to prevent the Option Board from falling out of the monitor. A falling Option Board may expose you to danger.

Models ME431 / ME501 / ME551 / ME651


Replace the option cover.

1. Remove the slot covers (1) and (2) and option cover (a). (Figure 1)

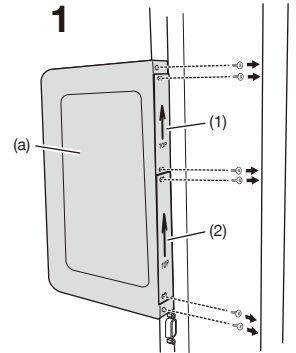


2. Fasten the option cover (b), included with the monitor, with the removed screws. (Figure 2)
(Recommended Fasten Force: 60.8 - 82.4N•cm).

 NOTE: Do not apply a force exceeding the specified torque when tightening the screws. Otherwise, the screw holes may be damaged.

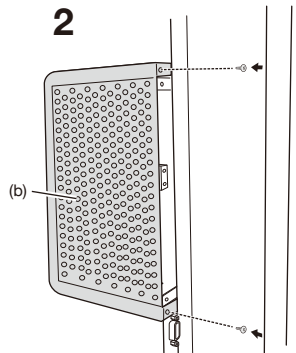

3. Insert the option board along the rail and fasten it with the removed screws. (Figure 3)
(Recommended Fasten Force: 60.8 - 82.4N•cm).


 
NOTE: When installing this product, ensure that the top side is facing the rear of the monitor (see figure 3). This product can be damaged if inserted in the wrong orientation. Do not apply a force exceeding the specified torque when tightening the screws. Otherwise, the screw holes may be damaged.

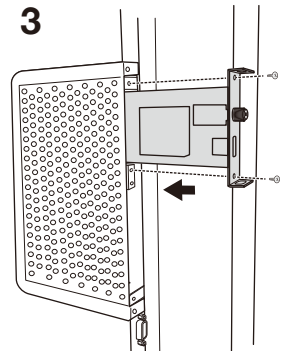

4. Fasten the slot cover (2) to the unused slot with the removed screws.
(Figure 4)


Use the screw holes shown in the figure when mounting.
(Recommended Fasten Force: 60.8 - 82.4N•cm).

  NOTE: Do not apply a force exceeding the specified torque when tightening the screws. Otherwise, the screw holes may be damaged.

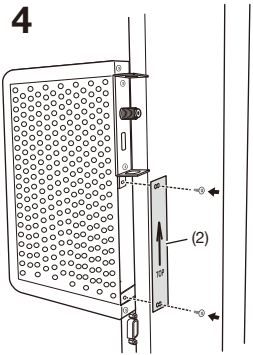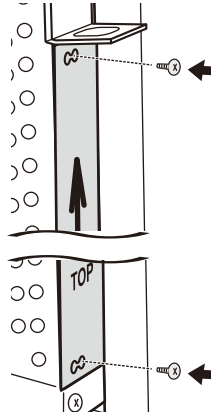

Models M431 / M491 / M551 / M651 / MA431 / MA491 / MA551 / P435 / P495 / P555

 
1. Remove the slot cover (1). (Figure 1)

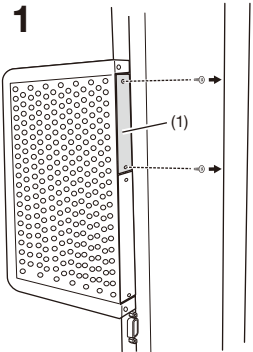


2. Insert the option board along the rail and fasten it with the removed screws. (Figure 2)

(Recommended Fasten Force: 60.8 - 82.4N•cm).

 NOTE: Do not apply a force exceeding the specified torque when tightening the screws. Otherwise, the screw holes may be damaged.

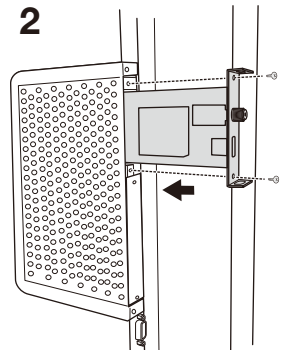

Part Names

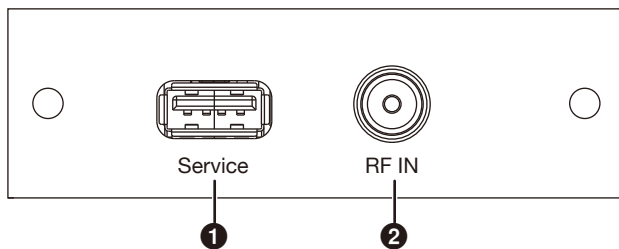 

① Service

USB 2.0 Type A port for USB storage device.

Insert a USB storage device when you execute Setting Copy function.

② RF IN (F Type)

RF input that connects to your VHF/UHF Antenna or Cable TV Service.

 
Connections

NOTE: Do not connect/disconnect cables when turning on the monitor or other external equipment as this may result in a loss of the monitor image.

Before making connections:

- * To protect the external equipment, turn off the main power of the monitor before making connections.
- * Refer to the user manual included with each separate piece of equipment.

Wiring Diagram

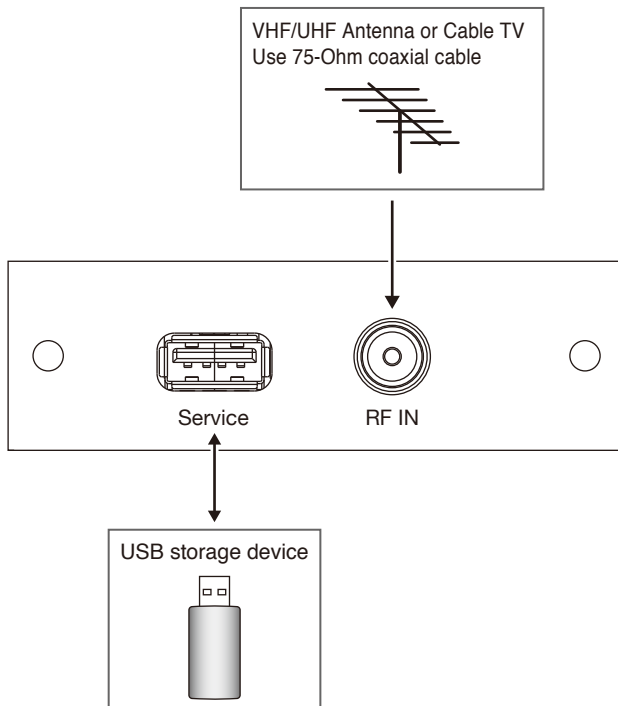

Basic Operation

Selecting the Tuner

Press the OPTION button on the wireless remote control.

Opening the Tuner OSD menu

When the input signal of the monitor is "OPTION", press the OPTION MENU button to open/close the Tuner OSD menu.

Wireless Remote Control

NOTE: Use your monitor's wireless remote control. For details about procedures other than those listed below, or if your wireless remote control is different from the picture below, see the monitor's user's manual.

1 POWER ON and STANDBY buttons

Switches the monitor between power on and standby.

2 OPTION button

Sets the input signal to "OPTION".

3 OPTION MENU button

When the "OPTION" input is active, opens/closes the Tuner OSD menu.

4 KEYPAD

Use these buttons to set and change passwords and change the channel.

5 ENT button

Sets items within OSD menu and channels.

6 DISPLAY button

Shows/hides the current channel information.

7 MENU button

Opens/closes the monitor OSD menu. Refer to your monitor's user's manual for more monitor OSD information.

8 UP/DOWN button

Acts as ▲▼ navigation buttons to move the highlighted area up or down to select items within the OSD menu.

9 MINUS/PLUS (-/+) button

Acts as ◀▶ navigation buttons to move the highlighted area right or left to select items within the OSD menu.

10 EXIT button

Returns to previous menu within the OSD menu.

11 VOL +/- button

Increases or decreases audio output level.

12 CH/ZOOM +/- button

Changes the channel up or down.

13 ASPECT button

 
Selects picture aspect.

14 MTS button

Select the Multi-language.

15 ☰ button

Activates closed captioning.

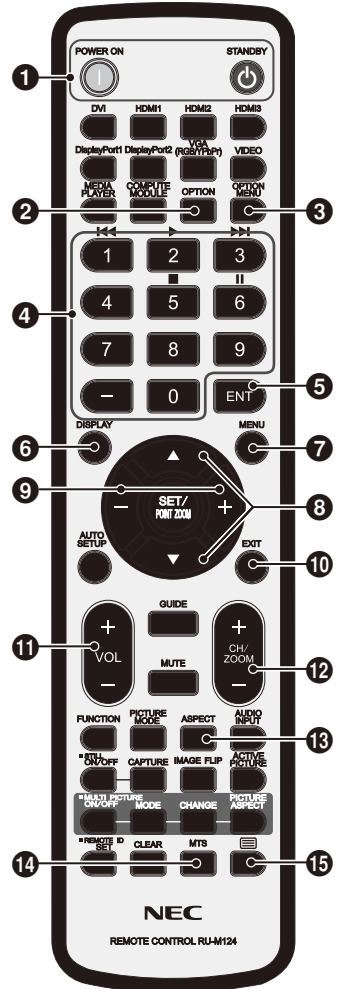


Navigating The On-Screen Menu

Press the “**OPTION MENU**” button to open and the “**EXIT**” button to close the main menu of Tuner.

Channels Menu

 The Channels Menu allows you to set your signal source options. According to various requirements in different source modes, certain features could be hidden (disabled) on the menu.

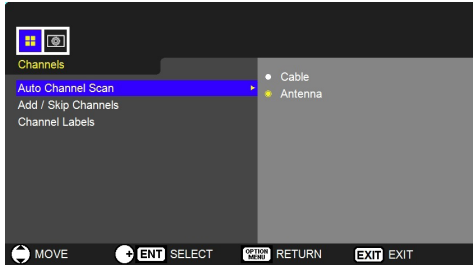

Auto Channel Scan

Automatically search the available channels.

Add/Skip Channels

 
 
Manually add or skip channels to the channel list.

Channel Labels

Create labels to any channel.

Setup Menu

The Setup Menu in TV mode is shown below. According to various requirements in different source modes, certain features could be hidden (disabled) on the menu.

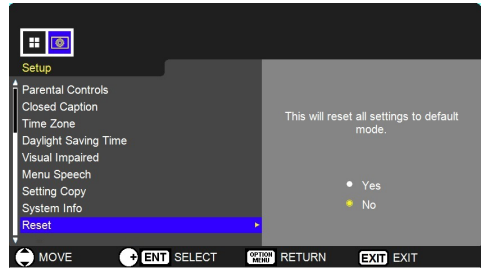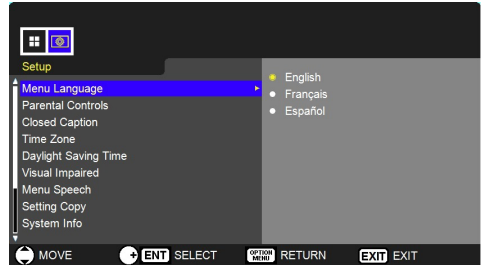

Menu Language

Select the menu display language.

English / Français / Español

Parental Controls

Set TV parental controls. This function blocks out the picture and sound of the selected rating levels.

The factory preset password to enter **Parental Controls** feature is the 4-digit number **0000**.

[Block Unrated TV]

Block or unblock the unrated programs.

[US]

Set the parental control level using Movie Ratings menu or US TV ratings lock menu.

[Canadian]

Set the parental control level using Canadian English menu or Canadian French menu.

[Change Password]

Change the 4-digit password. You will have to enter the new password first, then enter the new password again to confirm. Make sure to keep your new password.

[PRT5]

Use Region 5 to block various types of movies and television programs based on ratings systems used in the USA that you feel may be inappropriate due to its content.

The Region 5 option will operate for Digital Channels (ATSC) only.

[Reset PRT5]

Clear the downloaded RRT5 rating information and restore to the factory default settings.

Closed Caption

Adjust the Closed Caption settings.

Caption Display / Analog Captions / Digital Captions / Digital CC Settings

Time Zone

Select the Time Zone setting.

Daylight Saving Time

Select the Daylight Saving Time setting.

Visual Impaired

Select to turn On/Off support methods for the visually impaired. (Only available for digital channels)

Menu Speech

Enable speech function for the OSD menu and certain operations.

Setting Copy

This function is for copying (exporting) all of the settings' values for the menu tree from the DS1-TM01 to a USB storage device, and loading (importing) settings' values from a USB storage to another DS1-TM01. Setting values include the TV channel preset data, allowing users to copy the settings values to other DS1-TM01s instead of having to channel scan on each device.

NOTE:

- Supported file system on USB storage devices: FAT16, FAT32, NTFS
- Only USB mass storage class devices are supported. We cannot guarantee that all commercially available USB storage devices will work.
- Do not use a USB Hub.
- Do not use a multi-partition USB.
- Support USB 2.0 Type A connector (DC5V, max. 500mA). For USB device over 500mA, we suggest to use adaptor or external power.


System Info

Shows the module information.

Reset

Reset all settings to factory default settings.

Troubleshooting

Problem	Solution
No picture, but a message is displayed.	<ul style="list-style-type: none">• Be sure to perform a channel scan before you watch the TV program.• Check to see if the antenna/cable is properly connected.
No picture	<ul style="list-style-type: none">• Check to make sure that Video Input is set to "OPTION".• Check to see if this product is properly installed.• Press the CH+ or CH- buttons on the Remote Control to change the channel.• Switch another input signal once, then press the OPTION button on the Remote Control again.• Press the STANDBY button on the Remote Control to turn off the monitor once, then press the POWER ON button to turn on again.
No Closed Caption displayed	<ul style="list-style-type: none">• Make sure the channel you are watching carries closed caption information.• Press the  button on the Remote Control to check for closed caption data output.
Remote control does not work	<ul style="list-style-type: none">• Make sure the batteries are inserted properly.• Test the batteries for strength/life.• Make sure to point the remote directly at the sensor on the monitor.• Check if the remote is in Remote ID mode.• The remote control may not function when in direct sunlight or when there is strong illumination on the remote sensor of the monitor.
USB Flash Drive is not recognized	<ul style="list-style-type: none">• Check to see if USB Flash Drive is properly connected.• Check to see if USB Flash Drive meets the requirements. (See USB Flash Drive Requirements page 18.)

Specifications

Television System		NTSC Standard, ATSC Standard (8-VSB, Clear-QAM)
Channel Coverage		VHF: 2 through 13 UHF: 14 through 69 Cable TV: Mild band (A - 8 through A - 1, A through I), Super band (J through W), Hyper band (AA through ZZ, AAA, BBB), Ultra band (65 through 94, 100 through 125)
Interface	Antenna / Cable Input	VHF / UHF; F Type Connector
	USB	USB2.0 Type A, DC5V, Max 500mA
	Video / Audio Output	SDM (Intel® Smart Display Module) Interface with monitor
	Video Resolution	1920 x 1080
	Control Method	Monitor's Remote Control, RS-232C
OSD	Language	English / French / Spanish
Dimensions	Net (W x H x D)	80 x 25 x 123.2 mm
	Gross (W x H x D)	118 x 55 x 169 mm
Weight	Net	0.1 kg
	Gross	0.16 kg
Power	from Monitor	5.3 W / DC12V, 5.3m W / DC3.3V
Operating Environment	Temperature	0 - 40°C (with Monitor), 0 - 55°C (w/o Monitor)
	Humidity	10 - 80% (Non-condensing)
	Altitude	0 - 2,000 m
Storage Environment	Temperature	-10 - 60°C
	Humidity	5 - 85% (Non-condensing)
Regulation	US	FCC (SDoC)
	Canada	BETS-7
Accessories	Manual	Setup Manual (User's Manual is on website)