

4K/UHD KVM Extenders (4K@60, 4:4:4) with POE

Overview

KVM-SET-17 can extend HDMI 2.0 UHD computer signals up to 100 meters with USB 2.0 over a single CAT6 cable.

Package Contents

- 1 x KVM-1-UHD-Tx-POE (Transmitter)
- 1 x KVM-1-UHD-Rx-POE (Receiver)
- 1 x Power adapter DC48V with lock +2 x mounting plates

Features

- Supports 4K@60Hz (4:4:4)
- Supports 1080P@120Hz
- Supports HDCP 1.4/2.2/2.3
- HDMI loop through
- Extends HDMI 2.0 signals up to 100 meters
- Supports POE
- Supports USB 2.0
- Supports 3D and CEC pass-through
- Supports bi-directional RS-232
- Supports all frequency IR control
- Supports LPCM, Dolby True HD and Dolby Digital audio



KVM-SET-17
USER MANUAL v.1.2

Specifications

Function	KVM-1-UHD-Tx-POE	KVM-1-UHD-Rx-POE
HDMI In Connectors	1 x HDMI Type A Female	
HDMI Out Connectors	1 x HDMI Type A Female	1 x HDMI Type A Female
RJ45 Connectors	1 x RJ45 for HDBaseT	
USB	USB B x1, USB A x 2	USB-A-Type Female x 2
SPDIF Input		Toslink Jack x 1
SPDIF Output	Toslink Jack x 1	
RS-232 Connectors	DB9 female	
IR In/Out	3.5 ψ Stereo Jack x 1	
Audio In/Out	3.5 ψ Stereo Jack x 1	
DIP SW	3 Pin x 1	
LED	4 in 1 LED x 1	
DC Jack	48V	
Max Resolution	4K60Hz	
Max Distance	100 meters	
Weight	415g	405g
Dimensions (LxWxH)	152 x 115 x 20 mm	

FRONT VIEW (Transmitter)



1. USB 2.0 (USB Device)
2. USB 2.0 (USB Host)
3. SPDIF Out
4. Rs232
5. IR out (IR blaster)
6. IR In (IR receiver)
7. DIP Switch
 - Pin 1 - OFF: DEFAULT
ON: FW upgrade mode
 - Pin 2 - Reserved
 - Pin 3 - OFF: HDBT Mode
ON: Long Reach Mode
8. POWER / VIDEO / LINK / MODE LED

FRONT VIEW (Receiver)



1. USB 2.0 (USB Device)
2. SPDIF Out
3. Rs232
4. IR out (IR blaster)
5. IR In (IR receiver)
6. DIP Switch
 - Pin 1 - OFF: DEFAULT
ON: FW upgrade mode
 - Pin 2 - Reserved
 - Pin 3 - OFF: HDBT Mode
ON: Long Reach Mode
7. POWER / VIDEO / LINK / MODE LED

REAR VIEW (Transmitter)



1. Power 48V DC
2. LINK Out (RJ-45 Connector)
3. HDMI In / Out
4. Audio In

REAR VIEW (Receiver)




1. LINK In (RJ-45 Connector)
2. HDMI Out
3. Audio Out
4. Audio In

Installation

1. Turn off source and display
2. Connect the HDMI cable between the source and the transmitter
3. Connect the HDMI cable between the display and the receiver
4. Connect the LAN (RJ45) cable between the transmitter and receiver
5. Connect mouse and keyboard
6. Connect the CAT cable between the transmitter and receiver
7. Connect the power to both the transmitter and receiver
8. Power on the source and display


IR Blaster Cable:

Connect the IR blaster cable to <IR OUT> port

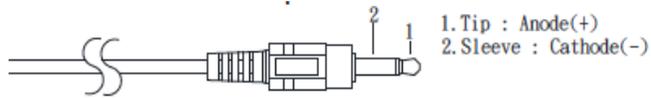

IR Receiver Cable:

Connect the IR blaster cable to <IR OUT> port

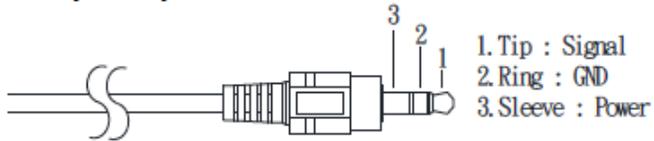

© 2023 APANTAC LLC. All rights reserved
10200 SW Allen Blvd, Suite C
Beaverton, OR 97005, USA
PHONE +1 503 968 3000
FAX +1 503 389 7921

The content of this document is provided in connection with Apantac LLC ("Apantac") products. Apantac makes no representation or warranties with respect to the accuracy or completeness of the contents of this publication and reserves the right to make changes to specification and product descriptions at any time without notice