

Thank you for purchasing this instrument from Intellitronix. We value our customers!

<u>INSTALLATION GUIDE</u> LED Digital Transmission Temperature Gauge Part Number: M9107

* Always disconnect the battery *before* attempting any electrical work on your vehicle.*

KIT COMPONENTS

- **One (1) LED Gauge**
- ◊ One (1) \$8013 temperature sender

WIRING INSTRUCTIONS

Note: Automotive circuit connectors are the preferred method of connecting wires. However, you may solder if you prefer.

Ground - **Black** Connect directly to an engine ground such as the engine block. For the most accurate readings, connect to the same ground as the sending unit.

Power - Red Connect to a switched +12V source such as the ignition switch.

Dimmer - **Purple** Connect to the parking lights to dim the LEDs 50% when the headlights are on. However, **do not** connect to the headlight rheostat control wire; the dimming feature will not work properly. Otherwise, connect to ground for permanent 100% brightness.

Temperature - Blue Connect to the output of the temperature sending unit.

#