

## GRAPHIC INSTALLATION GUIDE

### Specifications

**Primary Power**

120VAC or 120/230VAC, 0-20 Amps  
maximum 60 Hz

**Phase/Pump Type**

Single Phase, Simplex

**Terminal Blocks**

120/230VAC, 20A and 50A

**Definite Purpose Contactor**

120VAC or 230VAC, 20A, 50/60 Hz, 2-Pole,  
Normally Open

**Circuit Breakers**

120/230VAC, 1P or 2P, 10A or 25A

**Alarm Beacon**

10 Watt, Polycarbonate (red)

**Alarm Buzzer**

120VAC, 95dB at 2-feet

**Control Relay**

110VAC, 15A, Single Pole, Double Throw

**HOA Switch**

120VAC, 6A, Single Pole, Double Throw

**Test/Silence Switch**

120VAC, 6A, Single Pole, Double Throw

**Pump Run Indicator**

125VAC, 3Watt, Neon (green)

**ETM (timer)/EC (counter)**

7-Digit Displays, Non-resettable (optional)

**Pedestal (riser attachment)**

36-inch, Polyethylene, Curved Bottom/Side  
Cutouts (optional)

**Enclosure (sizes; inches)**

Thermoplastic, 10x8x4, Type 4X (outdoor),  
Lockable Latch

**Certifications**

UL 508 (US and Canada)

**Warranty**

Three-Year Limited Warranty




### Safety Guidelines

Before proceeding with the installation or operation of the control panel read all instructions thoroughly, as well as comply with all Federal, State and Local Codes, Regulations and Practices. The control panel must be installed by qualified personnel familiar with all applicable local electrical and mechanical codes. Refer to the National Electrical Code (NFPA 70). Failure to properly install and test this product can result in personal injury or equipment malfunction.

1. DISCONNECT POWER when installing or servicing the product. Failure to disconnect all power sources could result in serious injury or death.
2. NEVER enter a flooded space without proper Personal Protective Equipment (PPE). Always wear dielectric rubber boots and other applicable protective equipment when water is on the floor and you must service an energized pump, alarm system, or product.
3. DO NOT enter the water if the water level is higher than that of the protection your PPE offers or if your PPE is not watertight.
4. DO NOT use or install this product with or near flammable liquids.
5. DO NOT use or install this product in locations classified as hazardous or in explosive atmospheres as defined by any applicable electrical safety code.



Typical Float Arrangement			
	FS1	FS2	FS3
Configuration	Stop Float	Start Float	High Alarm

1

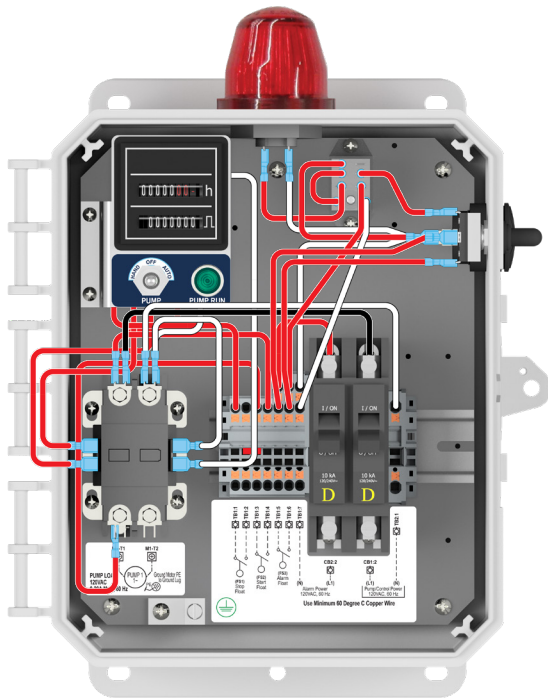


Factory Wiring




2

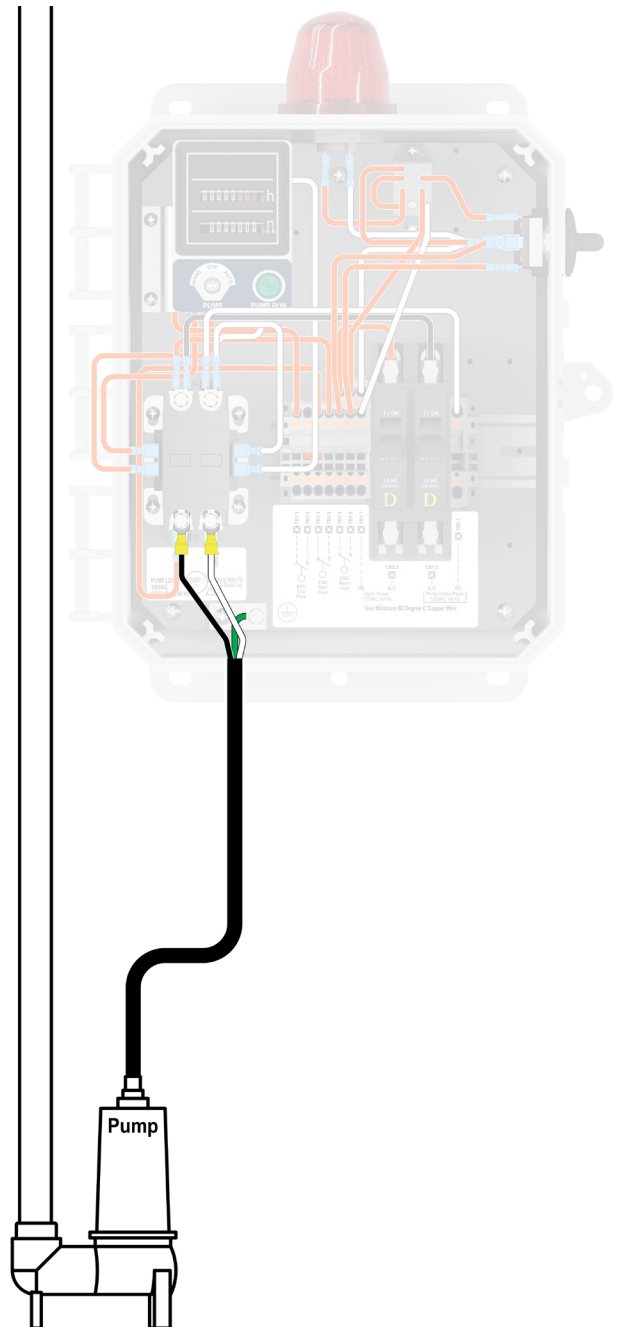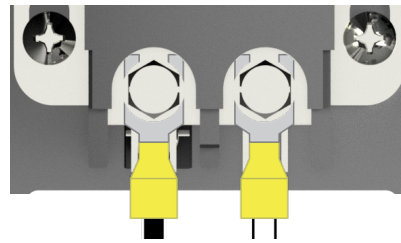


3

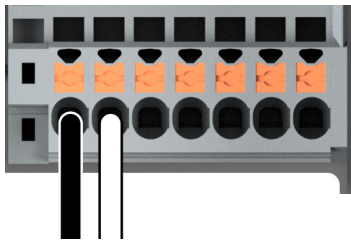




4

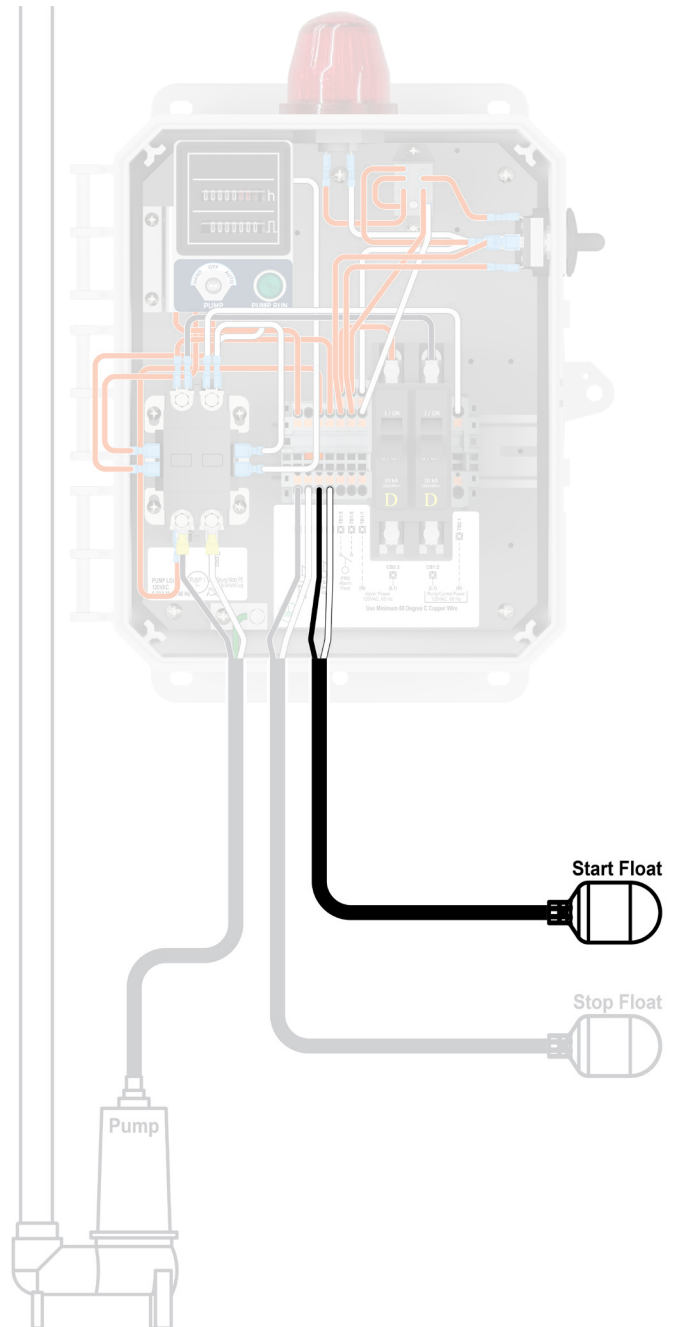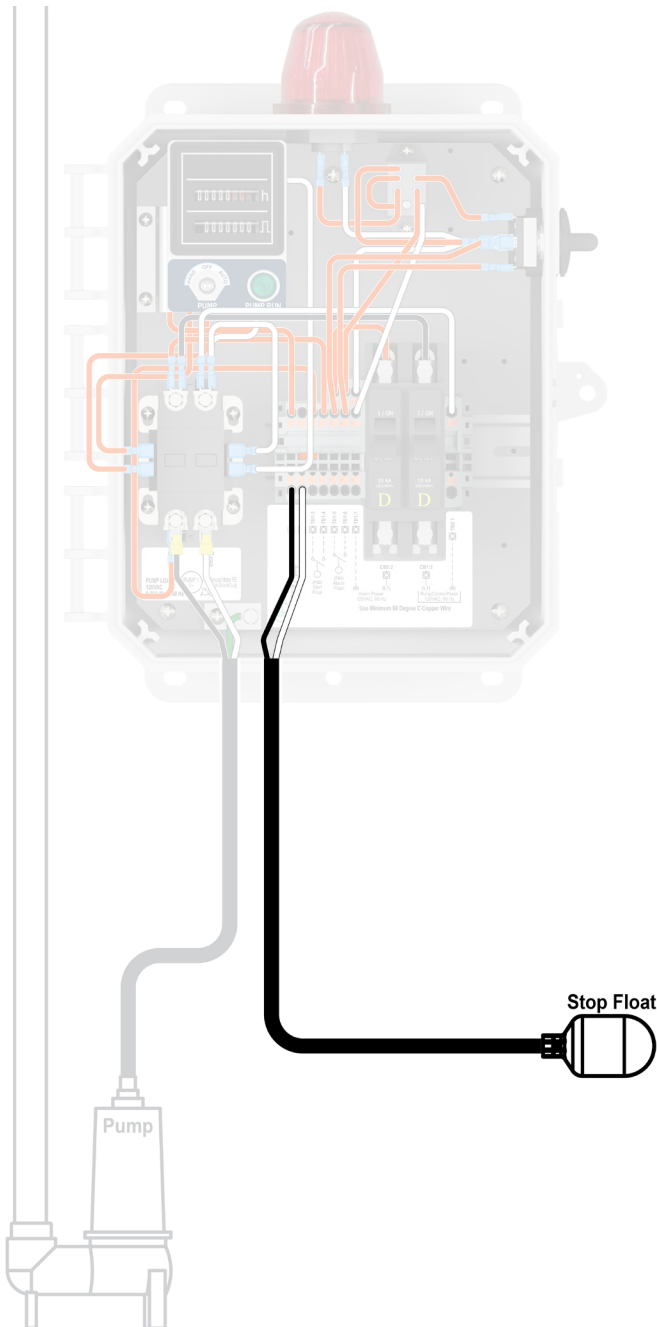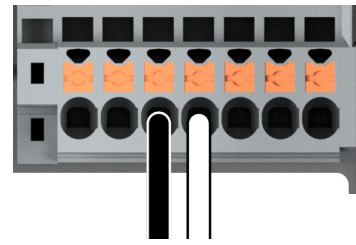




5

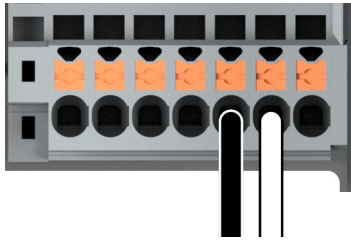

6

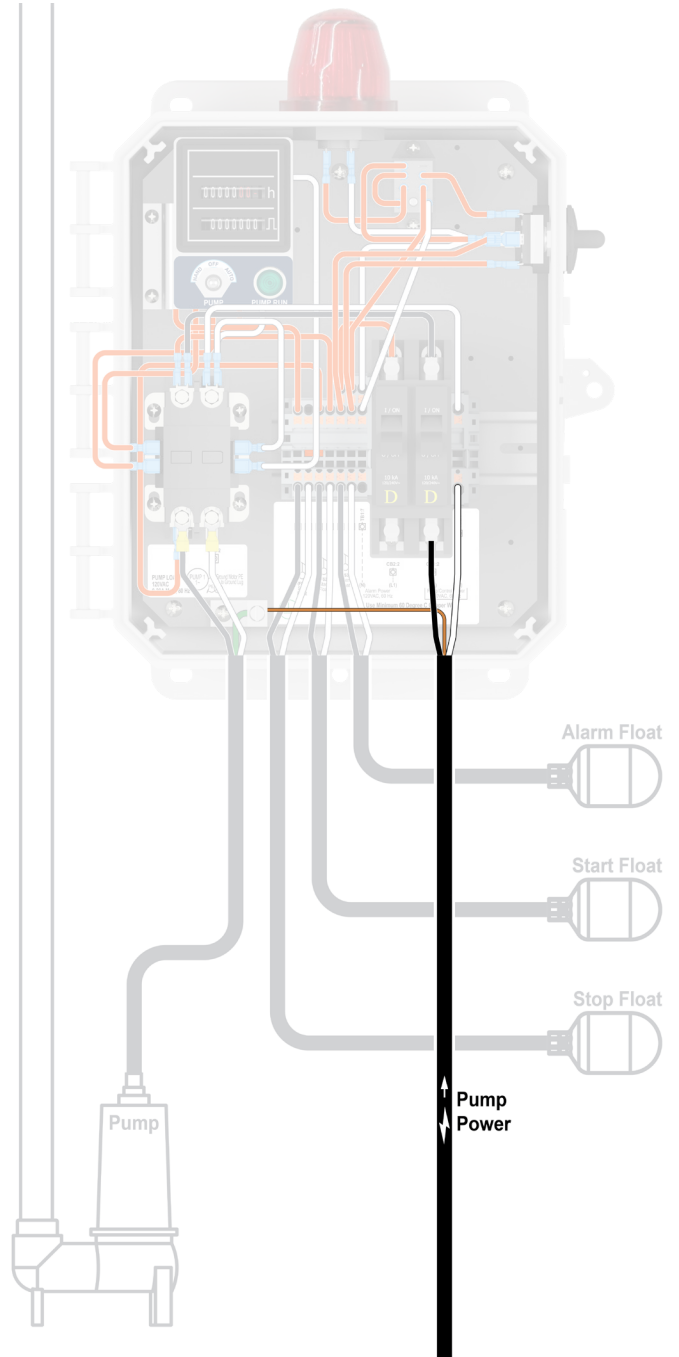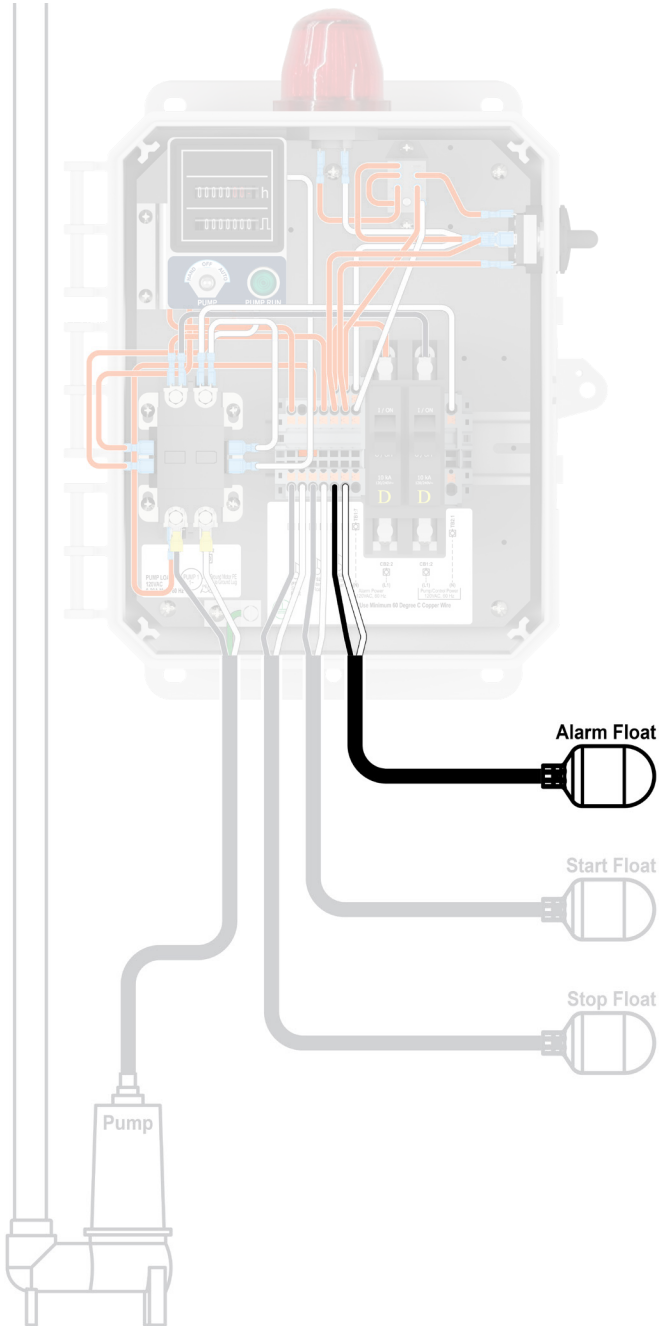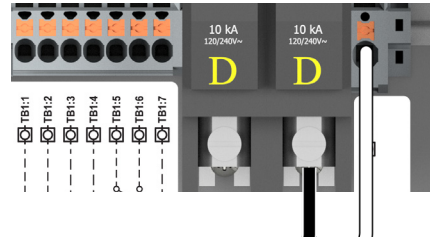

7

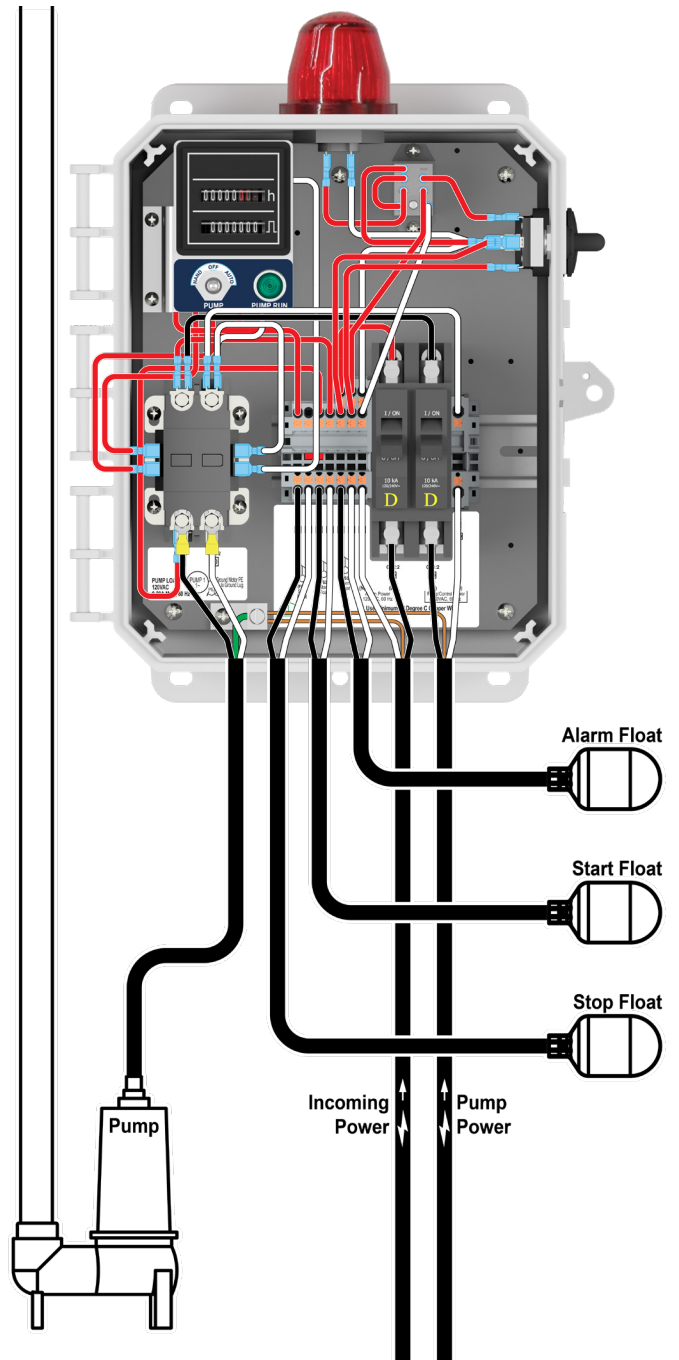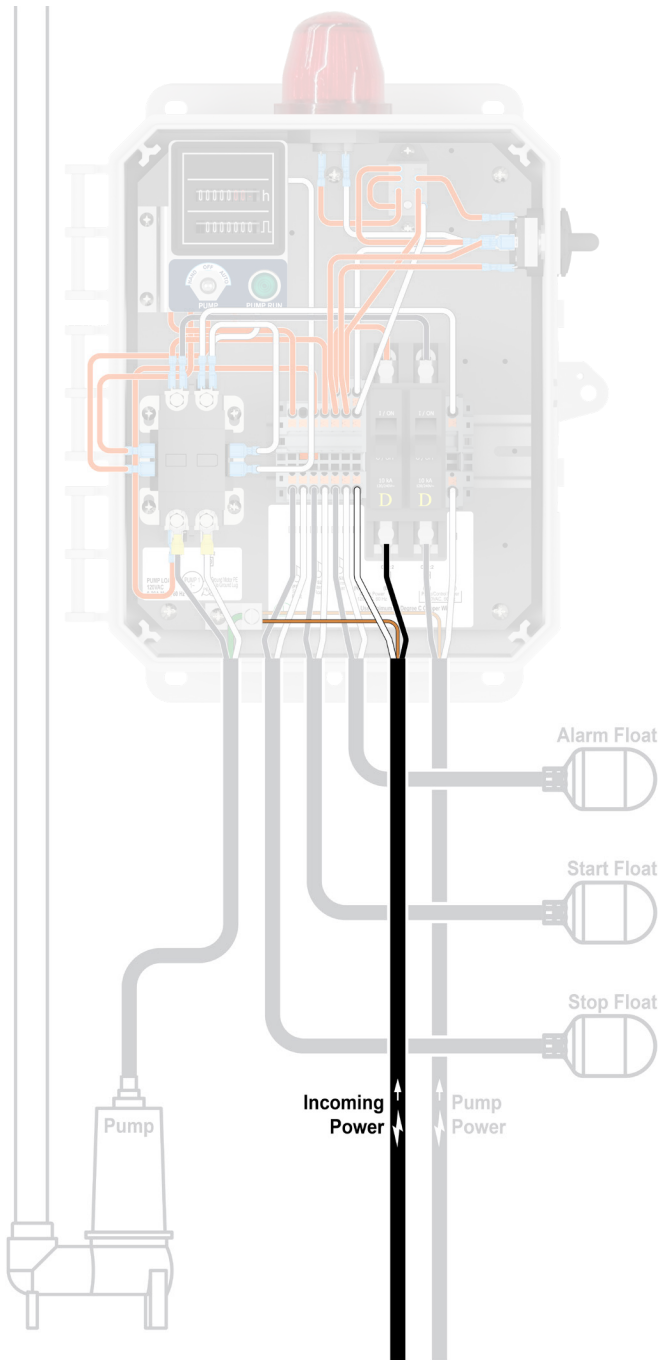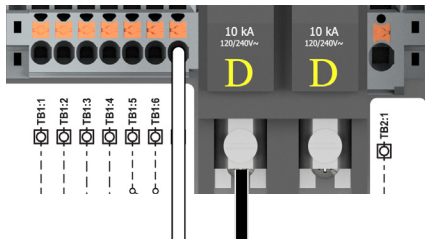

### Single Wide Angle Control Switch

