



## Assembling a 10966/10967 Wall Mounted Tire Inflator



Step 1. Begin with unit powered off.




Step 2. Remove 1/4" outlet plug.



Step 3. Apply teflon tape to both ends of 1.8 m 1/2 outlet hose.



Step 3. Connect 1/2" outlet hose assembly directly to inflator air outlet.

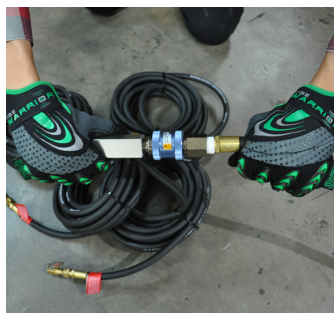

Step 4. Connect the other end of outlet hose to the air pressure release valve.



Completed 4-hose manifold assembly.

## Operating Air Pressure Release Valve



← START
Air Pressure Release Valve
STOP →

Slide the release valve open towards outlet hose to begin inflation. Once the required pre-set pressure has been achieved, slide the valve sleeve to the closed position between inflation before continuing use.

Slide the pressure release valve sleeve towards manifold when the required pressure has been achieved.

**Equipment Supply Company**  
 15270 Flight Path Drive Brooksville, FL 34604  
 352-754-1117 • Fax 352-754-4508  
 www.esco.net • sales@esco.net