


- Start by selecting the appropriate socket according to pin size.
- Once you have found the correct socket, place the socket onto the leaf spring pin.
- Using air ratchet or impact tool, thread out the desired pin.
- Once completed remove socket.

PARTS BREAKDOWN

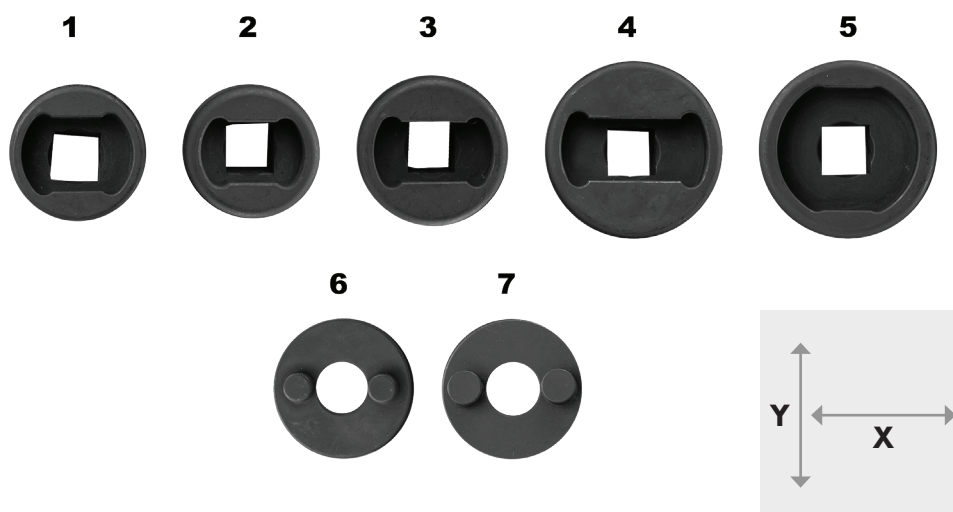

REF NO.	PART NO.	DESCRIPTION	QUANTITY
1	40312-1	X: 2/3 in. Y: 1 in.	1
2	40312-2	X: 7/8 in. Y: 1 1/4 in.	1
3	40312-3	X: 3/4 in. Y: 1 3/8 in.	1
4	40312-4	X: 2/3 in. Y: 1 1/2 in.	1
5	40312-5	X: 1 3/8 in. Y: 1 1/2 in.	1
6	40312-6	1/8 in. (circle to circle)	1
7	40312-7	1 1/16 in. (circle to circle)	1