

55" 4K Double Screen Media Player
User Manual

55" 4K Double Screen Media Player


User Manual

Model: LV2055-U

Player Display :




55" Double Screen Player Size:

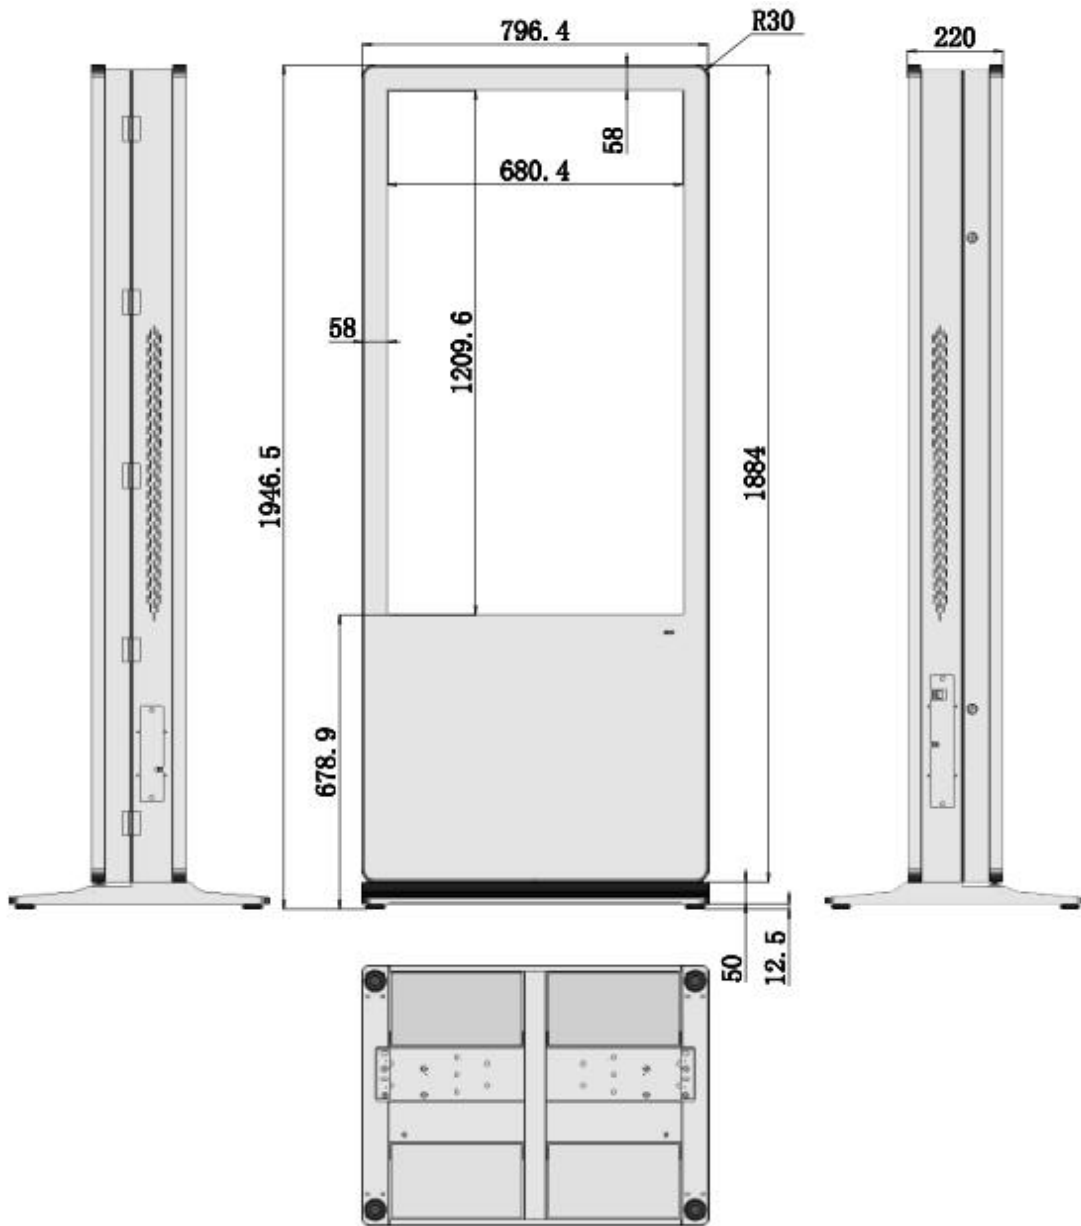







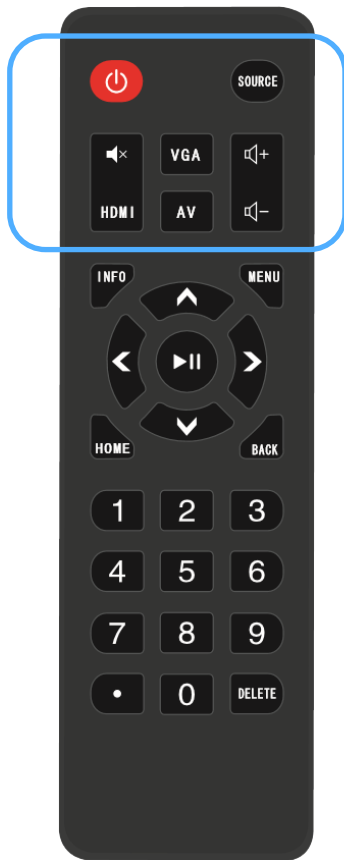

LG Screen Specification:










Panel Brand	LG
Panel Size	55inch
Display Area	680.4mm*1209.6mm
Resolution	2160*3840
Brightness	350cd/m²
Display Scale	9:16
Lifetimes	Over 50000 hours
Contrast Ratio	1200:1
Working Frequency	60Hz
Response Time	9ms
Interface Signal	LVDS
Operating Temperature	-10℃ ~ 50℃
Storage Temperature	-20℃ ~ 60℃

Remote Control Display:



Key	Function Description
	Turn On/OFF
	Switch to Signal Source Channel
	Silent Mode
	Increase Volume
	Decrease Volume
	Switch to VGA
	Switch to HDMI
	Switch to AV

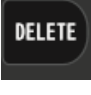

Key	Function Description
	Check the Current Channel Information
	Open the System Application Setting
	Open the Launcher Homepage
	Back to Previous Page or Launcher Homepage
	The Up Key
	The Left Key
	The Right Key
	Confirm Key or Pause/Start Key
	Delete Key

Introduction:

This manual is available to all users of advertising machines (stand-alone version) and provides a reference for beginners.

The operation manual instruction method is as follows:

- ◆ Refer to the content in the directory to select a particular topic;
- ◆ Use the index to quickly find a term to search for;
- ◆ Starting with chapter 1, we will give you a brief overview;
- ◆ Abbreviations and professional terms are listed in the vocabulary;
- ◆ For any fault or uncertainty, please contact our manufacturer.

Product Overview:

Stand-alone advertising applications replace the traditional LED or paper publicity media products in different offline shops, banks and so on. Play multimedia file display through U disk copy, supports pictures, video, background music, scrolling subtitle combination playback, and provides customized modification to the layout and style of the above media files. With smooth play, bright display, various forms of product characteristics.

Direction for Use:

3.1 Program Management

3.1.1 Program Production

3.1.1.1 Program production steps

(1) Prepare a U disk, create a new folder in the U disk, named "SProgram" Or "stand-alone player" as shown in the figure:



(2) Paste the program files into the SProgram or stand-alone Playback folder.

(3) Insert the U disk into the advertising machine, wait for the advertising machine to prompt "the file copy is successful", it will automatically start playing.

3.2.1.2 Program document says

The advertising machine supports identifying the following four types of files:

(1) Picture file

➤Supported format: jpg / jpeg / png

➤File size: the recommended file size does not exceed 8M;

➤Suggested resolution: 1080 * 1920 or 2160*3840

(2) Video file

➤Support format: AVI, MP4, MKV, FLV, WMV, RM, RMVB (the actual support format due to different hardware);

➤Recommended resolution: 1080 * 1920, 2060 * 3840

➤Recommended ratio: 9:16

(3) Music files

➤Supported format: MP3

➤Note: music file is played as background music and picture or video;
playback mode is circular

➤Note: When both video and background music exist, play background music sound is prior

(4) Subtitle file

➤Supported format: txt;

➤Encoding format:, UTF-8

➤Description: Caption content rolls around automatically

➤Note: When creating a new subtitle file, the default encoding format may not be due to different system

It is UTF-8, which needs to manually change the encoding format to UTF-8, otherwise it may occur when the subtitles play.

3.2.1.3 Notes

(1) File copy: In order to avoid file loss or damage caused by the copy process, please copy

Do not unplug the U disk or power, copy completed please unplug the U disk.

(2) File content switching rules: we suggest that you use the number in front of the file name for the same type of file. When the AD machine reads the file, it switches according to the number order. For example, the three image file names are "1 advertising content", "2 advertising content" and "3 advertising content", the advertising machine will be switched in digital order, and the files without the digital number rules will be played randomly played.

3.1.2 Change and replace programs

When you need to change the content, also put the content into the U disk "stand-alone" or

In the "sprogram" folder. Insert the advertising machine again, the last



program article. All will be deleted, after the copy, the advertisements will be played after the replacement.

3.1.3 Delete programs

There are two ways to delete the program, as follows:

Method 1: Enter the advertising machine to play the application editing status, switch to the "Advanced" page, click button [program format], click the button again [format] after the program will be all deleted. Except, note:local programs and files can't be restored after formatted.

Operation is as follow pictures:

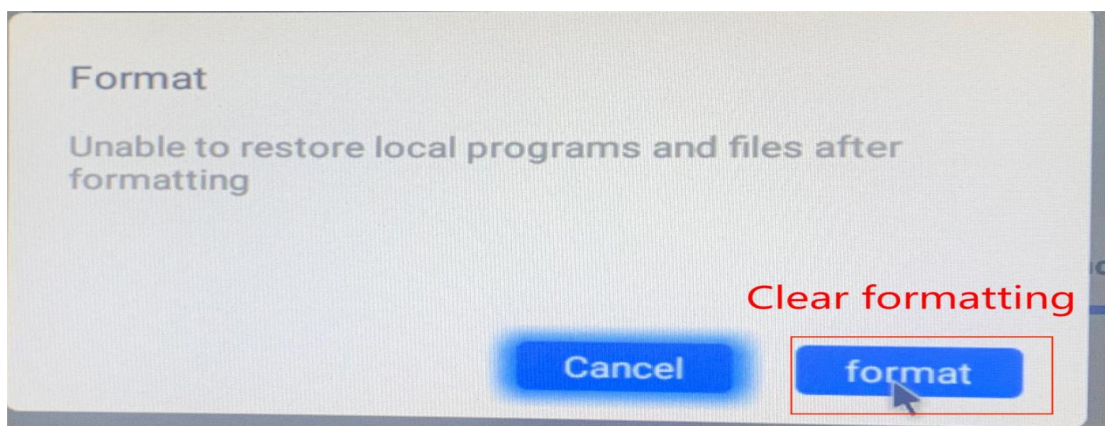
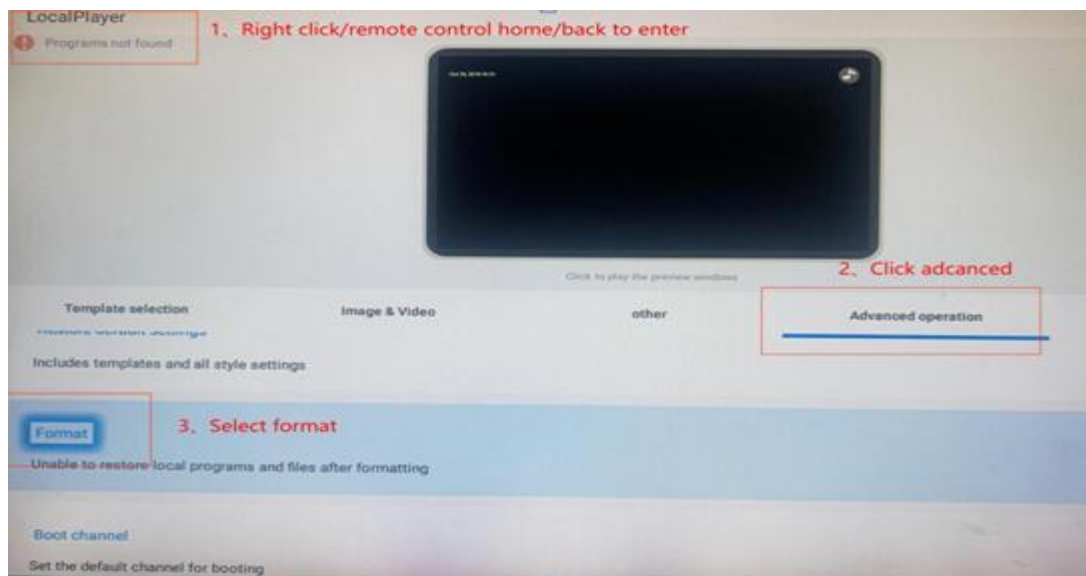


Method 2: delete the U disk "single machine play" folder content and reinsert the advertising machine, Use the copy of the empty play folder to the advertising machine to achieve the purpose of deleting local programs.

3.3 Program playback setting

When you insert the U disk to complete the copy of the content, without additional operation, the advertising machine will start play the program content. If you need to change the program broadcast mode, the small lily advertising machine built-in rich template for you to choose, pictures, videos, subtitles and other program content display style all support custom modification as follow pictures:



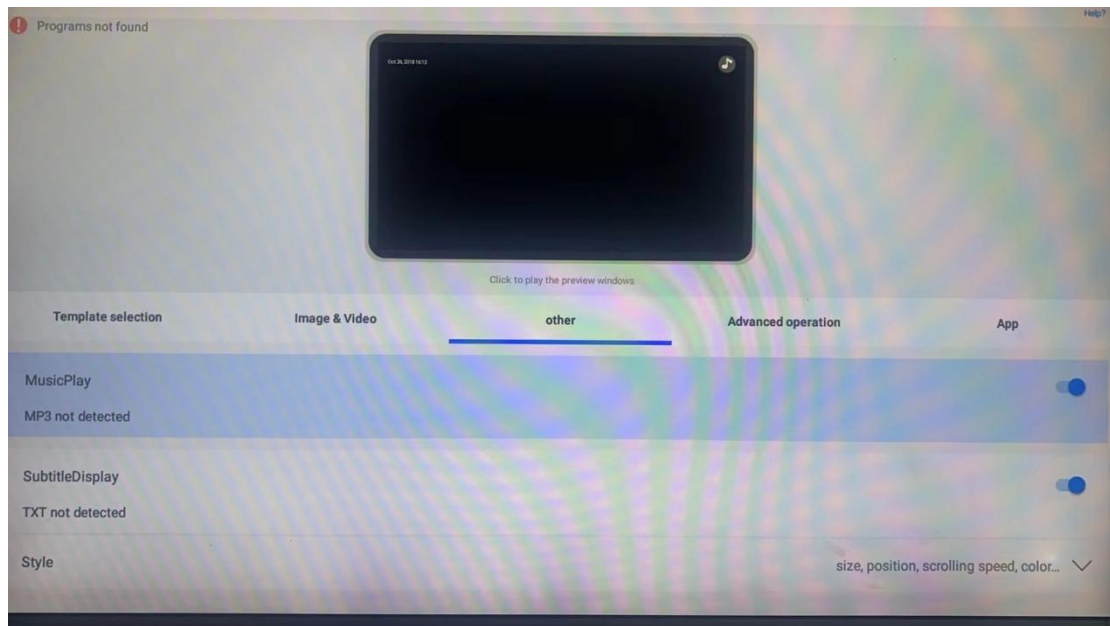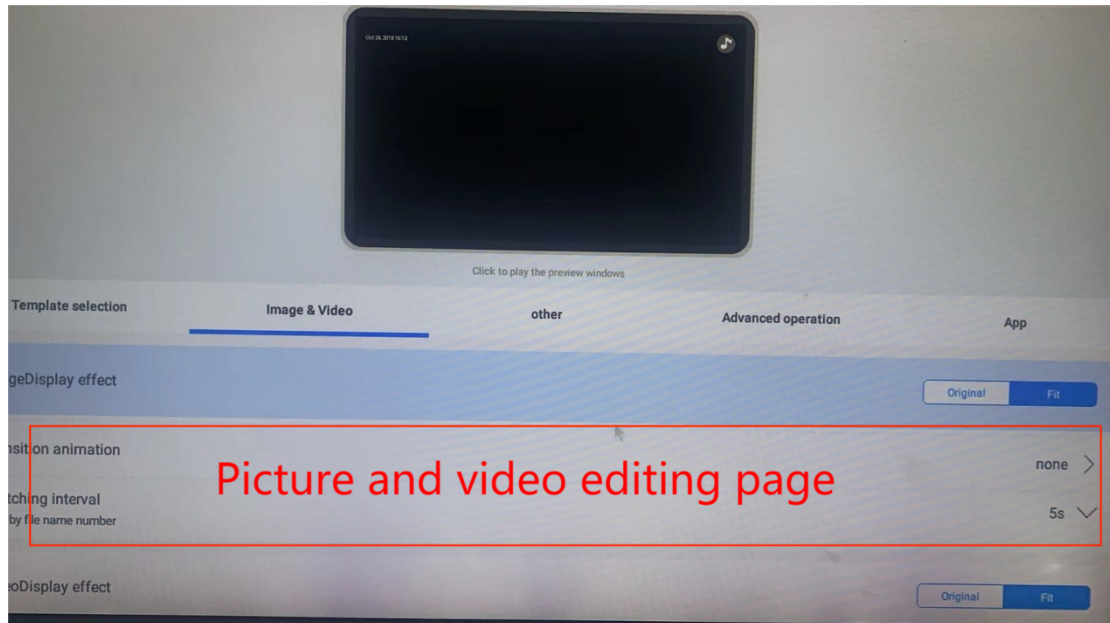


3.3.1 Template selection

The default picture or video is displayed separately. In the option page, Template selection, you can choose other types of templates to check the actual need of the remote control direction button to switch selection, find the template to switch and click the [OK] button to select the template, the template takes effect, you can preview the template effect in the

preview window, click the selected template again or move to the preview window point

Click the broadcast program to enter the full screen playback status (automatically enter the full screen playback after 30 seconds without operation).

When using the mouse, move the cursor to the corresponding template and click the mouse Left-button to select and preview. The steps are shown in:


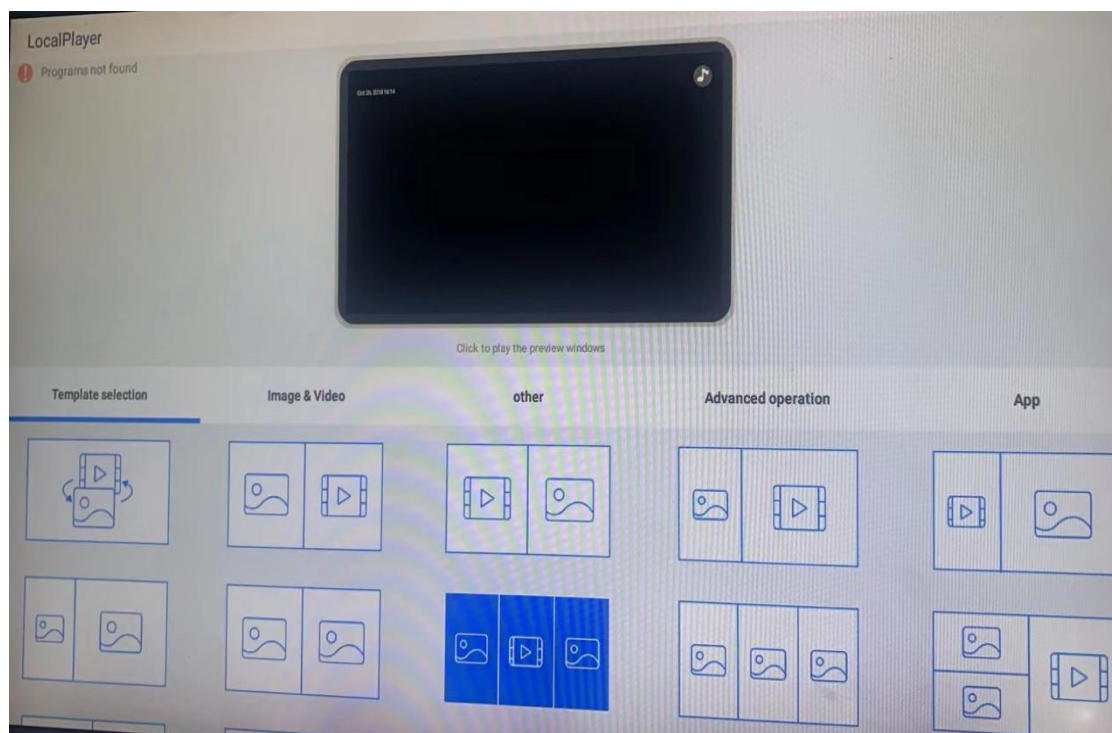


3.3.1.1 Set up pictures and video

Switch to the [Picture & Video] tab to set up as follows:

Set the item	effect
Picture display effect	Original proportion / content is full
Picture transfer animation	No / fade in / out / left / up / left / up / random
Picture switching interval	3s-90s (adjust with the remote control keys or mouse drag / click scroll bar)
Video display effect	Original proportion / content is full

The specific operation is as follow picture:

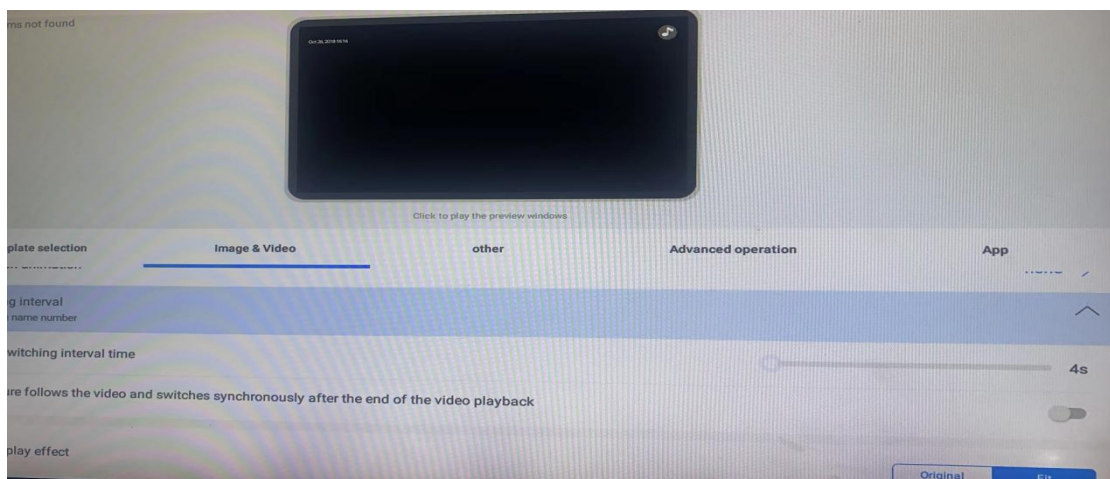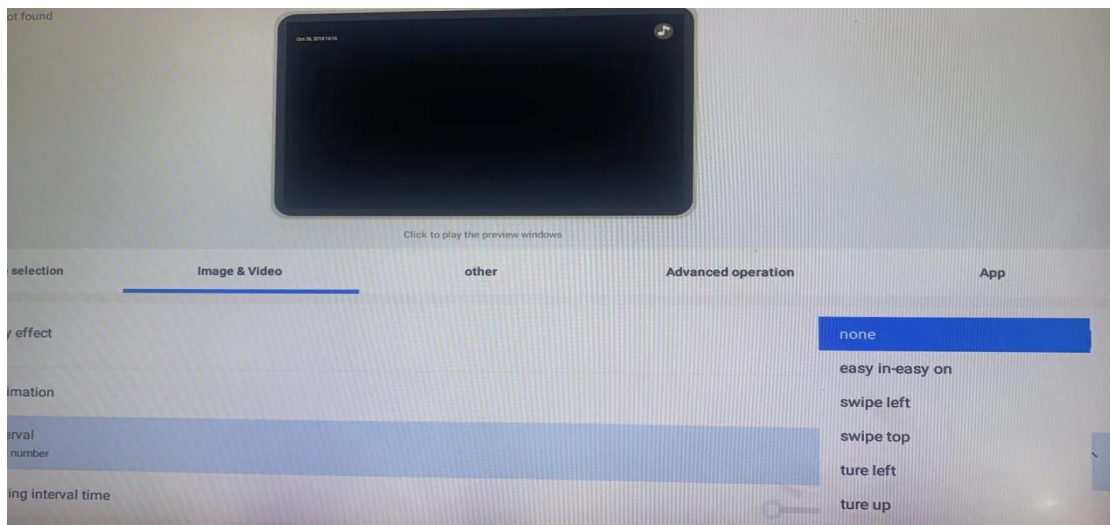


3.3.1.2 Background music, subtitles and time display effects setting

Switch to the [Other] tab to set the items as follows:

Set the project		effect
Music play		Open / Close
Subtitle display		Open / Close
Caption style	body size	Small / medium / large
	font color	White / Red / Blue / Yellow
	Background transparency	0~ 100%
	Rolling speed	0.25/0.5/1/1.25/1.5
	position	Bottom / centre / top
Time and date are shown		Open / close
The Time and Date Style	body size	Small / medium / large
	font color	White / Red / Blue / Yellow
	position	Upper left corner / upper right corner

The specific page is shown in:

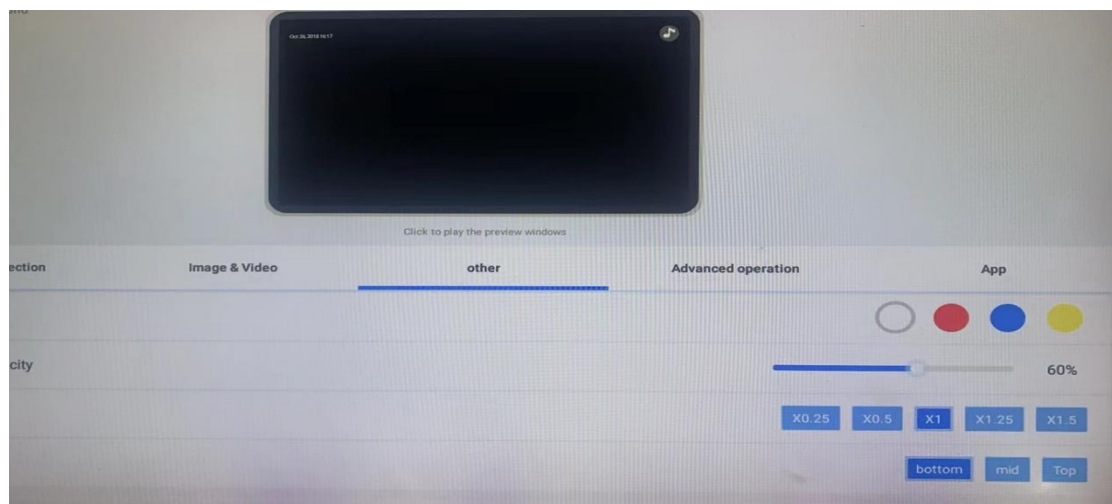


3.4 Other settings

Switch to the [Advanced] tab to set the items as follows:


Set the project		effect	explain
Brightness setting		0~ 100%	Set up the display brightness of the display screen
Play lock		Open / Close	To avoid make mistaken to set up by non-staff, you can open the play lock in the option page advanced. When it turns on, pls enter a lock password if you want to set up. It suggests that you remember your password and backup. If you forget it, you can contact our staff for help.
Program formatting		Delete the local program	
General settings	Language	English / Chinese	
	Screen rotation	0°/90°/180°/270°	It will take effect after restart
	Time and date	Set the year / month / day time / minute	
	Restore to default	Restore all of the settings to the default state	
System	Local upgrade	Upgrade the system	Before you upgrade, put the upgrade file into the U disk to root directory and insert it into the advertising machine

Assembly Guide:


Step 1: Make sure all parts are available: Player Body, Base, M8 screws, 4 Pads, L shaped wrench

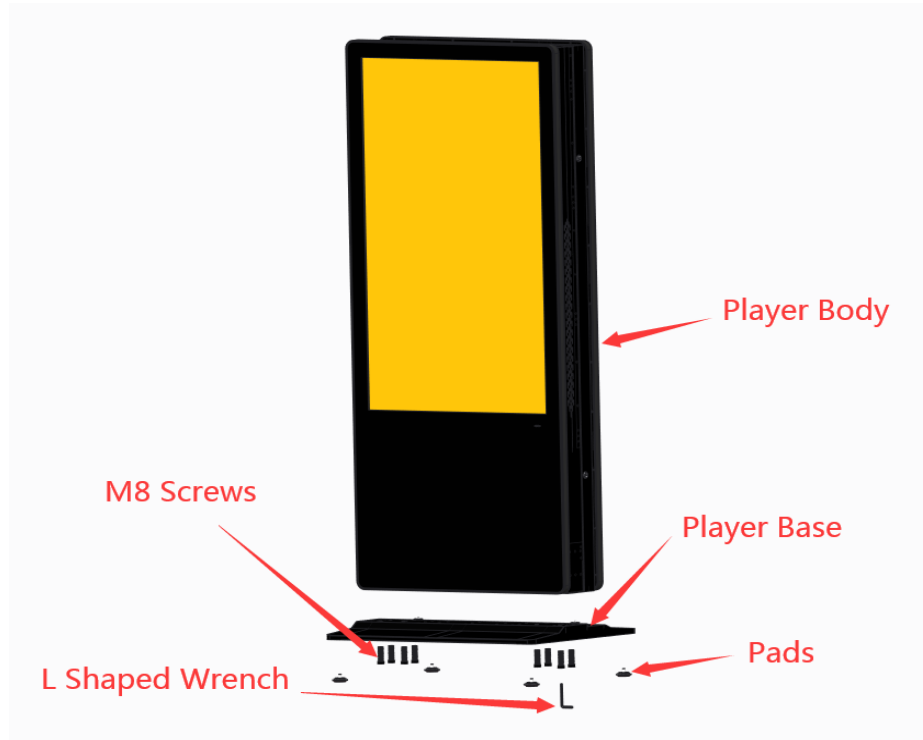

Step 2: Use the L shaped wrench to install player body and base together with the screws provided.

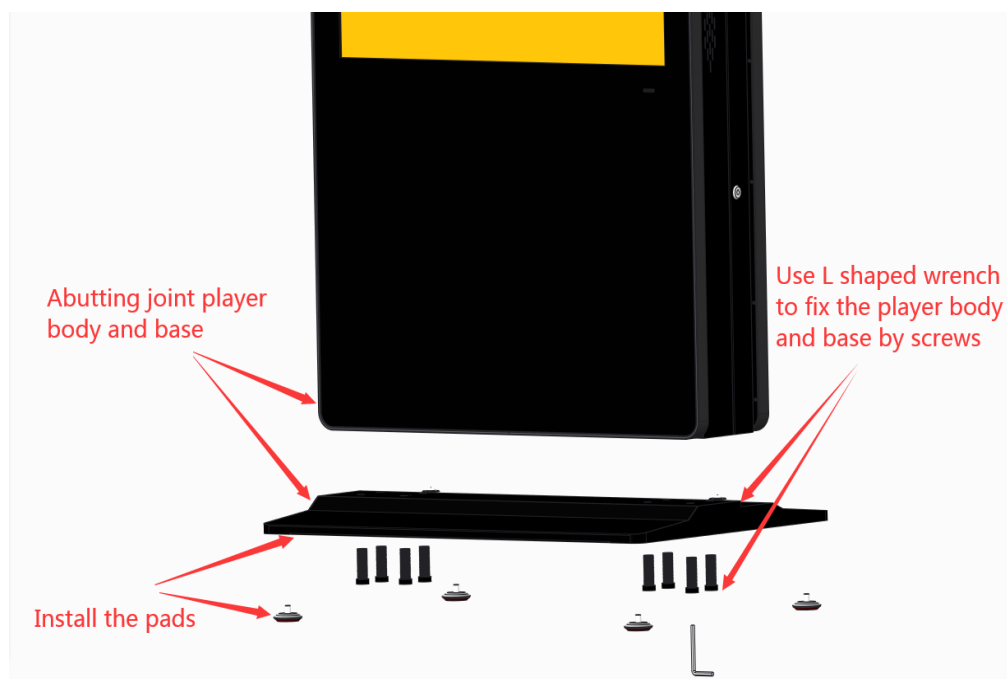

Step 3: Install the pads on all 4 corners and then connect the power cable (back side of player) and power on the player.

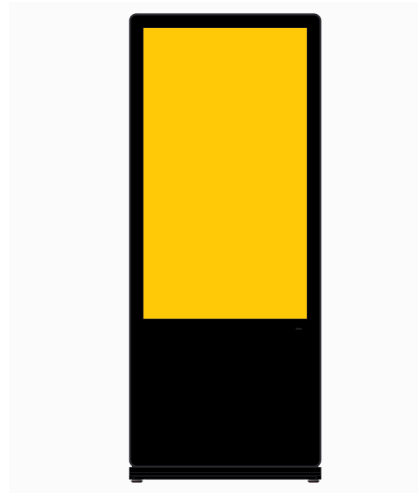

Accessories:

1.Power Cable*1
2.Remote Control*2
3. Wrench*1
4. Pad*4
5.Screws*8
6. User Manual*1

Warranty Card	
Product Model	
Date of Production	
Date of Purchase	