

RLC-811WA

Smart 4K UHD Wi-Fi 6 Security Camera with Color Night Vision

- · 4K 8MP Ultra HD
- · 2.4/5 GHz Dual-Band Wi-Fi
- · Color Night Vision
- · Person/Vehicle/Animal Detection



Specifications


| Video & Audio | |
|-----------------------|--|
| Image Sensor | 1/2.8"CMOS sensor |
| Resolution | 3840 x 2160 (8 megapixels) @15fps |
| Video Compression | H.265 |
| Zoom | 5X optical zoom |
| Field of View | Horizontal: 31°- 105°; Vertical: 17°-55° |
| Infrared Night Vision | Up to 30 meters (100ft); LED: 4pcs/3w/ 850nm (Auto-switching with IR-cut filter) |
| Color Night Vision | Spotlight: 5pcs/4w/6500k |
| Audio | Two-way audio |
| Detection & Alerts | |
| Smart Alarm | Motion detection; person detection; vehicle detection; animal detection |
| Recording | Motion-triggered recording (default); scheduled recording, 24/7 recording |
| Power | |

| DC Power | DC 12.0Vऄ1A, <12W | |
|---------------------------|--|--|
| Wi-Fi | | |
| WiFi Standard | IEEE 802.11 a/ac/b/g/n | |
| Operating Frequency | 2.4GHz/5GHz | |
| WiFi Security | WPA/WPA2 | |
| Software Features | | |
| System | Reset button | |
| OS Supported | PC: Windows, Mac OS; Smartphone: iOS, Android | |
| Protocols & Standards | HTTPS, SSL, TCP/IP, UDP, IPv4, UPnP, RTSP, RTMP, ONVIF, SMTP, NTP, DHCP, DNS, DDNS, FTP, P2P | |
| Maximal User Access | Max. 20 users (1 admin & 19 user); max. 12 simultaneous streams (2 main & 10 sub streams) | |
| Works with | Google Assistant | |
| Storage | | |
| Local Storage | microSD card slot (Max. 256GB) | |
| Working Environment | | |
| Operating Temperature | -10°C~+55°C (14°F~131°F) | |
| Operating Humidity | 10% ~ 90% | |
| Weatherproof | IP67 | |
| Size & Weight | | |
| Size | 80 x 72 x 238mm | |
| Weight (Battery included) | 863g | |
| Warranty | | |
| Limited Warranty | 2-year limited warranty. For support, visit https://support.reolink.com/hc/en-us/. | |

Gallery & Specs



- 1. Antenna
- 2. Aluminum Housing
- 3. Bracket
- 4. 4 Infrared LEDs
- 5. High Resolution Lens
- 6. 5 Spotlights

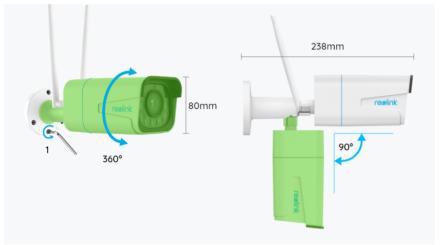

1. Loosen the screw (counterclockwise) with the wrench and adjust the camera in any direction. 2. After adjustment, tighten the screw to fix the camera.



1 microSD Card Slot



- 1. Power
- 2. Reset Button
- 3. Network

www.reolink.com