VIKING Electronics, Inc. QUICK START GUIDE

40TB-IP

September 17, 2019

SIP Multicast Talk-Back Speaker

A See Product Manual for complete installation and programming instructions.

1.0 Out-of-Box

1.1 Verify that you have received all of the parts listed



40TB-IP Speaker _{Qty:} 1



8-position terminal block Qty: 1

1.2 Download the product manual

Scan the QR code to open and download the product manual

- OR -

- 1. Go to **www.vikingelectronics.com** and enter **40TB-IP** in the search box
- 2. Click **40TB-IP** in the search results
- 3. Click **Product Manual** to open and download the PDF

1.3 Download and install the programming software

- 1. Go to www.vikingelectronics.com and enter 40TB-IP in the search box
- 2. Click 40TB-IP in the search results
- 3. Scroll down the page to Downloads, click IP Programming Software
- 4. Install the programming software by saving or opening the file and then clicking on **setup Viking IP Programming.exe**
- 5. Follow the prompts on your screen to complete software installation

2.0 Power Source

Select **PoE Switch** or **PoE Injector** that meets the following requirements:

- 1. IEEE 802.3af / 802.3at / 802.3bt compliant
- 2. Capable of providing at least 13 Watts (class 0 or class 3)


Note: CAT5e (or higher) cable recommended

3.0 Network Port Settings

- Make sure the port is not in trunk mode
- Make sure port is capable of 100mbps full duplex
- Disable Spanning Tree Protocol (STP) or enable Portfast



4.0 Features Overview

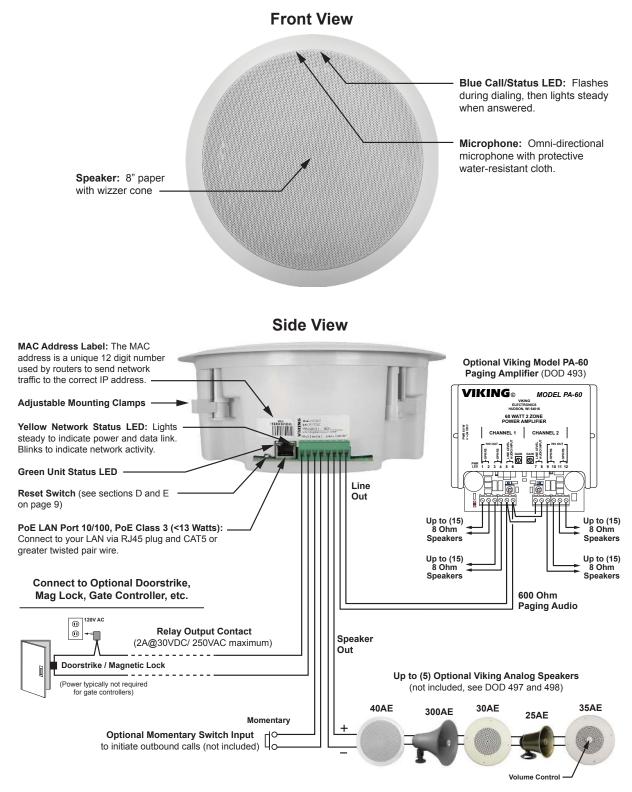

See the Product Manual for complete installation and programming instructions. Questions? Call Viking Product Support: 715-386-8666

Due to the dynamic nature of the product design, the information contained in this document is subject to change without notice. Viking Electronics, and its affiliates and/or subsidiaries assume no responsibility for errors and omissions contained in this information. Revisions of this document or new editions of it may be issued to incorporate such changes.