

General Warranty

We warrant that the product will be free from defects in materials and workmanship for a period of 3 years from the date of purchase of the product by the original purchaser from our company. The warranty period for accessories is 12 months. This warranty only applies to the original purchaser and is not transferable to a third party.

If the product proves defective during the warranty period, we will either repair the defective product without charge for parts and labour, or will provide a replacement in exchange for the defective product. Parts, modules and replacement products used by our company for warranty work may be new or reconditioned like new. All replaced parts, modules and products become the property of our company.

In order to obtain service under this warranty, the customer must notify our company of the defect before the expiration of the warranty period. Customer shall be responsible for packaging and shipping the defective product to the designated service centre, a copy of the customers proof of purchase is also required.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. We shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than our company representatives to install, repair or service the product; b) to repair damage resulting from improper use or connection to incompatible equipment; c) to repair any damage or malfunction caused by the use of not our supplies; or d) to service a product that has been modified or integrated with other products when the effect of such modification or integration increases the time or difficulty of servicing the product.

Please contact the nearest Sales and Service Offices for services.

Excepting the after-sales services provided in this summary or the applicable warranty statements, we will not offer any guarantee for maintenance definitely declared or hinted, including but not limited to the implied guarantee for marketability and special-purpose acceptability. We should not take any responsibilities for any indirect, special or consequent damages.

Table of Contents

| | |
|---|-----------|
| 1. General Safety Requirements | 1 |
| 2. Safety Terms and Symbols | 3 |
| 3. User Notice | 4 |
| 3.1 General Inspection | 4 |
| 3.2 Safety Precaution before Operation | 4 |
| 3.2.1 Power Supply Requirements | 4 |
| 3.2.2 Electro-static Discharge (ESD) Protection | 5 |
| 3.3 First Time to Power on | 5 |
| 3.4 Front Panel Overview | 6 |
| 3.5 Top Panel Overview | 7 |
| 3.6 Rear Panel Overview | 9 |
| 3.7 User Interface Overview | 9 |
| 3.8 Function Keys | 13 |
| 3.8.1 Function Softkeys | 13 |
| 3.8.2 Function Hardkeys..... | 14 |
| 3.9 Parameter Input | 16 |
| 3.9.1 Numeric keypad..... | 16 |
| 3.9.2 Rotary knob | 17 |
| 3.9.3 Arrow keys..... | 17 |
| 3.10 Build-in Help | 18 |
| 3.11 Touchscreen Controls | 18 |
| 3.12 Basic Measurement | 22 |
| 4. Troubleshooting | 26 |
| 5. Appendix | 27 |
| Appendix A: Enclosure | 27 |
| Appendix B: General Care and Cleaning | 28 |
| Appendix C: USB Disk Requirements | 28 |
| Appendix D: PC Software Requirements | 28 |

1. General Safety Requirements

Before use, please read the following safety precautions to avoid any possible bodily injury and to prevent this product or any other connected products from damage. To avoid any contingent danger, ensure this product is only used within the ranges specified.

- **Use Proper Power Cord.** Use only the power cord supplied with the product and certified to use in your country.
- **Power Grounded.** The main plug should be inserted in a power socket outlet only if provided with a protective earth contact.
- **Check all Terminal Ratings.** To avoid fire or shock hazard, check all ratings and markings on this product. Refer to the user manual for more information about ratings before connecting to the instrument.
- **Use Proper Overvoltage Protection.** Make sure that no overvoltage (such as that caused by a thunderstorm) can reach the product, or else the operator might expose to danger of electrical shock.
- **Do not operate without covers.** Do not operate the instrument with covers or panels removed.
- **Avoid exposed circuit.** Be careful when working on exposed circuitry to avoid risk of electric shock or other injury.
- **Do not operate if any damage.** If you suspect damage to the instrument, have it inspected by qualified service personnel before further use. Any maintenance, adjustment or replacement especially to circuits or accessories must be performed by qualified service personnel.
- **Use your instrument in a well-ventilated area.** Make sure the instrument installed with proper ventilation.
- **Do not operate in damp conditions.** In order to avoid short circuiting to the interior of the device or electric shock, please do not operate in a humid environment.
- **Do not operate in an explosive atmosphere.** In order to avoid damages to the device or personal injuries, it is

1. General Safety Requirements

important to operate the device away from an explosive atmosphere.

- **Keep product surfaces clean and dry.** To avoid the influence of dust or moisture in air, please keep the surface of device clean and dry.
- **Electrostatic Prevention.** Operate the instrument in an electrostatic discharge protective environment to avoid damage induced by static discharges. Always ground both the internal and external conductors of cables to release static before making connections.
- **Protect the Input Terminals of Instrument.** Do not bend or hit the input terminals and the connected devices, (such as filter, attenuator, etc.) as such stress may cause damages to devices and the instrument. Do not mix the use of 50Ω and 75Ω connectors and/or cables.
- **Do Not Overload the Input.** To avoid damaging the instrument, the signals at input terminal must be less than 50V DC voltage components and 30 dBm (1 W) AC (RF) components.
- **Appropriate Use of Power Meter.** If you are not sure of the characteristics of signal under measure, follow these recommendations to ensure safe operations: if a RF power meter is available, use it to measure the power level of this signal first; or add a rated external attenuator between signal cable and input terminal of the instrument. Maximum attenuation, reference level and maximum span frequency should be selected, to make the signals displayed within the screen.
- **Know About the Specification Conditions of the Instrument.** For maximum performance of the instrument, use the analyzer under specified conditions.
- **Handling Safety.** Please handle with care during transportation to avoid damages to buttons, knob, interfaces and other parts on the panels.

2. Safety Terms and Symbols

Safety Terms

Terms in this manual (The following terms may appear in this manual):



WARNING

Warning indicates conditions or practices that could result in injury or loss of life.



CAUTION

Caution indicates the conditions or practices that could result in damage to this product or other property.

Terms on the product (The following terms may appear on this product):

DANGER Indicates an immediate hazard or injury possibility.

WARNING Indicates a possible hazard or injury.

CAUTION Indicates potential damage to the instrument or other property.

Symbols on the product (The following symbols may appear on the product):



Refer to Manual



Conforms to European Union directives



This product complies with the WEEE Directive (2002/96/EC) marking equipment. The affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.

3. User Notice

This chapter states the matters need to attention before first power on, and how to power on at first time, introduces spectrum analyzer's front/top panel and user interface, explains how to use the instrument with a measurement example demonstration.

3.1 General Inspection

When you receive your new instrument, it is recommended that you check the instrument following these steps:

1. Check for transportation damage.

If it is found that the packaging carton or the foamed plastic protection cushion has suffered serious damage, do not throw it away until the complete device and its accessories have been electrically and mechanically checked.

2. Check the Accessories

The supplied accessories are described in the "*Appendix A: Enclosure*" of this Manual. Please ensure that all the listed accessories are present and undamaged, if any problems are found please contact your distributor or our local office.

3. Check the Complete Instrument

If there is any physical damage, operational fault, or performance issue please contact your distributor or our local office. If there is any damage to the instrument please ensure you keep the original packaging. Ideally you should always keep the original packaging if the instrument must be returned for repair.

3.2 Safety Precaution before Operation

3.2.1 Power Supply Requirements

The analyzer allows the use of either an internal lithium battery pack, or AC-DC adapter shipped with the analyzer for its power supply.

The lithium battery is 7.4V, 9100 mAh.

The table below lists the requirement of the AC-DC adapter.

3. User Notice

Table 3-1 AC-DC adapter requirement

| AC-DC adapter parameter | Compatible range |
|-------------------------|---------------------------|
| Input Voltage | 100 V - 240 VAC, 50/60 Hz |
| Output Voltage | 12 - 15 VDC |
| Max. Power | 45 W |

3.2.2 Electro-static Discharge (ESD) Protection

ESD is an issue often ignored by users. Damage from ESD on the instrument is unlikely to occur immediately but will significantly reduce the reliability of it. Therefore, ESD precautions should be implemented in the work environment, and applied daily.

Generally, there are two steps to manage ESD protection:

- 1) Conductive table mat to connect hands via wrist bands
- 2) Conductive ground mat to connect feet via ankle straps

Implement both protection methods will provide a good level of anti-static protection. If used alone, the protection will not be as reliable. To ensure user's safety, anti-static components should offer at least 1M Ω isolation resistance.



WARNING

The above ESD protections measures cannot be used when working with over 500V!

Make good use of anti-static technology to protect components from damage:

- 1) Quickly ground the internal and external conductor of the coaxial cable before it is connected to the spectrum analyzer.
- 2) Staff must wear anti-static gloves before touching the connector cord or doing any assemble work.
- 3) Assure all the instruments are grounded properly to avoid static storage.

3.3 First Time to Power on

Note: Keep the air vents always clear of obstructions for proper ventilation and cooling of the instrument.


3. User Notice



CAUTION

Use only the original AC-DC adapter or originally supplied battery for the power source.

The maximum RF input level of an average continuous power is 30 dBm (or 50 VDC signal input). Avoid connecting a signal into the analyzer that exceeds the maximum level.

- 1) Press the power switch  on the front panel.
- 2) Self-initialization takes about 30 seconds, after the boot screen the spectrum analyzer will default to the scanning curve.
- 3) After power on, let the spectrum analyzer warm up for 30 minutes for stabilization to obtain the most accurate results.

3.4 Front Panel Overview

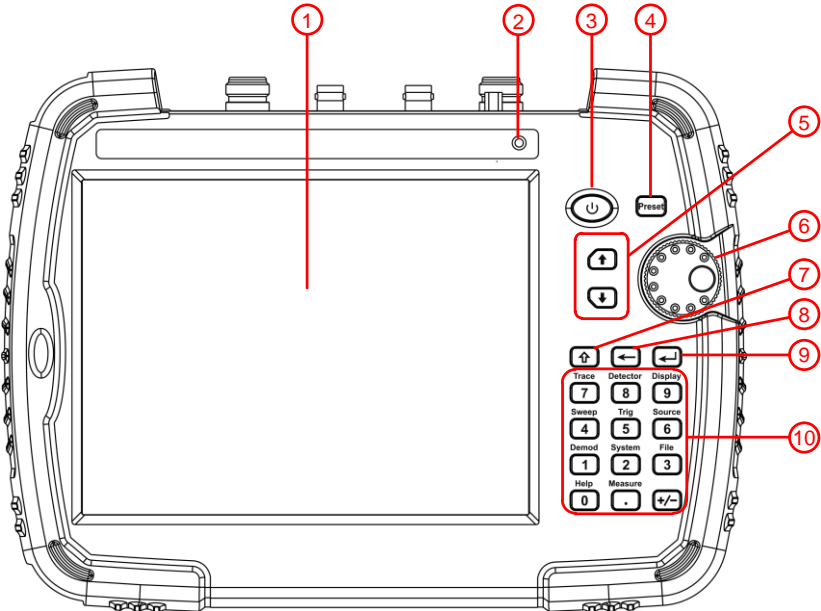


Figure 3-1 Front panel

3.User Notice

| NO. | Description |
|-----|--|
| ① | LCD touchscreen. |
| ② | Light Sensor: Adjusts the screen backlight according to the environmental light. This state can be specified in 【Display】 → [ScreenSetting>] → [Brightness <u>Auto</u>]. |
| ③ | Power key: Long push to turn on the analyzer, push to turn on/off the LCD display, long push to turn off the analyzer. |
| ④ | Preset key: Resets the analyzer to a known state. This state can be specified in 【System】 → [PowerOn/Presets] → [Presets]. |
| ⑤ | Arrow keys. |
| ⑥ | Rotary knob. |
| ⑦ | Shift key: Press the Shift key to activate it, the light is on. When the Shift key is active, pressing a number key will execute the upper function. Long press the Shift key to activate it persistently. To switch to the brief active status, short press the Shift key. |
| ⑧ | Backspace key: Deletes the last character from input. |
| ⑨ | Enter key: Confirms a parameter selection or configuration. |
| ⑩ | Function / numeric keypad. |

3.5 Top Panel Overview

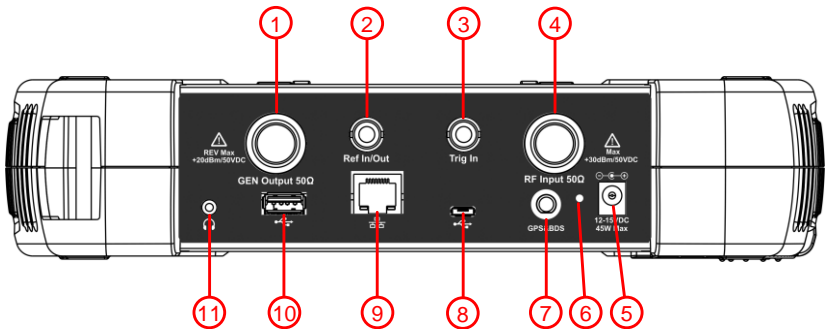



Figure 3-2 Top Panel Overview

3. User Notice

| NO. | Name | Description |
|-----|---|---|
| ① | GEN Output connector (50 Ω) | N type female connector. The output for the built-in tracking generator. |
| ② | 10MHz IN/OUT | BNC, female connector. The BNC input or output of the 10 MHz reference clock. |
| ③ | EXT Trig In connector | BNC, female connector. Connects to an external TTL signal. The TTL signal is used to trigger the analyzer's internal sweep. |
| ④ | RF Input connector (50 Ω) | N type female connector. Connector for RF input.  CAUTION Input voltage at RF input port must not be higher than 50 V DC to avoid damage to the attenuator and input mixer tracking generator. When input attenuator is higher than 10 dB, the RF port input signal must be less than +30 dBm. |
| ⑤ | External power connector | Provides input for the DC power source via an AC-DC adapter. |
| ⑥ | LED indicator | Green light when external DC power is connected. Red light when the battery is charging. Blinking light when charge suspend or battery absent. |
| ⑦ | GPS/BDS antenna connector | SMA-female type. Connects an GPS/BDS Antenna to offer the GPS location for the field testing. Active antenna supported. |
| ⑧ | USB Device interface | MICRO-USB type. Connects to a PC. This USB interface supports PictBridge printer and remote-control connection. |
| ⑨ | LAN interface | Through this interface, the analyzer can be connected to your local network for remote control. |
| ⑩ | Mouse keyboard and other USB device interface | Type A. Connects to a USB memory stick. |
| ⑪ | Headphone jack | Insert the headset to listen to the sound after signal demodulation. |

3.6 Rear Panel Overview

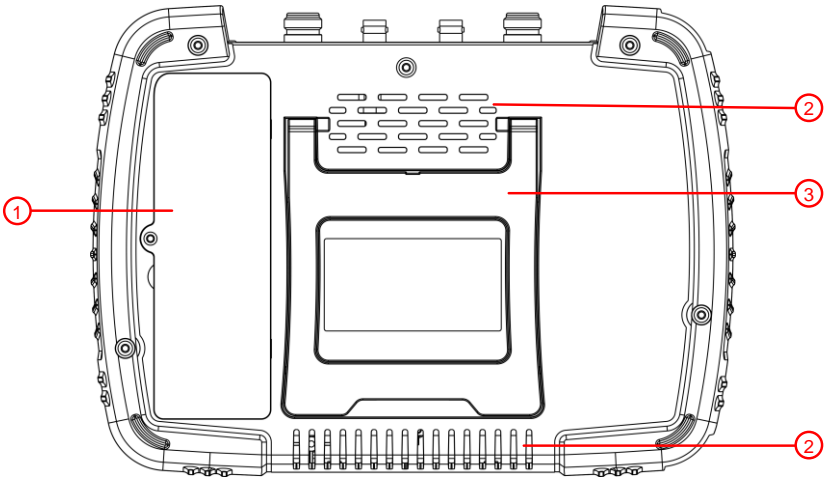


Figure 3-3 Rear Panel

| NO. | Name |
|-----|---------------------|
| ① | Battery compartment |
| ② | Air vents |
| ③ | Tilt stand |

3.7 User Interface Overview

Figure below illustrates the user interface, with touch screen menu keys, top bar, and measurement settings and results around the graph area.

3. User Notice

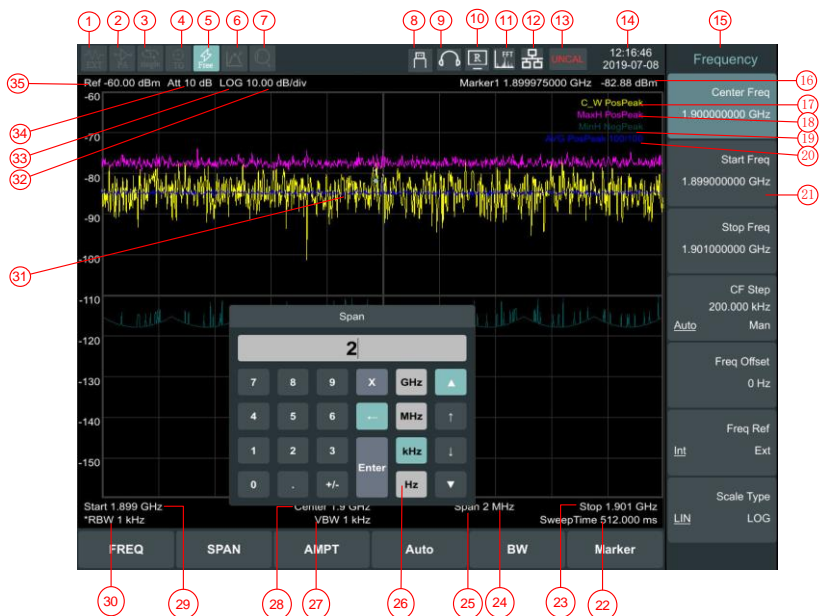


Figure 3-4 User interface overview

| NO. | Name | Description | Related Key |
|-----|--------------------|--|---|
| ① | External reference | Set the reference frequency as Int (internal) or Ext (external) input. | FREQ → [Freq Ref] |
| ② | Preamplifier | Turn on/off the preamplifier. | AMPTD → [Preamplifier] |
| ③ | Sweep status | Set the sweep status to Single or Cont (continuous). | 【 Sweep 】 → [Sweep Single] or [Sweep Cont] |
| ④ | Source | Show the source type as CW (Continuous Wave) or TG (Tracking Generator), press to turn on/off the source output. | 【 Source 】 → [Output] and [Source GEN] |

3. User Notice

| | | | |
|---|----------------------------------|--|--|
| ⑤ | Trigger type | Set the trigger type to Auto , Video , Pos (external positive edge), Neg (external negative edge). | 【Trig】 |
| ⑥ | Continuous peak search | Open/close continuous peak search. | 【 Marker 】 → [Peak>] |
| ⑦ | Automatic search | In automatic search mode. | 【Auto】 |
| ⑧ | USB sign | USB access mark. | |
| ⑨ | Audio demodulation | Open audio demodulation. | 【 Mode 】 → [Modulation>] |
| ⑩ | Remote control | In remote control mode. | |
| ⑪ | FFT mode | When the resolution bandwidth is set to less than 3kHz, it is automatically transferred to FFT mode. | |
| ⑫ | LAN interface communication sign | LAN internet interface communication sign. | |
| ⑬ | UNCAL sign | Measurements not calibrated. | |
| ⑭ | Date/Time | Display system Date/Time, click to call the modify date screen. | 【 System 】 →[Setting >] →[Date/Time >] |
| ⑮ | Menu title | The current menu belongs to the function, click to call out the shortcut menu. | |
| ⑯ | Marker value | Display current marker value and amplitude value(when zero sweep is time).When marker function open,display respond marker value. | 【Marker】 |

3. User Notice

| | | | |
|---|-------------------------------------|--|-----------------------------------|
| ⑰ | Trace 1 | Display current trace1 type is refresh,the detection is a positive peak. | |
| ⑱ | Trace 2 | Display current trace2 type is maximum hold ,the detection is a positive peak. | |
| ⑲ | Trace 3 | Display current trace3 type is minimum hold,the detection is negative peak. | |
| ⑳ | Trace 4 | Display current trace4 type is average,the detection is positive peak. | |
| ㉑ | Menu item | Current function menu item. | Menu item |
| ㉒ | Sweep time | System sweep time. | 【 Sweep 】 →[Sweep Time] |
| ㉓ | Stop frequent | Display stop frequent. | FREQ → [Stop Freq] |
| ㉔ | Mouse cursor | Displays when using an external mouse. | |
| ㉕ | Sweep | Display sweep value. | 【 Sweep 】 →[Sweep] |
| ㉖ | Touch screen digital input keyboard | Click to modify the input parameter position to call. | |
| ㉗ | Video bandwidth | Display video bandwidth. | BW → [VBW] |
| ㉘ | Center frequency | Display center frequency | FREQ → [Center Freq] |
| ㉙ | Start frequency | Display start frequency. | FREQ → [Start Freq] |
| ㉚ | Resolution bandwidth | Display resolution bandwidth. | BW →[RBW] |
| ㉛ | Frequent Marker | Display current activated marker, drag the marker to change the marker position. | Marker |

3. User Notice

| | | | |
|----|----------------------|---|------------------------------|
| ③② | Amplitude scale | Amplitude display scale setting ratio. | 【 AMPTD 】 → [Scale/div] |
| ③③ | Amplitude Scale Type | Amplitude Scale Type can choose Log (logarithmic) or Line (linear). | 【 AMPTD 】 → [Scale Type] |
| ③④ | Attenuation | Displays the RF input attenuator Settings as manual or automatic. | 【 AMPTD 】 → [Attenuation] |
| ③⑤ | Reference level | Reference level setting value. | 【 AMPTD 】 → [Ref Unit] |

Note:

- 1~7 can be switched with a touch screen or mouse click;
- 1~20 can touch the screen or click the mouse to call to modify the current trace interface;
- 22、27、30、34 If * is displayed before the display, the item is in the manually set state;
- 21~35 Click to call out the number input keyboard interface.

3.8 Function Keys

There are 6 function softkeys on the interface screen and 11 function hardkeys on the front panel.

3.8.1 Function Softkeys

There are 6 function softkeys horizontally arranged along the bottom of the interface screen. Press one of the function softkeys to show the submenu along the right side of the display.




Figure 3-5 Function Softkeys

| Softkeys | Description |
|-------------|---|
| FREQ | Activates the center-frequency function, and accesses the frequency function menu. |
| Span | Activates the frequency sweep span function, and set Full Span\Zero Span>Last Span. |

3. User Notice

| | | |
|---------------|--|--|
| AMPTD | Activates the reference level function, and accesses the amplitude softkeys, with which you set functions that affect data on the vertical axis. | |
| Auto | Searches the signal automatically within the full frequency range. | |
| BW | Activates the RBW (resolution bandwidth) function, and accesses the softkeys that control the bandwidth functions and averaging. | |
| Marker | [Marker] | Accesses the marker control keys that select the type and number of markers and turns them on and off. |
| | [MarkerFctn] | Marker measure function menu, such as N dB bandwidth measure, marker noise, frequency counting and filed. |
| | [Marker→] | Accesses the marker function softkeys that allow you to set other system parameters based on the current marker value. |
| | [Peak] | Places a marker on the highest peak, and accesses the Peak functions menu. |

3.8.2 Function Hardkeys

Pressing the  **Shift** key and then press the number key and the function represented by the number key will be displayed in the menu on the right side of the screen interface.

Shift key:

- Press the Shift key to active it, the light is on.
- When the Shift key is active, pressing a number key will execute the upper function.
- Long press the Shift key to active it persistently.
- To switch to the brief active status, short press the Shift key.

3.User Notice



Figure 3-6 Shift key and function hardkeys

| Hardkeys | Description |
|-------------------|--|
| 【Trace】 | The trace measurement and display mode can be set, and the related trace can be operated. |
| 【Detector】 | Set the detection mode. |
| 【Display】 | Set the parameters displayed on the screen. |
| 【Sweep】 | The system is set to single or continuous scanning mode. Users can also set the scanning mode and scanning time. |
| 【Trig】 | Set the triggering mode and related parameters of the sweep frequency. |
| 【Source】 | Trace source Settings. |
| 【Mode】 | Switch between scanning spectrum mode, demodulation mode and other modes. |
| 【System】 | System parameter setting and instrument calibration operation menu. |

3. User Notice

| | |
|------------------|---|
| 【File】 | Browse, delete, export, load, power on, and reset stored files. |
| 【Help】 | On the spectrum analyzer help menu, click this key once to open the system help function, and then click again to disable the help function. |
| 【Measure】 | The expanded measurement functions based on the spectrometer platform include adjacent channel power measurement, channel power measurement, occupied bandwidth measurement, etc. For specific measurement function parameter Settings, refer to the measurement Settings menu. |

3.9 Parameter Input

The active parameter value can be entered using the numeric keypad, knob, and arrow keys.

3.9.1 Numeric keypad



Enters a specific value, the submenu typically shows the selectable units. Press the desired unit or press  Enter key to complete the entry.






Figure 3-7 Numeric keypad

1. Number keys
Numbers 0-9 are available to be used.
2.  Decimal point

3. User Notice

A decimal point "." will be inserted at the cursor position when this key is pressed.

3.  Sign key
Sign key "+/-" is to toggle the sign of a parameter. When pressed the first time, a "-" will be inserted and changed into "+" following the second press.
4.  Backspace key
 - (1) During the process of parameter editing, this key will delete the characters on the left side of the cursor.
 - (2) While in the process of file name editing, pressing this key will delete characters that have been entered.
5.  Enter key
When pressed, the system will complete the input process and insert a default measurement unit for the parameter automatically.

3.9.2 Rotary knob

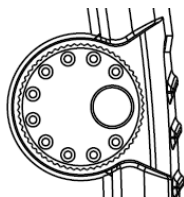


Figure 3-8 The rotary knob

The knob function:

During parameter editing, turn the knob clockwise to increase, or counterclockwise to decrease the parameter values at specified steps.

3.9.3 Arrow keys



Figure 3-9 Arrow keys


The arrow keys have following functions:

- 1) Increase or decrease the parameter value at specific steps while editing a parameter.
Note: Press **FREQ**→**[CF Step]** to set the center frequency step.
- 2) Move the cursor through the directory tree in the **【File】** function.

3.10 Build-in Help

The built-in help provides information that refers to every function key and menu key on the front panel. Users can view this help information if required.


1. How to acquire built-in help

Press the  **Shift** key, then the **【Help】** key; a prompt about how to obtain help information will be shown

2. Page up and down

If there is more than one page of information, you can read the complete information by using the directional keys.


3. Close the current help information

Press the  **Shift** key, then the **【Help】** key again to close help.

4. Acquire the softkey help

A message about how to obtain help information will be shown, press the softkeys to get the corresponding help.

5. Acquire the help information of any function hardkey

A message about how to obtain help information will be shown, press the  **Shift** key, then any function hardkey to get the corresponding help.

3.11 Touchscreen Controls

The LCD is touchable, you can control the analyzer by different gestures.

The touchscreen can be specified in **【System】** → [Setting>] → [Control>] → [TouchControl>]. You can turn on/off the touch control in this submenu.

The instruction of touchscreen controls is as below. You can also use the buttons / knobs enclosed in brackets to do the same thing.

- Click on the screen at the top of the tag can switch the corresponding state. See User Interface Overview for details on page 9.




3. User Notice

- **Select a menu softkey:** Touch the menu softkeys in the bottom, or in the right.



- **Switch menu items:** If there are options that can be switched in the menu, you can repeatedly touch the area of the menu item to switch.

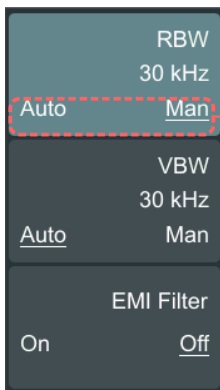

Press repeatedly to switch the options

- **Scroll the list:** If there is a scroll bar in the file system window, you can swipe up and down to scroll the list.
- **Capture the screen** (**【System】** → [Save/Recall>] → [Screen Pixmap>]): Double-tap in the display area to quickly capture a PNG image of the current screen display. If a USB device is inserted, the image will be saved to USB device, otherwise the local memory. A file name is automatically created using the current date and time stamp.

3. User Notice



- Move the active marker to the desired frequency (Marker → [Marker>] → turn the knob): When a marker is active, single-tap in the display area (at any level) to quickly move the marker to the desired frequency.




- Set the reference level (AMPTD → [Ref Level]): Swipe up or down in the display area.

3. User Notice




- **Set the center or start frequency (FREQ→ [Center Freq] or [Start Freq]):** Swipe left or right in the display area.

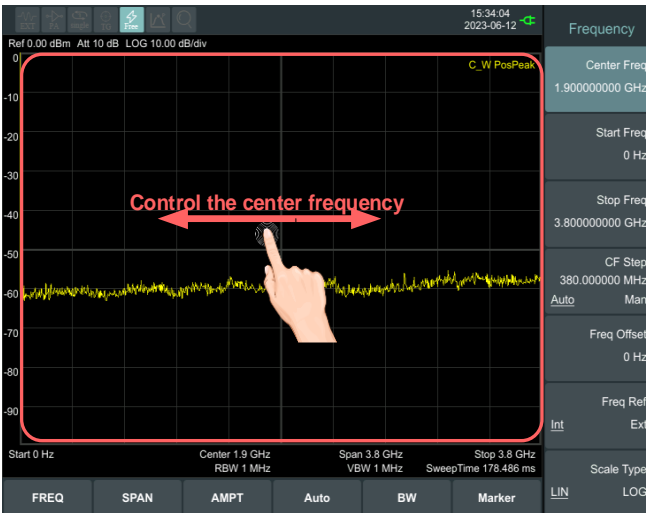


- **Set the Span (Span→[Span]):** In the display area, pinch and spread horizontally to change the span.
Set the RBW (BW→[RBW]): When **BW→[RBW]** softkey is selected, pinch and spread horizontally to change the RBW.
Set the VBW (BW→[VBW]): When **BW→[VBW]** softkey is selected, pinch and spread horizontally to change the VBW.

3. User Notice

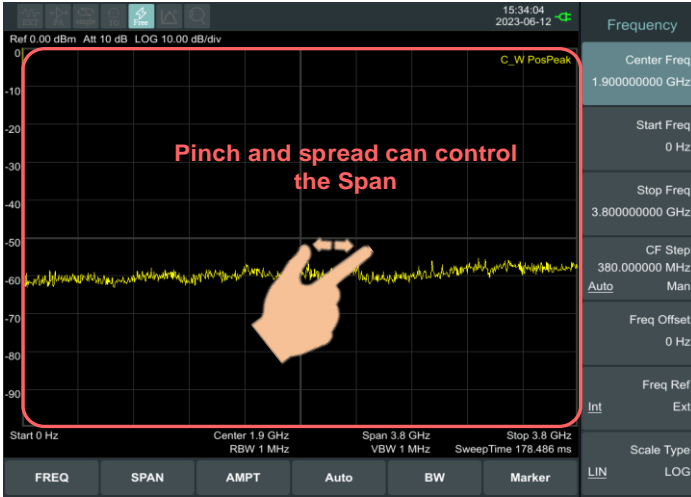

- Set the Scale/Div (AMPTD → [Scale/Div]): In the display area, pinch and spread vertically to change the Scale/Div.

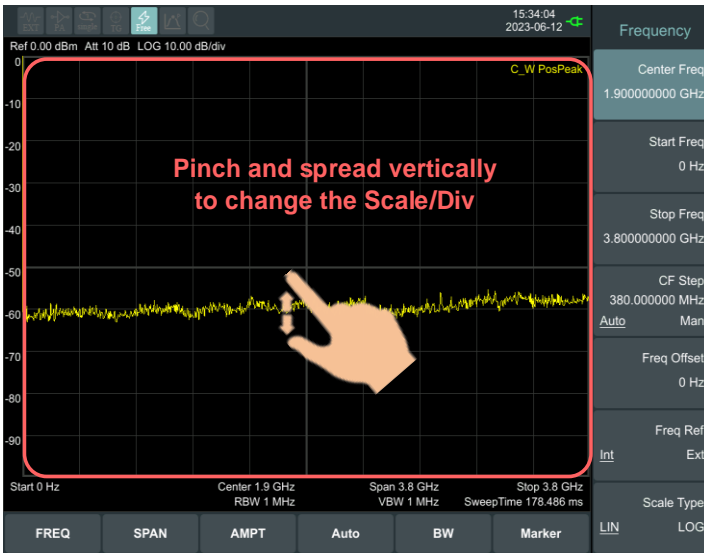

3.12 Basic Measurement

Basic measurements include, input signal frequency and amplitude display, marked by a frequency marker.

Follow these five simple steps below to implement input signal

3. User Notice

measurement.

- a) Find the signal frequency at full sweep width;
- b) Set the center frequency according to the signal frequency in step 1;
- c) Setting span and resolution bandwidth;
- d) Activate marker;
- e) Adjust amplitude parameter.

For example, to measure a 100 MHz, -10 dBm signal, you must turn on the spectrum analyzer and ensure it is warmed up for 30 minutes to ensure measurement accuracy.

1. Equipment connection

Connect the output terminal of signal generator to the **RF Input 50Ω** connector on the top of the spectrum analyzer. Set the parameters as follows:

| | |
|-----------|---------|
| Frequency | 100 MHz |
| Amplitude | -10 dBm |

2. Setting parameters

- 1) Press **【Preset】** on the front panel to restore the analyzer to its factory-defined state. The Spectrum analyzer will display the spectrum from 9kHz to the maximum span width. The signal generated will display as a vertical line at 100MHz. Refer to Figure 3-10.

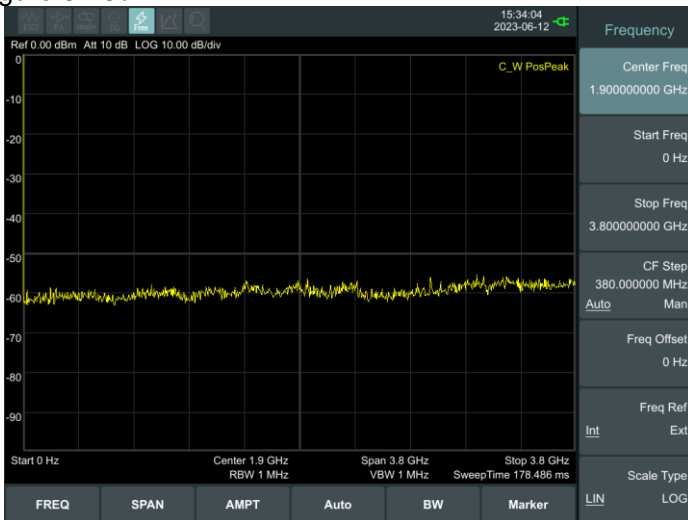


Figure 3-10 Full Span


3. User Notice


To clearly observe the signal, reduce the frequency span to 1 MHz and set the center frequency to 100MHz.

2) Setting center frequency

Press **FREQ** softkey on the bottom, select [**Center Freq**] on the right submenu. Input "**100**" and select the unit as **MHz** on the right softkeys. The number keys can be used to set the exact value, the knob and arrow keys can also be used to set the center frequency.

3) Setting frequency span

—Press [**Span**] softkey, input "**1**" and press **MHz** as its unit, or press  button reduce to 1 MHz.

—Press **BW** softkey, set [**RBW**] to **Man**, and input "**30**" and press **kHz** as its unit, or press  button reduce to 30kHz.

—Press [**Detector**] key, set the detection type to **Pos Peak**.

错误!未找到引用源。 shows the signal at a higher resolution.

Please note that resolution bandwidth, video bandwidth and frequency span are self-adapted. They adjust to certain values according to frequency span. Sweep time can be self-adapted too.

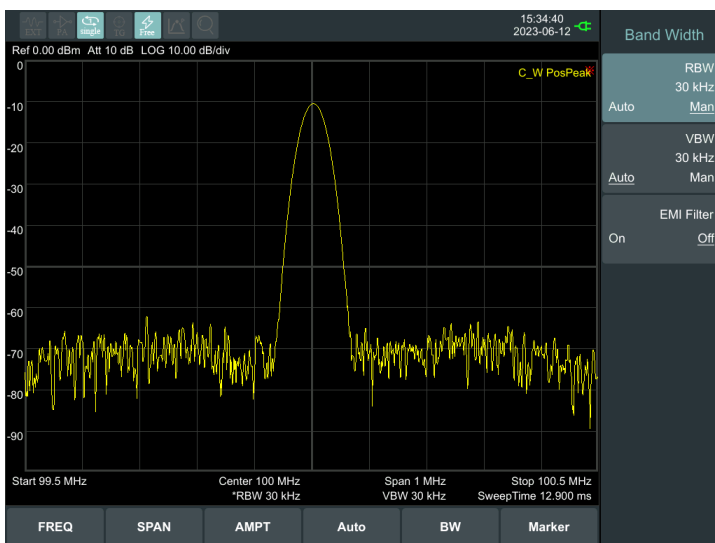


Figure 3-11 Set frequency span


4) Activate marker

—Press **Marker** softkey on the bottom, the button is located at the bottom of the screen. Then select [**Marker >**] softkey on the right screen. And press the softkey to select [Marker 1 2 3 4 5 6 7 8], select Marker 1, the marker is located at horizontal center by default, that is the signal peak point or its neighbor.

—Press **Marker** softkey on the bottom, the button is located at the bottom of the screen. Then select [**Peak >**] on the right screen. And select [**Max Search**]. Frequency and amplitude values are read by the marker and shown on the top right of the display area.

5) Setting amplitude

The reference level will be shown at the top of the display grid. To get a better dynamic range, the real signal peak point should be located at or near the top of display grid (reference level). The reference level is also the maximum value on Y axis. Here the dynamic range is increased by reducing the reference level.

Press **AMPTD** softkey on the bottom, the button is located at the bottom of the screen, and press the [**Ref Level**] softkey on the right screen. The reference level can be input at the top left of the display grid. Input "-10" using the numeric keypad and set the unit to **dBm**. Also can use step button  or knob to adjust.

The reference level is set at -10 dBm, which is the signal peak value near the top of the grid. The balance between the signal peak value and noise is dynamic range.

4. Troubleshooting

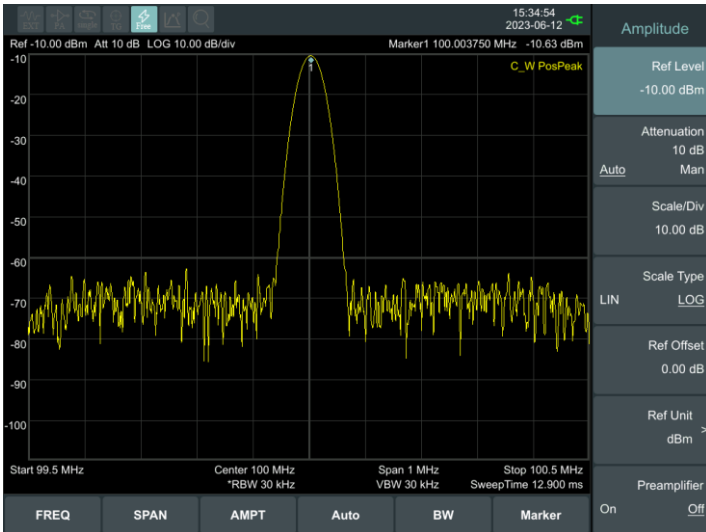


Figure 3-12 Set reference level

4. Troubleshooting

Typical issues that may occur when using your spectrum analyzer:

- Power on malfunction
- No signal display
- Wrong measurement results or poor frequency or amplitude precision.

1. Power on malfunction

Power on malfunction can include a situation where the screen is still dark (no display) after switch on.

If the screen is still dark after power on, please check:

- 1) If the power supply has been connected correctly and if the power supply voltage range is within the specification.
- 2) If the power switch has been turned on.

2. No signal display

If there is no signal display at any wave band. Please try the following: set a signal generator at 30 MHz frequency and -10 dBm power and connect it to the spectrum analyzer RF input connector. If there is still no signal display, there may be a problem with the spectrum analyzer hardware circuit. Please contact us for service.

3. Wrong measurement results or poor signal frequency precision

If the display contents shake a lot or the frequency readout exceeds the error range during measurements, check if the signal source is stable. If so, check if spectrum analyzer reference is precise. Select internal or external frequency reference according to measurement conditions: press **FREQ** softkey → [**Freq Ref** Int **Ext**]. If the frequency is still not precise, then the spectrum analyzer LO has lost its phase lock, please contact us for service.

4. Wrong measurement results or poor readout amplitude precision

If signal amplitude readout is not precise, perform a calibration. If amplitude readout is still not precise, then it may be a problem with internal circuit, please contact us for service.

5. Appendix


Appendix A: Enclosure

(The accessories subject to final delivery.)

Standard Accessories



Power Cord

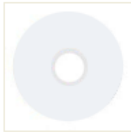

CD Rom



Quick Guide



USB Cable



AC-DC Adapter



GPS Antenna



Metal Case

Options



N-N Cable



N-SMA Cable



SMA-SMA Cable



SMA Adaptor



N-SMA Adaptor



Near Field Probe includes: Four near-field probes,
N-SMA adapter, SMA-SMA cable
(Frequency range: 30 MHz – 3 GHz)



Soft Carrying
Case

Appendix B: General Care and Cleaning

General Care

Do not store or leave the instrument where the liquid crystal display could be exposed to direct sunlight for long periods of time.

Caution: To avoid any damage to the instrument or probes, do not exposed it to any sprays, liquids, or solvents.

Cleaning

Inspect the instrument and probes as often as operating conditions require.

To clean the instrument exterior, perform the following steps:

Wipe the dust from the instrument surface with a soft cloth. Take care not to scratch the transparent LCD protection screen when cleaning.



WARNING

Before reapplying power, ensure that the instrument is completely dry, avoiding any electric shock or electrical short circuit resulting from moisture.

Appendix C: USB Disk Requirements

USB disk requirements:

Max capacity 4G, NTFS file system is not supported.

If the USB disk doesn't work properly, format your USB disk and then try again.

Appendix D: PC Software Requirements

The PC software does not support Windows XP.

2023.07 V2.0.0