Remote Control Module Instruction

1. Overall Dimensions

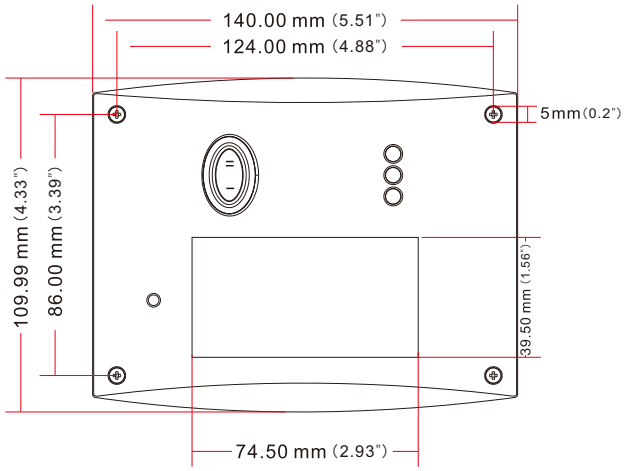

2.Function Description Drawing

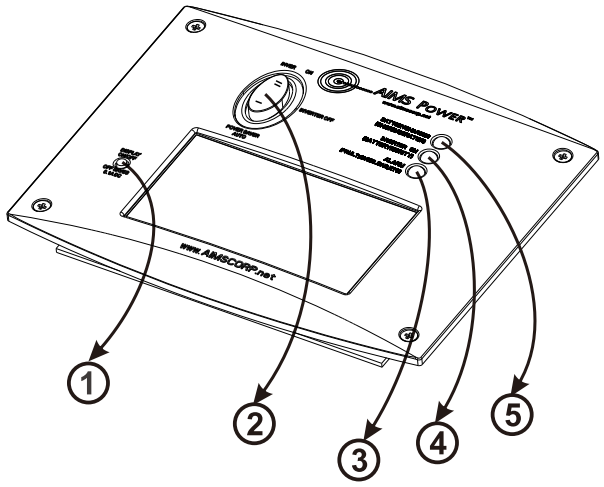

① Display ON&OFF

② Power Switch ON&OFF

"="INVERTER ON

"-"POWER SAVER AUTO

③ Alarm LED

④ Inverter LED

⑤ Battery Charger LED

3. LCD mounting hole size

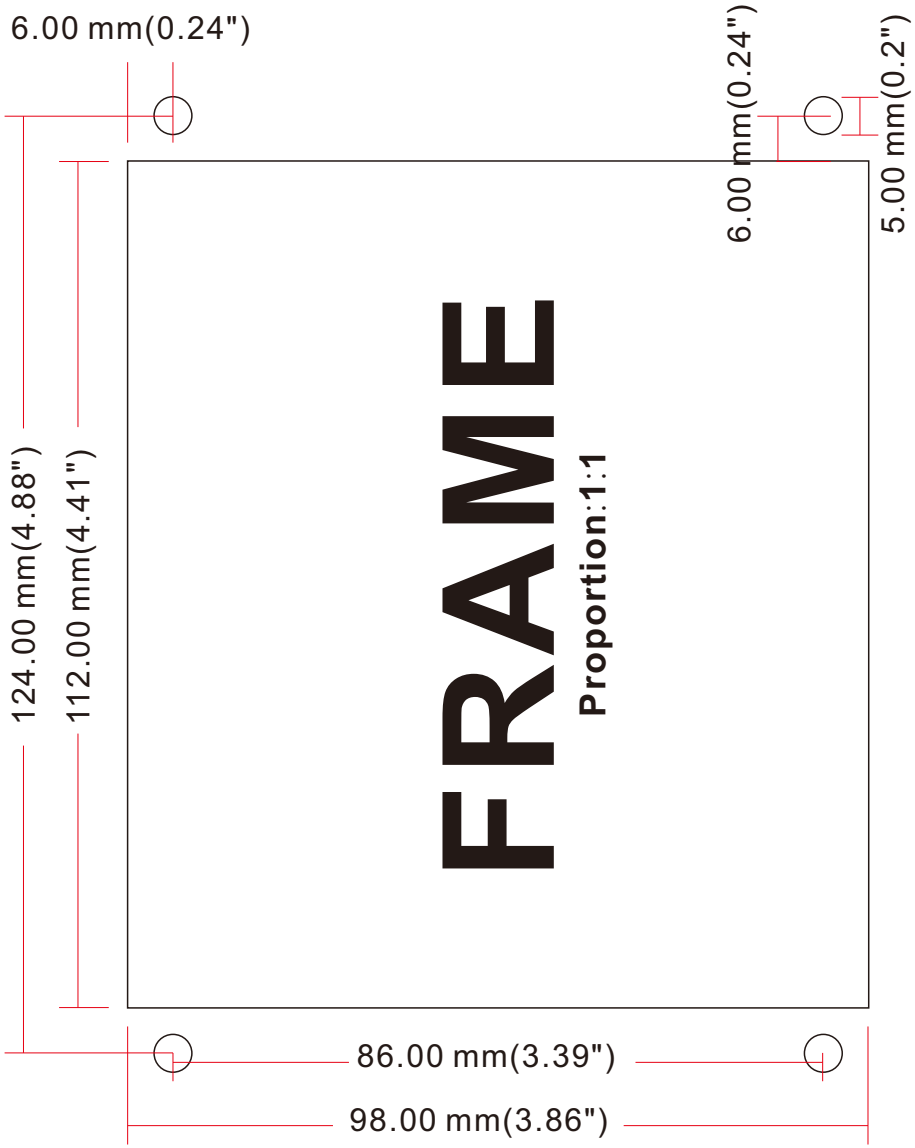

4.Connection Diagram

RJ45 connector

Front Impression Drawing

length 10m

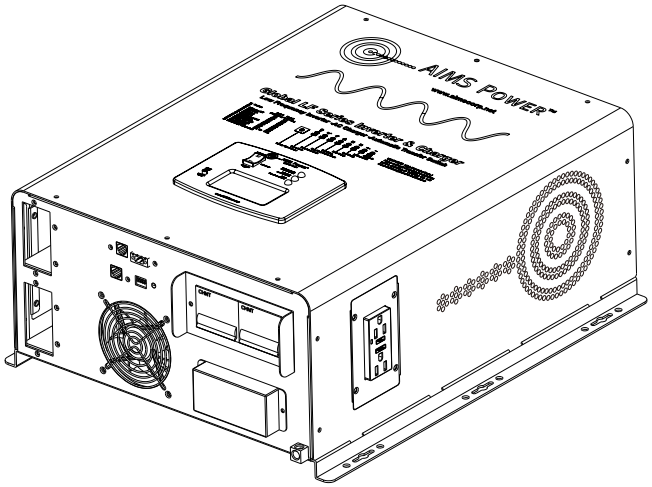

RJ45 connector

5.LCD Display

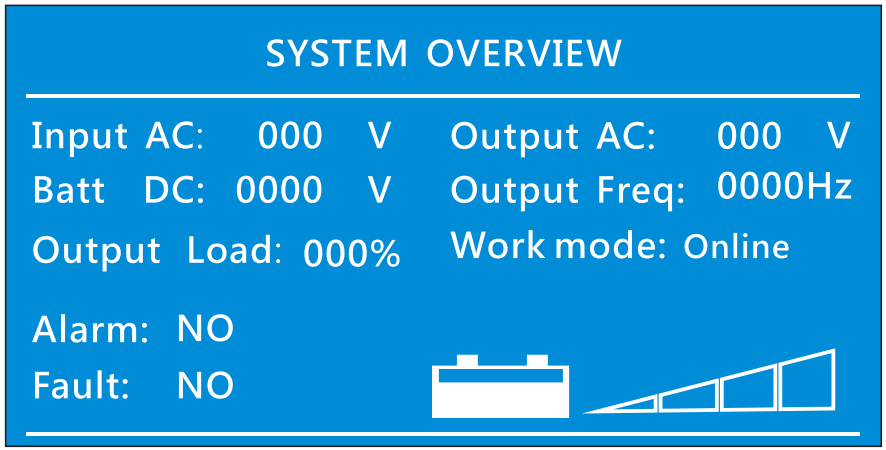

Input Ac:	Real AC Input Line Voltage
Batt Dc:	Real Battery Voltage Or Charging Voltage
Output Load:	Real AC Load Percentage
Alarm:	Yes Or No (Ref Manual)
Fault:	Yes Or No (Ref Manual)
Output Ac:	Real AC Output Voltage
Output Freq:	50Hz Or 60Hz
Work Mode:	Online Or Inverter

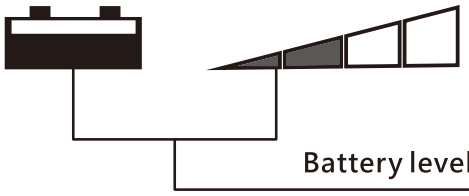

Battery level indicate