



Thank you for purchasing this kit from Intellitronix. We value our customers!

**INSTALLATION GUIDE**

**High Four Headlight Kit**


**Part Number: 437484**

**\* Always disconnect the battery before attempting any electrical work on your vehicle. \***

**KIT COMPONENTS**

- One (1) High Four headlight module
- Two (2) locking wire connectors
- Two (2) squares double sided tape

**WIRING INSTRUCTIONS**

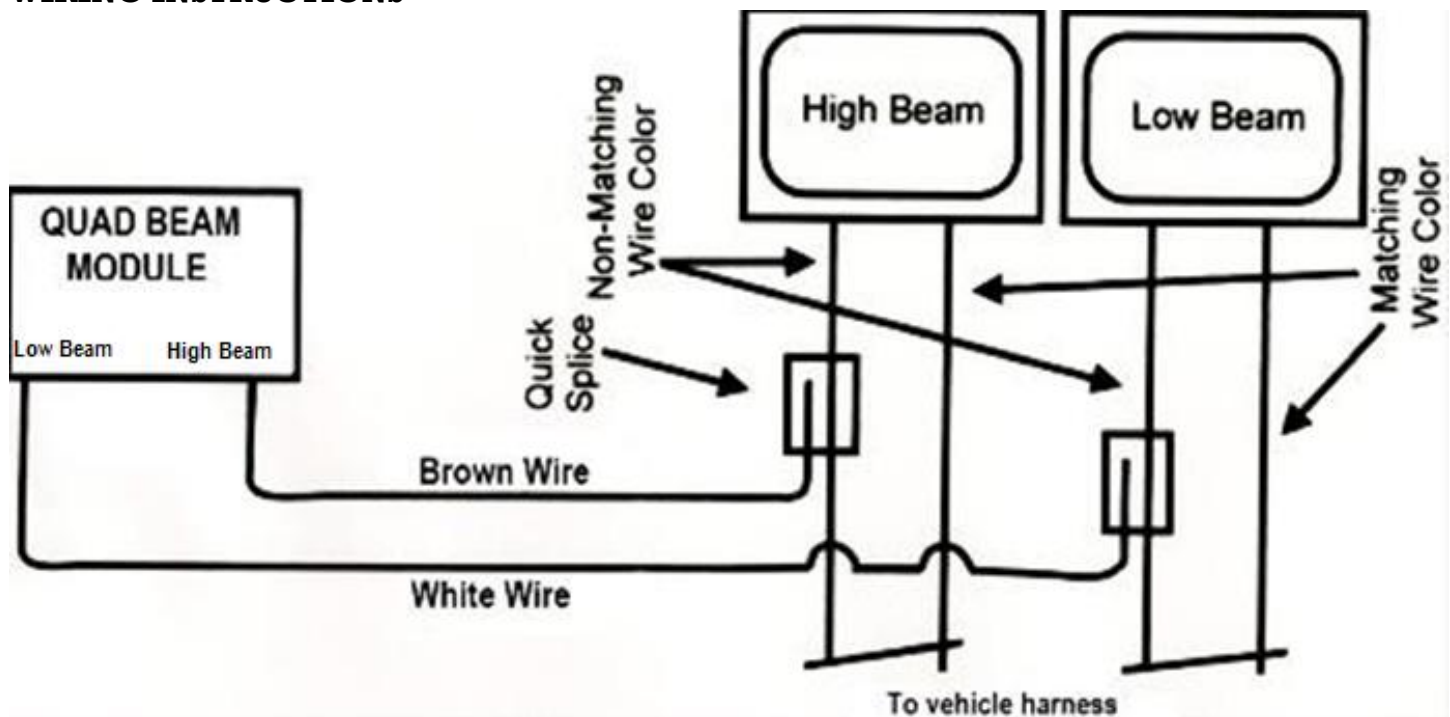

**Note: Automotive circuit connectors are the preferred method of connecting wires, although you may solder if you prefer.**

**Note: If the high beam indicator stays lit and all four (4) lights are on when in low beam mode, it may be necessary to switch the wire polarity. This depends upon the application.**

The module comes with two wires, *White* and *Brown*, for power and ground, respectively. Once installed, your headlights will work as before while in low-beam mode, but all four lights will come on in high-beam mode.

## **MODEL SPECIFIC INSTRUCTIONS**

### **- 2002 GM Trucks, 2000 - 2002 Full-Size SUVs (not Trailblazer)**

Start on the driver's side and tilt the headlight assembly forward by pulling the two (2) pins that hold the headlight assembly in place.

Connect the *White* wire to the truck's *Purple* wire.

Connect the *Brown* wire to the truck's *Light Yellow* wire.

You **do not** need to use the truck's Orange wires.

### **Trailblazer (not S-Series)**

Start on the driver's side and tilt the headlight assembly forward by pulling the two (2) pins that hold the headlight assembly in place.

2. Connect the *White* wire to the truck's *Orange* wire.

3. Connect the *Brown* wire to the truck's *Yellow* wire.

### **2003 - Present GM Trucks**

Start on the driver's side and tilt the headlight assembly forward by pulling the two (2) pins that hold the headlight assembly in place.

2. Connect the *White* wire to the truck's *Yellow* wire.

3. Connect the *Brown* wire to the truck's *Green* wire.

You **do not** need to use the truck's *Black* wires.

### **Classic Body Trucks and SUVs**

Find the wiring harness close to the driver's side fender. The harness will make a "Y" out toward both headlights.

Connect the module **before** this "Y".

3. Connect the *White* wire to the truck's *Brown* wire.

4. Connect the *Brown* wire to the truck's *Light Green* wire.

Made in America

Lifetime Guarantee



Technical Support

Monday – Friday

9am to 5 pm EST

(440) 210-7646

[support@intellitronix.com](mailto:support@intellitronix.com)



**This product carries a limited Lifetime Warranty.**

**This warranty is limited to replacement or repair of the unit at the discretion of Intellitronix.**