


OPEN FOR INSTRUCTIONS

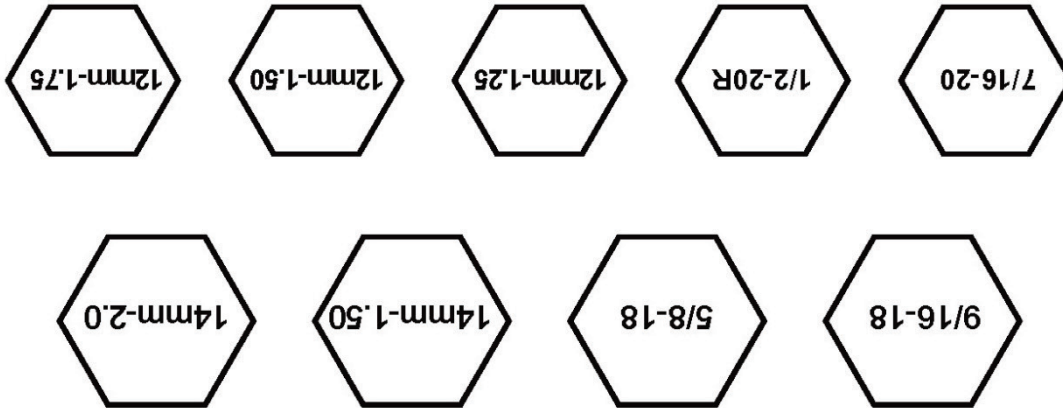

Save-A-Stud

30120

INSTRUCTIONS:

1. CHOOSE APPROPRIATE SAVE-A-STUD STUD CHASER.
2. APPLY APPROPRIATE LUBRICANT OR CUTTING OIL TO DAMAGED THREADS OF THE WHEEL STUD.
3. INSTALL SAVE-A-STUD AROUND UNDAMAGED THREADS OF THE WHEEL STUD.
4. USING SUITABLE SOCKET WRENCH OR ADJUSTABLE WRENCH, WORK THE SAVE-A-STUD DIE COUNTER-CLOCKWISE AND CLOCKWISE OVER THE DAMAGED AREA UNTIL DIE WORKS FREE OF THE DAMAGED WHEELS STUD. (ADD MORE LUBRICANT AS NEEDED)
5. CHECK CONDITION OF THREADS BY INSTALLING A NEW LUG NUT TO THE WHEEL STUD. IT MAY BE NECESSARY TO SERVICE DAMAGED THREADS MORE THAN ONCE TO OBTAIN A CLEAN THREAD PATTERN.

THE 30120 SAVE-A-STUD THREAD CHASERS ARE MANUFACTURED OF HARDENED STEEL AND TREATED FOR ANTI-RUST.