
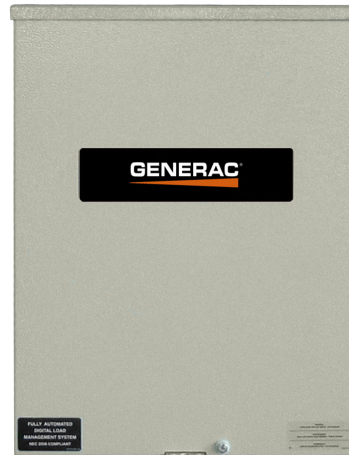


## Transfer Switches

## Service and Non-Service Rated Automatic Transfer Switches

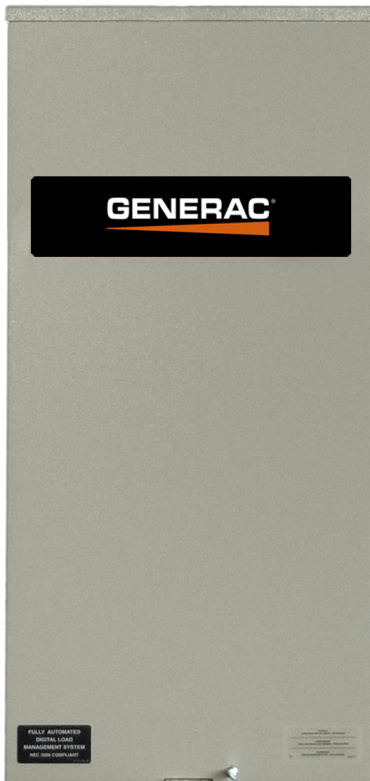

Models:

RXSC100A3

RXSW100A3

RXSW150A3

RXSC200A3

RXSW200A3



\*Built in the USA using domestic and foreign parts

## DESCRIPTION

This series of Generac Automatic Transfer Switches is designed for use with single phase generators that utilize an Evolution™ or Nexus™ Controller. The 100 and 200 Amp open transition switches are available as single phase in both service equipment rated and non-service equipment rated configurations. Service rated equipment configuration ships with a dead front and non-service rated equipment configuration ships without a dead front. The 150 Amp open transition switch is only available in a service rated equipment configuration.

## STANDARD FEATURES

Service rated (RXSW) Generac Automatic Transfer Switches are housed in an aluminum NEMA Type 3R enclosure\*, with electrostatically applied and baked powder paint. The Heavy Duty Generac Contactor is an ETL recognized device, designed for years of service. The controller at the generator handles all the timing, sensing, exercising functions, and transfer commands. All switches are covered by a five year limited warranty.

\* Non-service rated (RXSC) switches are housed in a steel enclosure.

## LOAD MANAGEMENT TECHNOLOGY

Through the use of the integrated Smart A/C Module (SACM), these switches have the capability to manage up to four individual HVAC (24 VAC controlled) loads with no additional hardware. When used in tandem with external Smart Management Modules, a total of eight more loads can be managed, providing the most installation efficient power management options available.

**FUNCTIONS**

All timing and sensing functions originate in the generator controller.

Utility Voltage Drop-out	<65%
Timer to Generator Start	10 Second Factory Set, Adjustable Between 2 - 1,500 Seconds by a Qualified Dealer*
Engine Warmup Delay	5 Seconds
Standby Voltage Sensor	65% for 5 Seconds
Utility Voltage Pickup	>80%
Re-transfer Time Delay	15 Seconds
Engine Cooldown Timer	60 Seconds
Exerciser	Nexus™: 12 Minutes Weekly Evolution™: 5 to 12 Minutes Adjustable, Weekly/Bi-weekly/Monthly
The Transfer Switch can be Operated Manually Without Power Applied	

\* When used in conjunction with units utilizing Evolution™ controls

**SPECIFICATIONS**

Model	RXSC100A3	RXSW100A3	RXSW150A3	RXSC200A3	RXSW200A3
Amps	100	100	150	200	200
Voltage	120/240, 1Ø	120/240, 1Ø	120/240, 1Ø	120/240, 1Ø	120/240, 1Ø
Load Transition Type (Automatic)	Open Transition	Open Transition Service Rated	Open Transition Service Rated	Open Transition	Open Transition Service Rated
Enclosure Type	NEMA 3R	NEMA 3R	NEMA 3R	NEMA 3R	NEMA 3R
ETL Rating	cETLus	ETLus	ETLus	cETLus	ETLus
Withstand Rating (Amps)	10,000	10,000	22,000	10,000	22,000
Lug Range	2/0 - #14		250 MCM - #6		

**DIMENSIONS**

Model		RXSC100A3	RXSW100A3	RXSW150A3	RXSC200A3	RXSW200A3
Height - in (mm)	H1	17.2 (437.9)	17.2 (437.9)	26.8 (679.4)	17.2 (437.9)	26.8 (679.4)
	H2	20.0 (508.0)	20.0 (508.0)	30.0 (672.0)	20.0 (508.0)	30.0 (672.0)
Width - in (mm)	W1	12.5 (317.5)	12.5 (317.5)	10.5 (266.7)	12.5 (317.5)	10.5 (266.7)
	W2	14.6 (370.8)	14.6 (370.8)	13.5 (342.9)	14.6 (370.8)	13.5 (342.9)
Depth - in (mm)		7.1 (180.1)	7.1 (180.1)	6.3 (160.1)	7.1 (180.1)	6.3 (160.1)
Weight - lbs (kg)		20.0 (9.1)	22.5 (10.2)	39.0 (17.7)	20.0 (9.1)	39.0 (17.7)

