

HARDWARE REFERENCE MANUAL VERSION: V1.0.4

Precis 4x1+1 4K60 Windowing **Processor**

Precis 4K60 HDMI Switcher / Windowing Processor









IMPORTANT SAFETY INSTRUCTIONS

- 1. READ these instructions.
- 2. KEEP these instructions.
- 3. HEED all warnings.
- 4. FOLLOW all instructions.
- 5. DO NOT use this apparatus near water.
- 6. CLEAN ONLY with dry cloth.
- 7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8. DO NOT install near any hear sources such as radiators, hear registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. DO NOT defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wider blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. ONLY USE attachments/accessories specified by the manufacturer.
- 12. USE ONLY with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 13. UNPLUG this apparatus during lightning storms or when unused for long periods of time.
- 14. REFER all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. DO NOT expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
- 16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
- 17. Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 18. DO NOT overload wall outlets or extension cords beyond their rated capacity as this can cause electric shock or fire.



The exclamation point, within an equilateral triangle, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electrical shock to persons.



ESD Warning: The icon to the left indicates text regarding potential danger associated with the discharge of static electricity from an outside source (such as human hands) into an integrated circuit, often resulting in damage to the circuit.

WARNING: To reduce the risk of fire or electrical shock, do not expose this apparatus to rain or moisture.

WARNING: No naked flame sources - such as candles - should be placed on the product.

WARNING: Equipment shall be connected to a MAINS socket outlet with a protective earthing connection.

WARNING: To reduce the risk of electric shock, grounding of the center pin of this plug must be maintained.

COPYRIGHT NOTICE

AMX© 2018, all rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of AMX. Copyright protection claimed extends to AMX hardware and software and includes all forms and matters copyrightable material and information now allowed by statutory or judicial law or herein after granted, including without limitation, material generated from the software programs which are displayed on the screen such as icons, screen display looks, etc. Reproduction or disassembly of embodied computer programs or algorithms is expressly prohibited.

LIABILITY NOTICE

No patent liability is assumed with respect to the use of information contained herein. While every precaution has been taken in the preparation of this publication, AMX assumes no responsibility for error or omissions. No liability is assumed for damages resulting from the use of the information contained herein. Further, this publication and features described herein are subject to change



without notice.

AMX WARRANTY AND RETURN POLICY

The AMX Warranty and Return Policy and related documents can be viewed/downloaded at www.amx.com.

ESD WARNING

To avoid ESD (Electrostatic Discharge) damage to sensitive components, make sure you are properly grounded before touching any internal materials.



When working with any equipment manufactured with electronic devices, proper ESD grounding procedures must be followed to make sure people, products, and tools are as free of static charges as possible. Grounding straps, conductive smocks, and conductive work mats are specifically designed for this purpose. These items should not be manufactured locally, since they are generally composed of highly resistive conductive materials to safely drain static discharges, with-out increasing an electrocution risk in the event of an accident.

Anyone performing field maintenance on AMX equipment should use an appropriate ESD field service kit complete with at least a dissipative work mat with a ground cord and a UL listed adjustable wrist strap with another ground cord.





WARNING: Do Not Open! Risk of Electrical Shock. Voltages in this equipment are hazardous to life. No user-serviceable parts inside. Refer all servicing to qualified service personnel.

Place the equipment near a main power supply outlet and make sure that you can easily access the power breaker switch.

WARNING: This product is intended to be operated ONLY from the voltages listed on the back panel or the recommended, or included, power supply of the product. Operation from other voltages other than those indicated may cause irreversible damage to the product and void the products warranty. The use of AC Plug Adapters is cautioned because it can allow the product to be plugged into voltages in which the product was not designed to operate. If the product is equipped with a detachable power cord, use only the type provided with your product or by your local distributor and/or retailer. If you are unsure of the correct operational voltage, please contact your local distributor and/or retailer.

FCC AND CANADA EMC COMPLIANCE INFORMATION:

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Approved under the verification provision of FCC Part 15 as a Class A Digital Device. Caution Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate this device. CAN ICES-3 (B)/NMB-3(B)

EU COMPLIANCE INFORMATION:

Eligible to bear the CE mark; Conforms to European Union Low Voltage Directive 2006/95/EC; European Union EMC Directive 2004/108/EC; European Union Restriction of Hazardous Substances Recast (RoHS2) Directive 2011/65/EU; European Union WEEE (recast) Directive 2012/19/EU; European Union Radio and Telecommunications Terminal Equipment (R&TTE) Directive 1999/5/EC

WEEE NOTICE:



This appliance is labeled in accordance with European Directive 2012/19/EU concerning waste of electrical and electronic equipment (WEEE). This label indicates that this product should not be disposed of with household waste. It should be deposited at an appropriate facility to enable recovery and recycling.

Table of Contents

IMPORTANT SAFETY INSTRUCTIONS	2
Overview	7
Features	7
Package Contents	7
Specifications	8
Front Panel Description	10
Rear Panel Description	11
Installation and Wiring	12
Brackets Installation	12
Wiring	12
Front Panel Control	14
RS232 Operation	16
WebGUI Control	17
Identify the IP address of the PR-WP-412	17
Access the Web Interface	17
Web Interface Introduction	18
Security	19
Switcher	21
System	26
Firmware Upgrade	28
Before Starting	28
Firmware Upgrade through WebGUI	28
Firmware Upgrade through USB	28
Troubleshooting	29
Appendix: API Command List Instructions	30
System Commands	30
Network Commands	34
Security Commands	37
Configuration Commands-Input	39

Configuration Commands-Output	48
Switching Commands	55
Windowing Commands	59

Overview

PR-WP-412

The AMX PR-WP-412 is a high performance HDMI switch with integrated scaling and multi-windowing technology which can connect up to four 4K UHD+ HDMI sources to up to two 4K UHD+ HDMI displays and freely switch between them. A solution for monitoring or displaying multiple sources simultaneously for use in control rooms, conference rooms or classrooms. With multi-windows display, the AMX PR-WP-412 is able to build up serval layout set up for different scenarios such as PiP (Picture in Picture) and PoP (Picture outside of Picture) as well as fully customizable quad-window modes.

Features

- 4K60 4:4:4 Support Experience pixel-for-pixel video reproduction of 4K60 source video with full 4:4:4 color space
- HDCP 2.2 Support Support the latest source devices
- Seamless Switch No pausing time between full-screen video switching.
- Audio De-embed capabilities Flexible design for use in more applications
- High Dynamic Range (HDR) Support Support HDR10 in matrix mode
- Network Security Support IPv4 & IPv6 networks. Support HTTPS, SSH
- Various Audio Format PCM 2-Channel, PCM Multi-Channel, Dolby Digital, Dolby Digital Plus, Dolby Atmos, Dolby
 True HD, DTS, DTS HD MA

Package Contents

- 1x PR-WP-412
- 1 x 12V/3A DC Power Adapter
- 1 x US Pins
- 1 x EU Pins
- 1 x UK Pins
- 1 x AU Pins
- 3 x 3-Pin Terminal Blocks
- 4 x Shockproof Feet

Specifications

Technical	
Input	4 x HDMI IN
Input Resolution Supported	VESA:
	640 x 480p @ 60, 72, 75 Hz
	720 x 400p @ 70, 85 Hz
	800 x 600p @ 56, 60, 72, 75, 85 Hz
	848 x 480p @ 60 Hz
	1024 x 768p @ 60, 70, 75, 85 Hz
	1152 x 864p @ 75 Hz
	1280 x 768p @ 60 Hz, 75 Hz
	1280 x 800p @ 60 Hz (Reduce Blanking)
	1280 x 960p @ 60 Hz
	1280 x 1024p @ 60, 85 Hz
	1360 x 768p @ 60, 75, 85 Hz
	1366 x 768p @ 60 Hz (Reduce Blanking)
	1400 x 1050p @ 60 Hz (Reduce Blanking), 75 Hz
	1440 x 900p @ 60 Hz (Reduce Blanking), 75, 85 Hz
	1600 x 900p @ 60 Hz (Reduce Blanking)
	1600 x 1200p @ 60 Hz
	1680 x 1050p @ 60 Hz (Reduce Blanking)
	1920 x 1200p @ 60 Hz (Reduce Blanking)
	2048 x 1080p @ 50, 60 Hz
	2560 x 1440p @ 60 Hz (Reduce Blanking)
	CEA Information Code (VIC) Formats:
	720 x 480i @ 59.94, 60 Hz
	720 x 576i @ 50 Hz
	720 x 480p @ 59.94, 60 Hz
	720 x 576p @ 50 Hz
	1280 x 720p @ 50, 59.94, 60 Hz
	1920 x 1080i @ 50, 59.94, 60 Hz
	1920 x 1080p @ 24, 25, 29.97, 30, 50, 59.94, 60 Hz
	3840 x 2160p @ 24, 25, 29.97, 30, 50, 59.94, 60 Hz
	4096 x 2160p @ 24, 25, 29.97, 30, 50, 59.94, 60 Hz
Input Audio Supported	PCM 2-Channel, PCM Multi-Channel, Dolby Digital, Dolby Digital Plus, Dolby
mpat / tadio supported	Atmos, Dolby True HD, DTS, DTS HD MA
Output	2 x HDMI Out
Output Scaling	Yes, Auto or Manual
Output Scaling Resolutions	640 x 480p @ 60 Hz
Output Scaling Resolutions	720 x 480p @ 60 Hz
	720 x 576p@ 50 Hz
	800 x 600p @ 60 Hz
	1280 x 720p @ 50/60 Hz
	1024 x 768p @ 60 Hz
	1280 x 768p, @ 60 Hz
	1280 x 800p @ 60 Hz
	1280 x 960p @ 60 Hz
	1280 x 1024p @ 60 Hz
	1360 x 768p @ 60 Hz
	1366 x 768p @ 60 Hz
	1400 x 1050p @ 60 Hz
	1 1700 × 1000 P @ 00 112

	1440 x 900p @ 60 Hz
	1600 x 900p @ 60 Hz (Reduce Blanking)
	1600 x 1200p @ 60 Hz
	1680 x 1050p @ 60 Hz
	1920 x 1080p @ 24, 25, 30, 50, 60 Hz
	1920 x 1200p @ 60 Hz (Reduce Blanking)
	3840 x 2160p @ 24, 25, 30, 50, 60 Hz
	4096 x 2160p @ 24, 25, 30, 50, 60 Hz
Analog Audio Output Level(Max)	+1.6 dB, unbalanced; ≥2 kohm load
Analog Audio Output Frequency	<-0.5 dB to +0.2 dB, 30 Hz to 20 kHz or
Response	< -0.8 dB to +0.2 dB, 20 Hz to 20 kHz
Analog Audio Output THD+N	<0.06%, 1 kHz, -10 dB to +2 dB
Analog Audio Output SNR	>103 dB, 20 Hz to 20 kHz Vin = +2 dB
Maximum Data Rate	18Gbps
Control Method	Front panel, IR, RS232 and Web GUI


General		
Operating Temperature	32F (0°C) to 104F (40°C)	
Storage Temperature	-4°F (-20°C) to 140°F (60°C)	
Humidity	5% to 90% (RH (non-condensing)	
Power Supply	Voltage, DC: 12V/7.5A	
Power Consumption (Max)	36W	
Protection	Human-body Model:	
	±10kV(Air-gap discharge)/±5kV(Contact discharge)	
Device Dimension (W x H x D)	213mm ×44mm × 205mm/ 18.97" x 1.73" x 8.07"	
Product Weight	Approx. 3.1 lbs (1.4 kg)	
Certification	FCC Part 15 Class B	
	EN 55032	
	EN 55035	
	CB IEC/EN 60950	
	CB IEC/EN 62368-1	
	UL 62368-1	
	RoHS/REACH	
	EMC (Australia)	
	EMC (Canada)	
	EMC (UKCA)	
	Prop65	

Transmission Distance

Note: Straight-through Ethernet cable of T568B is recommended.


General	Range	Supported Video
HDMI Output	15m/49ft	1080P@60Hz
	10m/33ft	4K@60Hz 4:2:0
	5m/16ft	4K@60Hz 4:4:4

Front Panel Description

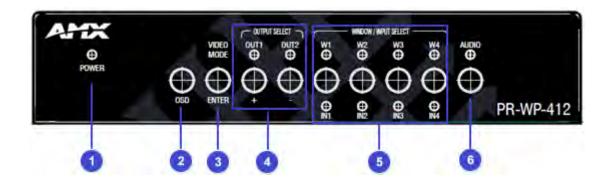

No.	Name	Description	
1	POWER LED	Indicates the processor On/Off.	
2	OSD Button	Press to enter the OSD menu, or to back out from menu items.	
3	VIDEO MODE/ENTER	Press to select Video Mode between Matrix/P-in-P/3-Stack/Quad mode.	
	Button	When the OSD Menu is enabled, press as to select a menu item.	
4	OUTPUT SELECT /+ -	Press to select output port. The according LED will turn on when selected.	
	Button with LED	When the OSD Menu is enabled, press as to navigate the menu items	
5	WINDOW/INPUT SELECT	When in Windowing Processor mode, press to select window W1~W4.	
	Button with LED	Subsequent presses will cycle the input routed to that window.	
		When in Matrix mode, press to select input IN1~IN4.	
		The according LED will turn on when selected	
6	Audio Button with LED	Press to enter audio select mode. When the LED is on, first select an output, then	
		an input to route audio. If the unit is in Windowing Processor mode, subsequent	
		presses of a window/input button will toggle between selecting audio from the	
		source routed to the related window or the source connected to the related input.	
		When the LED is off, the unit will operate in Auto mode and audio will follow	
		video.	

Rear Panel Description

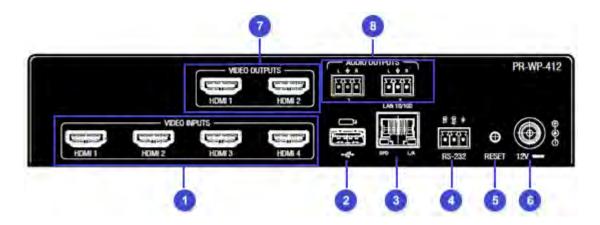

No.	Name	Description	
1	VIDEO INPUTS (HDMI 1-4)	Connect to HDMI sources.	
2	USB	Only for firmware update	
3	LAN 10/100	Connect to network, used for Web GUI, Telnet control.	
4	RS232	3-pin terminal block, connect to control system for RS232 control.	
5	RESET	Reset pin hole, press to reset unit.	
6	DC 12V	DC 12V power supply input.	
7	VIDEO OUTPUTS (HDMI 1-2)	Connect to HDMI display devices.	
8	AUDIO OUTPUTS	Audio de-embedded outputs:	
		3 Pins Phoenix port: L/R analog audio output.	

Installation and Wiring

Brackets Installation

Warning: Before installation, ensure the device is disconnected from the power source.


The PR-WP-412 can be mounted using V Style Surface Mounting Brackets, V Style Single Module Pole Mounting Kit, or the NMX-VRK V-Style Rack Shelf. For details, see www.amx.com.

Wiring

Warning:

Before wiring, disconnect the power from all devices. Connecting or disconnecting cables while powered, may cause damage to circuitry or possible injury. Connect and disconnect the cables with care.

- 1. Using high quality HDMI cable, firmly connect 4K or HD source devices (such as: Blu-Ray, computer, games console, satellite/ cable, music streaming device, CCTV etc.) to the HDMI input ports 1-4 of the processor.
- 2. Securely connect HDMI OUT 1-4 of the processor to HDMI IN of 4K or HD display devices, make sure all sources and displays are compatible and correctly configured.
- 3. Securely connect AUDIO OUT 1-2 of the processor to audio devices such as amplifier.
- 4. Insert the processor DC power cord. The front panel LEDs will lit on to indicate that the processor is ready for operation.
- 5. Warning: Always power off the processor before unplugging any HDMI cables following Last On, First Off protocol.
- 6. Switch between sources and displays using the processor front panel buttons, through serial RS232 or LAN.

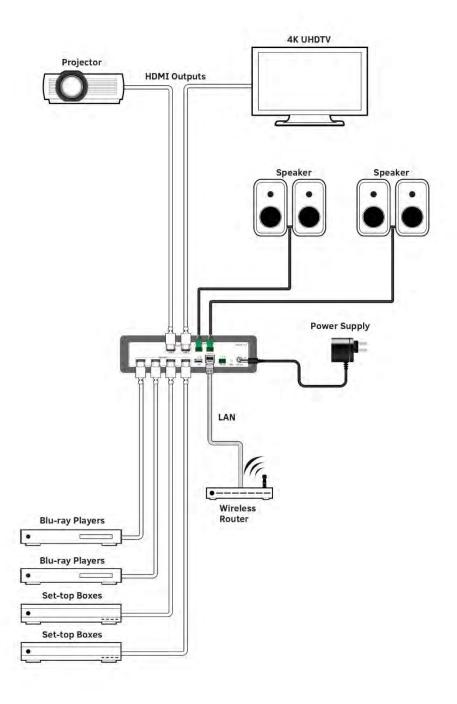

Front Panel Control

The PR-WP-412 4x2 Matrix with Windowing Processor is designed with ease of connection and control in mind. Basic switching of input sources to output displays can be achieved by pressing the front panel buttons with the front panel LEDs indicating the current input and output status of the matrix.

After powered up, the front panel LEDs will show the matrix model name indicating the matrix is ready for operation.

Step 1. Press the OSD Menu Button.




Step 2. Press the button to select video mode, or pass it as confirm when entering OSD menu.



Step 3. Press to select output or press the + button for page up, - button for page down to select the menu item when entering OSD menu.



Step 4. Press to select input or press to select the current window layout display when on Multiview mode.

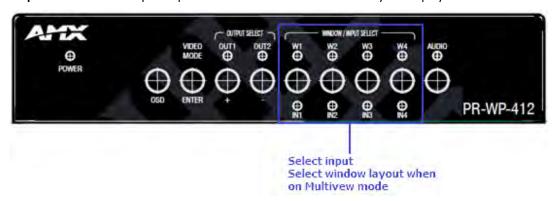

Step 5. Press to select audio mode.




RS232 Operation

RS232 Control

RS232 Phoenix Connector Pinout

The following figure shows the RS232 Phoenix Connector pinout. Connect with the Phoenix Connectors provided.

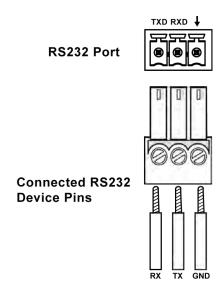

RS232 port is used to control the processor through RS232 serial communication.

Advanced users may also choose to control the unit through RS232 serial communication. API commands for RS232 control are available in **Appendix: API Command List Instructions**.

Parameters	Value
Baud Rate	9600
Data Bits	8 bits
Parity	None
Stop Bits	1 bit
Flow Control	None

WebGUI Control

Identify the IP address of the PR-WP-412

Press the OSD button to enter the main menu, and then press the ENTER button once to enter the "NETWORK STATUS" page. Finally, the current IP address will be presented on the displays connected to the HDMI OUT port.

Access the Web Interface

To access the WebGUI:

- 1. Connect your PC and the LAN port of the PR-WP-412 to the same local area network.
- 2. Type the IP address of the unit into the address bar of the browser. The following page will pop up. Enter the default username and password "administrator" and "password" and then click "Login". After logging in, the main screen appears.

PR-WP-412 Window Processor




Note: Select Launch Web UI Control Page via Default Browser or type the IP address into a web browser. Chrome, Safari, Firefox, Opera and IE10+ browsers are supported. Make sure the web browser is the latest version.

Web Interface Introduction


Network

In the Network Column, users can set up the IPv4 and IPv6 and 802.1X environments with the following IP mode settings:

- **DHCP**: When enabled, the IP address of the PR-WP-412 will be assigned automatically by the connected DHCP server.
- Static: When the PR-WP-412 fails to obtain or detect an IP address from the network to which it is connected, select "Static" to set up the IP address manually.
- Accept: Click Apply to initiate the network setting.

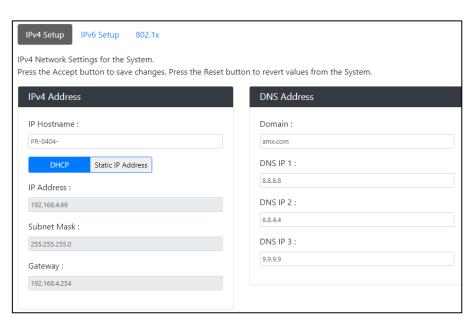



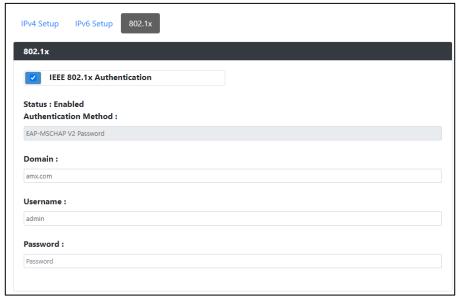


Security

In the Security Column, modification can be made for the Login Password.




- Web User Management: The Login Password default is password.
 - 1. Click the "Change Password" button and the following window pops up for new password verification.
 - 2. Click the "Accept" button to save the changes.

Note: Passwords must be 4 to 16 characters in length (alphanumeric only).

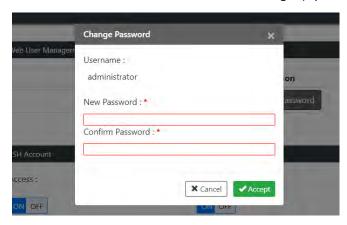


• SSH/Telnet Account: SSH/Telnet Account is used to configure the user name and password of the account. For SSH Account, the default user name is admin, the default password is admin. For Telnet Account, the default user name and password are null.

Note: Reboot the device for the SSH changes to take effect.

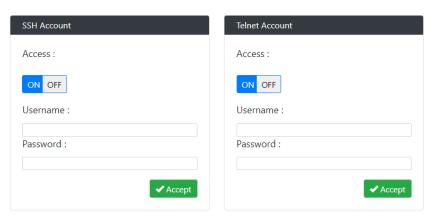

- Certification Management: In the Certification Management column,
 - Private Key: Click on the "Browse" button and locate the Private Key file on your local PC then click "Open" to install the key in the unit.
 - Certificate: Click on the "Browse" button and locate the Certificate file on your local PC then click "Open" to install the certificate in the unit.


- Password: Set the password used to encrypt the content stream. After entering the password press the "Accept" button to store the settings
- LDAP: Select whether you want to Enable or Disable the LDAP function. Entering the corresponding Information and click "Accept/Test". After these steps, you should be able to log in via your LDAP accounts and password.

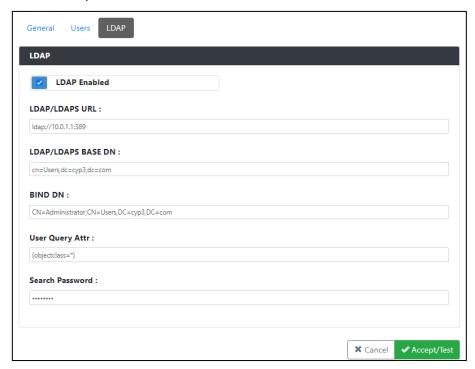

Switcher

In the Switcher Column, 3 submenus are used to perform the settings of routing.

- Configuration:
 - Output:
 - Mirrored: This column provides control and settings of mirrored window in the Windowing mode.

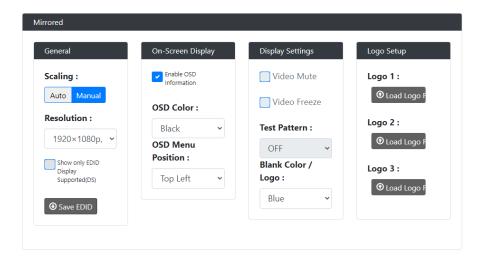


- 1. General: Set Scaling as "Auto" or "Manual", and the resolutions of output sources from the drop-down menu.
- 2. On-Screen Display: Enable and disenable OSD information and further define its color and position.
- 3. Display Settings: Click to Mute or Freeze the output video sources. Set Blank Color/Logo from the drop-down menu.
- 4. Logo Setup: Upload at the maximum of 3 logos.

Note: The format RGB is 8bits (256 colors) bitmap and the size is up to 960x540.

- HDCP Settings: HDCP support of HDMI Input 1-4 ports can be set.



- **CEC Settings:** Click Manual Power On/Off to execute a display manual control on/off. Click Auto Power On/Off to define a display control automatically.

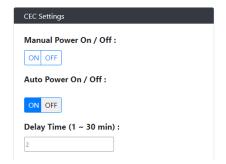


- Audio: Select Audio Sources from "None", "Input 1~4" and "Auto".



- Display Settings: Select whether to allow display sleep, and Display Sleep Delay from 1~1800 seconds.




- Input: This column provides control and settings of the four inputs in the Windowing mode.
 - **General:** Set EDID Mode and the Preferred EDID from the drop-down menu.

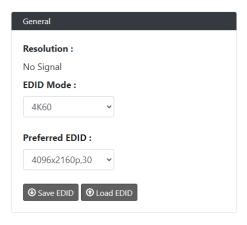

- **HDCP Settings:** Select whether to exercise HDCP Compliance.




- Image Adjustments: Adjust the brightness, contrast, saturation, hue and sharpness H/V.

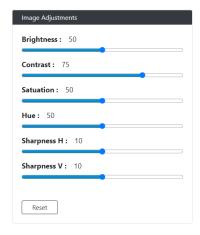

- Switching
- Video Mode: Users can freely switch between Matrix and Windowing mode (P-in-P/3-Stack/Quad), and a total of 8 preset modes can choose from.



- **Switch**: The Switch manages the connection configurations of displays and sources.
 - Matrix

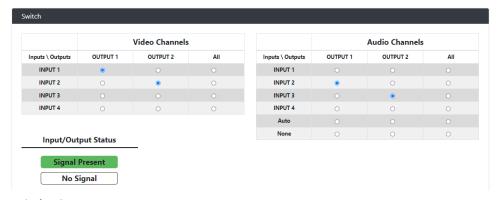

- Windowing




The input/output switch allows selection of output port (display) and input port (source) for specific combinations of displays and sources within the matrix.

Click the white button, it will become blue, which represents that the input and output are routed.


All: Route all outputs to one input.

None: Route output to none (turn off output)


- Windowing
- **Layout:** This column provides control over the output layouts. When the unit is in the Matrix or Auto modes, only a limited selection of controls are available.
 - Matrix

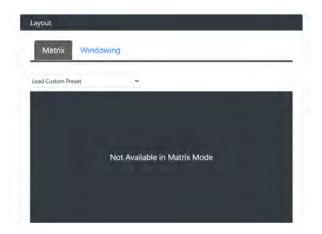


- Windowing

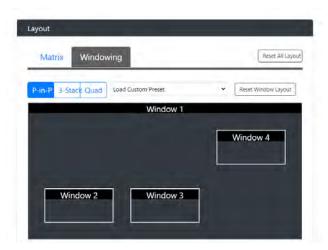

■ Preset Configuration: This column allows users to define presets themselves.

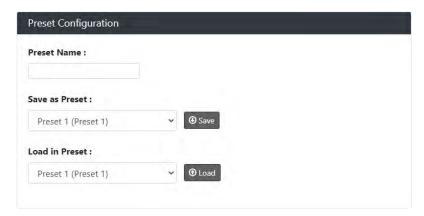

■ **Settings:** This column allows users to respectively define settings of each Input & Output in Matrix mode, and each Window & Output in Windowing mode.

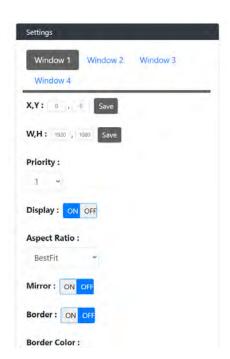




System

In the System Column, users can set up following settings:


• Firmware Version: In the Firmware Version column, the firmware version can be checked.

Package Version: 2.16 ARM Firmware Version: 2.13 MCU Firmware Version: 1.71


- RS-232 Settings: In the RS-232 Settings column, users can choose to turn "ON" or "OFF" the RS-232 stream and set the following configuration:
- Baud Rate: Set the baud rate. The available range is from 2400 to 115200 baud.
- Parity Bits: Set the connection parity bit. The available options are: none, odd, and even.
- **Data Bits**: Set the number of data bits. The available range is from 7 to 8.
- **Stop Bits**: Set the number of stop bits. The available range is from 1 to 2.

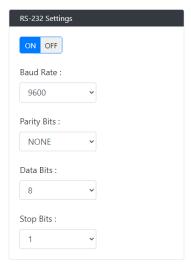


• Panel Lock: In the Panel Lock column, the front panel lock can be set as "OFF", "Menu" or "ALL".

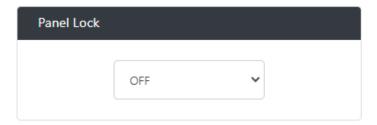


• System: In the System column, the unit can be set to "Reboot" and "Factory Default".

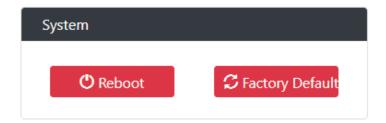


- **Device Configuration**: In the Device Configuration column, the current configuration can be saved and saved settings can be loaded.
 - Save Config: Save current settings as a setting file to be saved to a PC.
 - Load Config: Click to load a setting file from PC to Matrix.

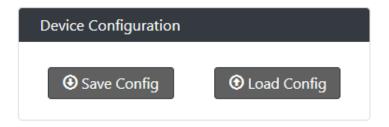

Device Log: In the Device Log column, log files can be saved to a PC.

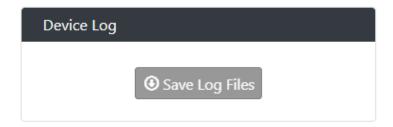

• Firmware Update: In the Firmware Update column, the firmware can be upgraded.

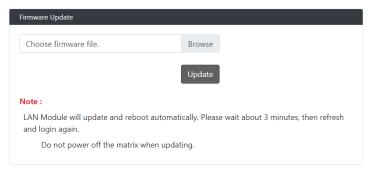

Firmware Upgrade

The PR-WP-412 uses KIT files for firmware upgrade.

Before Starting

- 1. Download the latest firmware (KIT) file to your PC. (Place KIT files on a local drive for the fastest throughput.)
- 2. Verify the following:
 - Verify that an Ethernet/RJ-45 cable is connected from the PR-WP-412 to the same network as the control system.
 - Verify the PR-WP-412 unit is powered ON.
- 3. Launch WebGUI page before you upgrade firmware to know the status of upgrading. More information, please refer to **UPGRADE STATUS** part in **WebGUI Control** section.

Firmware Upgrade through WebGUI

The system will be non-operational during the upgrade procedure below.

- 1. In the **Switcher Configuration** menu, enter the "System" page and then click "Browse" in the **Firmware Update** Column to open the file selection window.
- 2. Select the appropriate KIT file from the target directory.
- 3. Click "Update" to start firmware upgrading. The "Power" LED turns RED and keeps flashing.
- 4. Once the "Power" LED turns GREEN and stop flashing, the unit finishes upgrading and auto reboots to active.

Firmware Upgrade through USB

The system will be non-operational during the upgrade procedure below.

- 1. Copy firmware file to folder in USB original disk
- 2. Insert USB Disk to USB Type A program port
- 3. Press "Reset" button on the rear panel 5 times in a row, and the unit starts upgrading when the "Power" LED turns RED and keeps flashing.
- 4. Once the "Power" LED turns GREEN and stop flashing, the unit finishes upgrading and auto reboots to active.

Troubleshooting

- 1. Power: Ensure all devices are powered on (sources, transmitter, receiver and display).
- 2. Indicator: Please make sure all LED indicators of the receiver is normal according to the user manual.
- 3. Devices: Ensure picture can be shown normally when directly connecting a source to a display device.
- 4. Cable: Plug in and out HDMI cable or try another HDMI cable.
- 5. Ensure the cable length being used is within available transmission range according to the Specification Section.
- 6. Compatibility: Test other source and display devices to determine correct compatibility.

Appendix: API Command List Instructions

System Commands

No.	Command	Description	Variables	Example
1.	? Or help	Display the		Command sent:
		commands listed		>?
		in the table		Response:
				Help
				System Commands
				? Or help This list
				ping ping to specified IP address
				fwversion Request the firmware version of the device
2.	? <command/>	Show details		Command sent:
		about the		>?set vidin hdcp
		specified		Response:
		command		
		function		Description: Set the HDCP mode for the specified input
				Example:
				Command send: set vidin hdcp:1,off
				response: set HDCP compliance off for input port 1
3.	ping	Ping to specified		Command sent:
		IP address		>ping 192.168.1.2
				Response:
				ping 192.168.1.2 is alive.
4.	fwversion	Request the		Command sent:
		firmware version		>fwversion
		of the device		Response:
				Package: 1.39
		NOTE: Command		ARM: 1.39
		response shall list		MCU: 1.39
		all upgradable		
		<u>components</u>		
		<u>firmware version</u>		
5.	fwupdatestatus	Report device's		Command sent:
		firmware update		>fwupdatestatus
		status with node		Response:
		number		device firmware update status -100%
				Firmware update status: copying file from web finish
				device firmware update status -99%

		current	>get baud
11.	get baud	Get serial port	Command sent:
			Serial port is on
			Response:
		or off	>set serial on
10.	set serial <on off=""></on>	Set serial port on	Command sent:
			Serial Number:123456789
			Response:
		number	>get sn
9.	get sn	Get device serial	Command sent:
			Start restore to factory firmware image
			on
			Notice:it will take some time, please keep device power
			fw version> (Y/N) ->y
			load the factory firmware image of Version <factory image<="" td=""></factory>
			Are you sure you wish to reset factory parameters, and
		image	Response:
		factory firmware	>factoryfwimage
8.	factoryfwimage	Restore device to	Command sent:
			Do NOT power off.
			Device will automatically reboot shortly.
		Settings)	Resetting device to factory default parameters.
		(except for IP	Response:
		factory state	>reset factory
7.	reset factory	Force the unit to a	Command sent:
			Rebooting
			Response:
			>reboot
6.	reboot	Reboot the device	Command sent:
			not power off device
			Firmware update status: Please wait system reboot, do
			Firmware update status: Update complete
			device firmware update status -0%
			device firmware update status -19%
			device firmware update status -60%
			Firmware update status: Updating APP
			device firmware update status -70%
			device firmware update status -90%
			device firmware update status -94%
			device firmware update status -97%

		communicate	Current serial setting
		parameters	baud rate:9600
			data bit:8
			parity:none
			stop bit:1
12.	set baud	Set serial port	Command sent:
12.	Set bauu	communicate	>set baud
			Response:
		parameters	Serial port setting
			Enter baud
			rate(115200,57600,38400,19200,9600,4800,2400):115200-
			>115200
			Enter data bit(8 or 7):8->8
			Enter parity (E for Even, O for Odd, N for none):N->O
			Enter stop bit (1 or 2):1->1
			,
			You have entered:
			Baud rate:115200
			Data bit:8
			Parity:odd
			Stop bit:1
			Would you like to save the new settings? Y/N ->y
			New settings were saved
			>Current serial port baud rate: 115200
			>Current serial port data bit: 8
			>Current serial port parity: odd
			>Current serial port stop bit: 1
13.	get key lock	Get front panel	Command sent:
	3	key lock state	>get key lock
			Response:
			Current key lock level state:off
14.	set key lock	Set front panel key	Command sent:
		lock level, all for	>set key lock
		lock all front panel	Response:
		key button, menu	Front panel key lock level Setting
		for only lock menu	Enter key lock level (All for all key button, Menu for only
		key button	menu button, Off for no key button) ->menu
			Key lock is set to menu
			>Current key lock level state:menu
15.	exit	Close telnet/ssh	Command sent:

	window session	>exit
	NOTE: The	
	command sent by	
	Serial port is not	
	<u>supported</u>	

Network Commands

No.	Command	Description	Variables	Example
1.	get friendly	Get device's	variables	Command sent:
1.	get interiory			>get friendly
		hostname		Response:
				Current device friendly name:PR-WP-412
				Command sent:
2.	set friendly	Set device's		>set friendly
		hostname		Response:
				Please input friendly name:
				New friendlyname: PR-WP-412
				Would you like to save this setting(Y/N)y
				Setting is ok , you should reboot that make it effective
				>Current device friendly name:PR-WP-412
3.	get ip	Show the IP		Command sent:
		configuration of this		>get ip
		device		Response:
				IP Settings
				HostName: PR-WP-412
				Type: dhcp
				IP Address: 192.168.5.149
				Subnet Mask: 255.255.255.0
				Gateway IP: 192.168.5.254
				MAC Address: f8:22:85:00:14:72
4.	set ip	Setup the IP		Command sent:
	, sec.,p	configuration of this		>set ip
		device		Response:
		device		Enter Host Name: PR-WP-412
				Enter IP type. Type D for DHCP, or S for Static IP and
				then Enter:S
				Enter IP Address: 192.168.1.20->192.168.1.20
				Enter Subnet Mask: 255.255.255.0->255.255.255.0
				Enter Gateway IP: 0.0.0.0->0.0.0.0
				You have entered:
				Host Name PR-WP-412
				Type Static IP
				IP Address 192.168.1.20
				Subnet Mask 255.255.255.0
				Gateway IP 0.0.0.0

			1.11: 12T V N 15.1
			Is this correct? Type Y or N and Enter ->y
			Settings written. Device must be rebooted to enable
			new settings.
			>Current device friendly name:PR-WP-412
			>Current IP mode: static
			>Current IP Address: 192.168.1.20
			>Current Subnet Mask: 255.255.255.0
			>Current Gateway IP: 0.0.0.0
5.	get dns	Get device's DNS	Command sent:
		address	>get dns
			Response:
			DNS Servers
			Domain suffix: www.amx.com
			Entry 1: 8.8.8.8
			Entry 2: 8.8.4.4
			Entry 3: 9.9.9.9
6.	set dns	Set device's DNS	Command sent:
		address	>set dns
			Response:
			Enter Domain Suffix: www.amx.com
			Enter DNS Entry 1: 8.8.8.8
			Enter DNS Entry 2 : 8.8.4.4
			Enter DNS Entry 3 : 9.9.9.9
			You have entered:
			Domain Name: www.amx.com
			DNS Entry 1: 8.8.8.8
			DNS Entry 2: 8.8.4.4
			DNS Entry 3: 9.9.9.9
			Is this correct? Type Y or N and Enter ->Y
			Settings written. Device must be rebooted to enable
			new settings.
			>Current Domain Name: www.amx.com
			>Current DNS Entry 1: 8.8.8.8
			>Current DNS Entry 2: 8.8.4.4
			>Current DNS Entry 3: 9.9.9.9
7.	get ethernet mode	Get ethernet mode	Command sent:
			>get ethernet mode
			Response:
			Current ethernet mode : auto
8.	set ethernet mode	Set ethernet mode	Command sent:
	t	1	

		to auto, 100full or	>set ethernet mode
		10 half	Response:
			Current ethernet mode : auto
			Enter new ethernet mode(Auto, 100 full or 10 half) -
			>10 half
			Warning: When setting ethernet mode to 10 half, it
			must reset device to factory default if need change
			etherment mode to be Auto/100 full
			Would you like to set the ethernet mode (y/n):y
			New ethernet mode set, reboot the device for the
			change to take effect.
			>Current ethernet mode : 10 half
9.	renew dhcp	Renew the DHCP	Command sent:
		lease (may cause	>renew dhcp
		telnet	Response:
		disconnection)	You may need to re-establish the telnet session since
			the device will re-acquire an IP address lease.
			>Current IP Address: 0.0.0.0
			>Current Subnet Mask: 0.0.0.0
			>Current Gateway IP: 0.0.0.0
			>Current Domain Name: cypress.local
			>Current DNS Entry 1: 10.10.10.5
			>Current DNS Entry 2: 10.10.10.2
			>Current DNS Entry 3: 0.0.0.0
			>Current IP Address: 192.168.5.149
			>Current Subnet Mask: 255.255.25.0
			>Current Gateway IP: 192.168.5.254
			>Current Domain Name: www.amx.com
			>Current DNS Entry 1: 8.8.8.8
			>Current DNS Entry 2: 8.8.4.4
			>Current DNS Entry 3: 9.9.9.9

Security Commands

	lity communus			
No.	Command	Description	Variables	Example
1.	set telnet port	Set the device's IP		Command sent:
		port listened to for		>set telnet port
		Telnet connections		Response:
				Current telnet port number = 23
		NOTE: This		Enter new telnet port number(0 = disable telnet) ->23
		command requires		Setting telnet port number to 0
		a reboot to enable		New telnet port number set, reboot the device for the
		new settings		change to take effect.
				>Current telnet port: 23
		IMPORTANT: If you		
		set the Telnet port		
		to "0" to disable it,		
		you will need to		
		reset it in WebGUI		
2.	set telnet username	Set the Username		Command sent:
		for a secure Telnet		>set telnet username
		session		Response:
		Default = blank (no		Enter Telnet new username ->123
		username required)		Would you like to set this username (y/n) ->y
				(please set telnet password)
				Changed && Saved
3.	set telnet password	Set the Username		Command sent:
		for a secure Telnet		>set telnet password
		session		Response:
		Default = blank (no		Enter Telnet new password ->123
		username required)		Would you like to set this password (y/n) ->y
		. ,		Changed && Saved
4.	set ssh port	Set the device's IP		Command sent:
		port listened to for		>set ssh port
		SSH connections		Response:
				Current SSH port number = 22
		NOTE: This		Enter new SSH port number(0 = disable ssh) ->22
		command requires		Setting SSH port number to 22
		a reboot to enable		New SSH port number set, reboot the device for the
		new settings.		change to take effect.
				>Current SSH port: 22
		IMPORTANT: If you		
		set the SSH port to		
		<u>"0" to disable it,</u>		
		<u> </u>		

		you will need to	
		reset it in WebGUI	
		NOTE: This	
		NOTE: This	
		command is	
		supported by SSH	
		only, not by telnet	
5.	set ssh username	Set the Username	Command sent:
		for a secure SSH	>set ssh username
		session	Response:
			Enter SSH new username ->123
		NOTE: This	Would you like to set this username (y/n) ->y
		command is	(please set SSH password)
		supported by SSH	Changed && Saved
		only, not by telnet	
6.	set ssh password	Set the Username	Command sent:
		for a secure SSH	>set ssh password
		session	Response:
			Enter SSH new password ->123
		NOTE: This	Would you like to set this password (y/n) ->y
		command is	Changed && Saved
		supported by SSH	
		only, not by telnet	

Configuration Commands-Input

No.	Command	Description	Variables	Example
1.	get vidin	Get the name of the	<input channel=""/> =	Command sent:
	portname: <input< td=""><td>specified input</td><td>1~4</td><td>>get vidin portname:1</td></input<>	specified input	1~4	>get vidin portname:1
	channel>			Response:
				get input port 1 named as meeting room 1
2.	set vidin	Set the name of the	<input channel=""/> =	Command sent:
	portname: <input< td=""><td>specified input</td><td>1~4</td><td>>set vidin portname:1,123</td></input<>	specified input	1~4	>set vidin portname:1,123
	channel>, <name></name>		<name= name<="" td=""><td>Response:</td></name=>	Response:
			string	set input port 1 named as meeting room 2
3.	get vidin	Get the HDCP mode	<input channel=""/> =	Command sent:
	hdcp: <input< td=""><td>for the specified</td><td>1~4</td><td>>get vidin hdcp:1</td></input<>	for the specified	1~4	>get vidin hdcp:1
	channel>	input		Response:
				get HDCP compliance on for input port 1
4.	set vidin	Set the HDCP mode	<input channel=""/> =	Command sent:
	hdcp: <input< td=""><td>for the specified</td><td>1~4</td><td>>set vidin hdcp:1,on</td></input<>	for the specified	1~4	>set vidin hdcp:1,on
	channel>, <hdcp_co< td=""><td>input</td><td><hdcp_compliance></hdcp_compliance></td><td>Response:</td></hdcp_co<>	input	<hdcp_compliance></hdcp_compliance>	Response:
	mpliance>		= on/off	set HDCP compliance on for input port 1
5.	get vidin res: <input< td=""><td>Get input video</td><td><input channel=""/>=</td><td>Command sent:</td></input<>	Get input video	<input channel=""/> =	Command sent:
	channel>	resolution for the	1~4	>get vidin res:1
		specified input		Possible response message includes:
				■ get 1920x1080p,60 video input 1
				• get no video input 1
6.	get vidin	Get edid mode for	<input channel=""/> =	Command sent:
	edidmode: <input< td=""><td>the specified input</td><td>1~4</td><td>>get vidin edidmode:1</td></input<>	the specified input	1~4	>get vidin edidmode:1
	channel>			Response:
				get input 1 edid mode set to all hd resolutions
7.	set vidin	Set edid mode for	<input channel=""/> =	Command sent:
	edidmode: <input< td=""><td>the specified input</td><td>1~4</td><td>>set vidin edidmode:1,MIRROR OUTPUT1</td></input<>	the specified input	1~4	>set vidin edidmode:1,MIRROR OUTPUT1
	channel>, <edid_m< td=""><td></td><td><edid_mode=< td=""><td>Response:</td></edid_mode=<></td></edid_m<>		<edid_mode=< td=""><td>Response:</td></edid_mode=<>	Response:
	ode>		{	set input 1 edid mode to MIRROR OUTPUT1
			Auto	
			All HD	
			RESOLUTIONS	
			HD WIDE SCREEN	
			HD FULL SCREEN	
			4K	
			4K60	
			Custom	
			MIRROR OUTPUT1	
			MIRROR OUTPUT2	
			WIINNON OUTPUTZ	

		T .		
			MIRROR OUTPUT3	
			MIRROR OUTPUT4	
			MIRROR OUTPUT5	
			MIRROR OUTPUT6	
			MIRROR OUTPUT7	
			MIRROR OUTPUT8	
			}	
8.	get vidin	Get preferred	<input channel=""/> =	Command sent:
	prefedid: <input< th=""><th>resolution in the</th><th>1~4</th><th>>get vidin prefedid:1</th></input<>	resolution in the	1~4	>get vidin prefedid:1
	channel>	current edid used		Response:
		for the specified		get preferred edid set to 1920x1080p,60 for input 1
		input, no matter it is		
		under which EDID		
		mode		
9.	set vidin	Set preferred edid	<input channel=""/> =	Command sent:
	prefedid:< <i>input</i>	for the specified	1~4	>set vidin prefedid:1,1920x1080p,60
	channel>, <edid></edid>	input	<edid>=</edid>	Response:
		·	<h>x<v><i p="">,<rat< th=""><th>set preferred edid to 1920x1080p,60 for input 1</th></rat<></i></v></h>	set preferred edid to 1920x1080p,60 for input 1
			e> <specific info=""></specific>	
			{	
			(refer to AMX EDID	
			Library)	
			640x400,85	
			640x480,60	
			640x480,72	
			640x480,75	
			640x480,85	
			720x400,85	
			720x480p,60	
			720x480p,120	
			720x480p,240	
			720x480p,240 720x576p,50	
			720x576p,100	
			720x576p,200	
			800x600,56	
			800x600,60	
			800x600,72	
			800x600,75	
			800x600,85	
			848x480,60	

848x480,75
848x480,85
1024x640,60
1024x768,60
1024x768,70
1024x768,75
1024x768,85
1152x864,75
1280x720,50
1280x720,60
1280x720p,60
1280x720p,100
1280x720p,120
1280x768,59
1280x768,60
1280x768,74
1280x768,75
1280x768,85
1280x800,60
1280x960,60
1280x960,85
1280x1024,60
1280x1024,75
1280x1024,85
1360x764,60
1360x768,60
1440x900,60
1440x900,75
1440x900,85
1400x1050,60
1400x1050,75
1600x1200,60
1680x1050,60
1920x1080i,50
1920x1080i,60
1920x1080p,24
1920x1080p,25
1920x1080p,30
1920x1080p,50
1920x1080,60

	ı	1	T	
			1920x1080p,60	
			1920x1200,59	
			1920x1200,60	
			3840x2160p,24	
			3840x2160p,25	
			3840x2160p,30	
			4096x2160p,24	
			4096x2160p,25	
			4096x2160p,30	
			3840x2160p,50	
			3840x2160,50	
			3840x2160p,60	
			3840x2160p,60CVR	
			4096x2160p,50	
			4096x2160p,60	
			}	
10.	get vidin	Get the current edid	<input channel=""/> =	Command sent:
	ediddata: <input< td=""><td>data used for the</td><td>1~4</td><td>>get vidin ediddata:1</td></input<>	data used for the	1~4	>get vidin ediddata:1
	channel>	specified input port		Response:
				>get vidin ediddata:1
				get ediddata for input 1 is: 00 FF FF FF FF FF FF 00 05
				B8 00 18 02 00 00 00 20 1E 01 03 80 00 00 78 0E EE 95
				A3 54 4C 99 26 0F 50 54 FF FF 80 D1 00 B3 00 A9 40 81
				00 81 C0 81 80 8B C0 95 00 02 3A 80 18 71 38 2D 40
				58 2C 45 00 40 84 63 00 00 1E 02 3A 80 18 71 38 2D
				40 58 2C 45 00 40 84 63 00 00 1E 00 00 00 FD 00 17 78
				0F 87 3C 00 0A 20 20 20 20 20 20 00 00 00 FC 00 41
				4D 58 5F 48 44 4D 49 31 30 76 32 0A 01 92 02 03 3A
				70 6E 03 0C 00 11 00 80 3C 20 00 80 01 02 03 04 67
				D8 5D C4 01 78 80 00 57 61 60 5F 5E 5D 64 62 63 10
				20 22 1F 21 05 14 04 03 13 07 12 16 27 01 E2 0F 03 23
				09 07 07 D1 3D 80 80 72 B0 26 40 78 C8 36 00 40 E8
				63 00 00 1C 28 3C 80 A0 70 B0 23 40 30 20 36 00 40
				E8 63 00 00 1A 00 00 00 00 00 00 00 00 00 00 00 00
				00 00 00 00 00 00 00 00 00 00 00 00 00
				00 00 7A
11.	set vidin	Set edid data for the	<input channel=""/> =	Command sent:
	ediddata:< <i>input</i>	specified input	1~4	>set vidin ediddata:1,256byte EDID Data
	channel>, <edid_da< td=""><td>channel as custom</td><td><edid_data>=</edid_data></td><td>Response:</td></edid_da<>	channel as custom	<edid_data>=</edid_data>	Response:
	ta>	edid	256byte EDID Data	set input 1 to custom edid mode and custom edid data
				to be: 0E 0D DA 10 00 00 01 00 00 00 7C 00 00 00 00
L	<u> </u>	<u> </u>	I	42

		NOTE: EDID mode		00 00 00 77 00 00 00 30 11 B6 7E DC 97 EE 76 20 7C
		will be set to		EE 76 00 90 EE 76 00 00 00 00 02 00 00 50 71 D4 01
		Custom		E8 74 D4 01 70 00 00 00 50 71 D4 01 E8 74 D4 01 FF FF
		automatically when		FF FF F0 AF D4 01 02 00 00 00 84 60 07 00 02 5E 05 00
		uploading edid by		08 00 00 00 18 57 02 00 F3 D8 0F 60 60 11 B6 7E F3 D8
		the command		OF 60 BE 66 07 00 06 00 00 00 26 00 00 00 26 00 00 00
				06 00 00 00 26 00 00 00 15 00 00 00 D4 7C 02 00 07
				5E 05 00 26 00 00 00 18 D0 01 00 00 00 00 00 44 2C
				20 20 2C 20 44 2C 20 61 2C 20 74 2C 20 61 2C 20 00
				2C 20 00 2C 20 62 2C 20 79 2C 20 74 2C B0 11 B6 7E
				01 00 00 00 54 54 01 00 00 00 00 00 C8 55 01 00 BC 11
				B6 7E 34 32 39 34 39 36 37 32 39 35 00 00 01 00 00 00
				6C 51 01 00 F3 D8 0F 60 31 11 B6 7E F3 D8 0F 60 8F 64
				07 00 00 00 00 00 00 00 00
				>set input 1 to custom edid mode
				>get ediddata for input 1 is: 25 0B 0E 0D DA 10 00 00
				01 00 00 00 7C 00 00 00 00 00 00 77 00 00 00 30 11
				B6 7E DC 97 EE 76 20 7C EE 76 00 90 EE 76 00 00 00 00
				00 02 00 00 50 71 D4 01 E8 74 D4 01 70 00 00 00 50
				71 D4 01 E8 74 D4 01 FF FF FF FF F0 AF D4 01 02 00 00
				00 84 60 07 00 02 5E 05 00 08 00 00 01 8 57 02 00 F3
				D8 0F 60 60 11 B6 7E F3 D8 0F 60 BE 66 07 00 06 00
				00 00 26 00 00 00 26 00 00 00 06 00 00 00
12.	get vidin	Get brightness	<input channel=""/> =	Command sent:
	brightness: <input< th=""><th>setting for the</th><th>1~4</th><th>>get vidin brightness:1</th></input<>	setting for the	1~4	>get vidin brightness:1
	channel>	specified input		Response:
		opcomos mpss		get brightness set to 100 for input 1
13.	set vidin	Set brightness for	<input channel=""/> =	Command sent:
	brightness: <input< th=""><th>the specified input</th><th>1~4</th><th>>set vidin brightness:1,50</th></input<>	the specified input	1~4	>set vidin brightness:1,50
	channel>, <brightne< th=""><th></th><th> </th><th>Response:</th></brightne<>		 	Response:
	ss>		(50 is bypass)	set brightness to 50 for input 1
14.	get vidin	Get contrast setting	<input channel=""/> =	Command sent:
	contrast: <input< th=""><th>for the specified</th><th>1~4</th><th>>get vidin contrast:1</th></input<>	for the specified	1~4	>get vidin contrast:1
	channel>	input		Response:
				get contrast set to 100 for input 1
15.	set vidin	Set contrast for the	<input channel=""/> =	Command sent:
	contrast: <input< th=""><th>specified input</th><th>1~4</th><th>>set vidin constrast:1,50</th></input<>	specified input	1~4	>set vidin constrast:1,50
	channel>, <contrast< th=""><th></th><th><contrast= 0~100<="" th=""><th>Response:</th></contrast=></th></contrast<>		<contrast= 0~100<="" th=""><th>Response:</th></contrast=>	Response:
	>		(50 is bypass)	set contrast to 50 for input 1
16.	get vidin	Get saturation	<input channel=""/> =	Command sent:
	saturation: <input< th=""><th>setting for the</th><th>1~4</th><th>>get vidin satuation:1</th></input<>	setting for the	1~4	>get vidin satuation:1

	channel>	specified input		Response:
				get saturation set to 50 for input 1
17.	set vidin	Set saturation for	<input channel=""/> =	Command sent:
	saturation: <input< td=""><td>the specified input</td><td>1~4</td><td>>set vidin satuation:1,100</td></input<>	the specified input	1~4	>set vidin satuation:1,100
	channel>, <saturati< td=""><td></td><td><pre><saturation= 0~100<="" pre=""></saturation=></pre></td><td>Response:</td></saturati<>		<pre><saturation= 0~100<="" pre=""></saturation=></pre>	Response:
	on>		(50 is bypass)	set saturation to 100 for input 1
18.	get vidin	Get hue setting for	<input channel=""/> =	Command sent:
	hue:< <i>input</i>	the specified input	1~4	>get vidin hue:1
	channel>			Response:
				get hue set to 50 for input 1
19.	set vidin	Set hue for the	<input channel=""/> =	Command sent:
	hue:< <i>input</i>	specified input	1~4	>set vidin hue:1,100
	channel>, <hue></hue>		<hue= (50="" 0~100="" is<="" td=""><td>Response:</td></hue=>	Response:
			bypass)	set hue to 100 for input 1
20.	get vidin	Get sharpness h	<input channel=""/> =	Command sent:
	sharpnessh: <input< td=""><td>setting for the</td><td>1~4</td><td>>get vidin sharpnessh:1</td></input<>	setting for the	1~4	>get vidin sharpnessh:1
	channel>	specified input		Response:
				get sharpnessh set to 10 for input 1
21.	set vidin	Set sharpness h for	<input channel=""/> =	Command sent:
	sharpnessh: <input< td=""><td>the specified input</td><td>1~4</td><td>>set vidin sharpnessh:1,20</td></input<>	the specified input	1~4	>set vidin sharpnessh:1,20
	channel>, <sharpne< td=""><td></td><td><sharpnessh= 0~20<="" td=""><td>Response:</td></sharpnessh=></td></sharpne<>		<sharpnessh= 0~20<="" td=""><td>Response:</td></sharpnessh=>	Response:
	ssh>		(10 is bypass)	set sharpnessh to 20 for input 1
22.	get vidin	Get sharpness v	<input channel=""/> =	Command sent:
	sharpnessv: <input< td=""><td>setting for the</td><td>1~4</td><td>>get vidin sharpnessv:1</td></input<>	setting for the	1~4	>get vidin sharpnessv:1
	channel>	specified input		Response:
				get sharpnessv set to 10 for input 1
23.	set vidin	Set sharpness v for	<input channel=""/> =	Command sent:
	sharpnessv: <input< td=""><td>the specified input</td><td>1~4</td><td>>set vidin sharpnessv:1,20</td></input<>	the specified input	1~4	>set vidin sharpnessv:1,20
	channel>, <sharpne< td=""><td></td><td><sharpnessv= 0~20<="" td=""><td>Response:</td></sharpnessv=></td></sharpne<>		<sharpnessv= 0~20<="" td=""><td>Response:</td></sharpnessv=>	Response:
	ssv>		(10 is bypass)	set sharpnessv to 20 for input 1
24.	get vidin aspect	Get aspect ratio	<input channel=""/> =	Command sent:
	ratio:< <i>input</i>	setting for the	1~4	>get vidin aspect ratio:1
	channel>	specified input		Response:
				get aspect ratio set to best fit for input 1
25.	set vidin aspect	Set aspect ratio for	<input channel=""/> =	Command sent:
	ratio:< <i>input</i>	the specified input	1~4	>set vidin aspect ratio:1,user
	channel>, <aspect< td=""><td></td><td><aspect ratio="">=</aspect></td><td>Response:</td></aspect<>		<aspect ratio="">=</aspect>	Response:
	ratio>		{	set aspect ratio to user for input 1
			full,	>set position y of window 1 to 0
			best fit,	>set the height size for window 1 to 480
			16:9,	>set aspect ratio to user for input 1

			16:10,	
			4:3,	
			user	
26		Cat the boundary are	singut about als	Command sent:
26.	get vidin	Get the border on	<input channel=""/> =	>get vidin border:1
	border: <input< th=""><th>or off for the</th><th>1~4</th><th>Response:</th></input<>	or off for the	1~4	Response:
	channel>	specified input		get the border on for input 1
				get the border on for input 1
		NOTE: The		
		command is only		
		supported for PR-		
		WP-412 under		
		<u>Matrix Mode</u>		
27.	set vidin	Set the border on or	<input channel=""/> =	Command sent:
	border: <input< th=""><th>off for the specified</th><th>1~4</th><th>>set vidin border:1,off</th></input<>	off for the specified	1~4	>set vidin border:1,off
	channel>, <state></state>	input	<state>= on/off</state>	Response:
				set the border off for input 1
		NOTE: The		
		command is only		
		supported for PR-		
		WP-412 under		
		<u>Matrix Mode</u>		
28.	get vidin border	Get the border	<input channel=""/> =	Command sent:
	color: <input< th=""><th>color setting for the</th><th>1~4</th><th>>get vidin border color:1</th></input<>	color setting for the	1~4	>get vidin border color:1
	channel>	specified input	<color>=</color>	Response:
			{	get the border color black for input 1
		NOTE: The	bk for Black,	
		command is only	r for Red,	
		supported for PR-	g for Green,	
		WP-412 under	b for Blue,	
		Matrix Mode	y for Yellow,	
			m for Magenta,	
			c for Cyan,	
			w for White,	
			dr for Dark Red,	
			dg for Dark Green,	
			db for Dark Blue,	
			dy for Dark Yellow,	
			dm for Dark	
			Magenta,	
			iviugentu,	

			do for Dark Cuan	
			dc for Dark Cyan,	
			gr for Gray	
			}	
29.	set vidin border	Set the border color	<input channel=""/> =	Command sent:
	color: <input< th=""><th>setting for the</th><th>1~4</th><th>>set vidin border color:1,g</th></input<>	setting for the	1~4	>set vidin border color:1,g
	channel>, <color></color>	specified input	<color>=</color>	Response:
			{	set the border color green for input 1
		NOTE: The	bk for Black,	
		command is only	r for Red,	
		supported for PR-	g for Green,	
		WP-412 under	b for Blue,	
		Matrix Mode	y for Yellow,	
			m for Magenta,	
			c for Cyan,	
			w for White,	
			dr for Dark Red,	
			dg for Dark Green,	
			db for Dark Blue,	
			dy for Dark Yellow,	
			dm for Dark	
			Magenta,	
			dc for Dark Cyan,	
			gr for Gray	
			}	
30.	get vidin	Get the video	<input channel=""/> =	Command sent:
	mirror:< <i>input</i>	mirror state from	1~4	>get vidin mirror:1
	channel>	specified input		Response:
				get the video mirror off for input 1
		NOTE: The		
		command is only		
		supported for PR-		
		WP-412 under		
		Matrix Mode		
31.	set vidin	Set the video mirror	<input channel=""/> =	Command sent:
	mirror: <input< td=""><td>on or off state for</td><td>1~4</td><td>>set vidin mirror:1,on</td></input<>	on or off state for	1~4	>set vidin mirror:1,on
	channel>, <state></state>	specified input	<state>= on/off</state>	Response:
	,	. , ,	, , ,	set the video mirror on for input 1
		NOTE: The		
		command is only		
		supported for PR-		
		supported joi PK-		

	WP-412 under	
	<u>Matrix Mode</u>	

Configuration Commands-Output

		as Gutput		- 1
No.	Command	Description	Variables	Example
1.	get vidout	Get the name of the	<output channel="">=</output>	Command sent:
	portname: <output< td=""><td>specified output</td><td>1~2</td><td>>get vidout portname:1</td></output<>	specified output	1~2	>get vidout portname:1
	channel>	port		Response:
				output 1 is named as meeting room 1
2.	set vidout	Set the name of the	<output channel="">=</output>	Command sent:
	portname: <output< td=""><td>specified output</td><td>1~2</td><td>>set vidout portname:1,Meeting Room 2</td></output<>	specified output	1~2	>set vidout portname:1,Meeting Room 2
	channel>, <name></name>	port	<name= name<="" td=""><td>Response:</td></name=>	Response:
			string	output 1 is named as meeting room 2
3.	get vidout	Get HDCP mode for	<output channel="">=</output>	Command sent:
	hdcp: <output< td=""><td>the specified output</td><td>1~2</td><td>>get vidout hdcp:1</td></output<>	the specified output	1~2	>get vidout hdcp:1
	channel>			Response:
	· · · · · · · · · · · · · · · · · · ·			output 1 is set to AUTO HDCP mode
4.	set vidout	Set HDCP mode for	<output channel="">=</output>	Command sent:
	hdcp: <output< td=""><td>the specified output</td><td>1~2</td><td>>set vidout hdcp:1,hdcp2.2</td></output<>	the specified output	1~2	>set vidout hdcp:1,hdcp2.2
	channel>, <hdcp_m< td=""><td></td><td><hdcp mode="</td"><td>Response:</td></hdcp></td></hdcp_m<>		<hdcp mode="</td"><td>Response:</td></hdcp>	Response:
	ode>		{	output 1 is set to HDCP2.2 mode
	oue>			
			AUTO,	
			HDCP2.2,	
			HDCP1.4,	
			NO-HDCP	
			}	
5.	get vidout res	Get video resolution	<output channel="">=</output>	Command sent:
		for the specified	1~2	>get vidout res:1
		output		Possible response message includes:
				• output 1 resolution is 1280x720p,50
				• output 1 resolution is no signal
6.	set vidout	Set video solution	<resolution>=</resolution>	Command sent:
	res: <resolution></resolution>	for the specified	<h>x<v<i p="">,<rate< td=""><td>>set vidout res:1,4096x2160p,60</td></rate<></v<i></h>	>set vidout res:1,4096x2160p,60
		output; it will	> <specific info=""></specific>	Possible response message includes:
		change to manual	{	• output resolution is set to 4096x2160p,60
		scaling mode	640x480p,60	• unsupported resolution
		automatically if	720x480p,60	
		under Auto scaling	720x576p,50	
		mode	800x600p,60	
		mode	·	
			1024x768p,60	
			1280x720p,50	
			1280x720p,60	
			1280x768p,60	
			1280x800p,60	

			1222 255	
			1280x960p,60	
			1280x1024p,60	
			1360x768p,60	
			1366x768p,60	
			1400x1050p,60	
			1440x900p,60	
			1600x900p,60RB	
			1600x1200p,60	
			1680x1050p,60	
			1920x1080p,24	
			1920x1080p,25	
			1920x1080p,30	
			1920x1080p,50	
			1920x1080p,60	
			1920x1200p,60RB	
			3840x2160p,24	
			3840x2160p,25	
			3840x2160p,30	
			3840x2160p,50	
			3840x2160p,60	
			4096x2160p,24	
			4096x2160p,25	
			4096x2160p,30	
			4096x2160p,50	
			4096x2160p,60	
			}	
7.	get vidout scale	Get scale mode for		Command sent:
		video output		>get vidout scale
		·		Response:
				get manual scale mode for video output
8.	set vidout	Set scale mode for	<mode>=</mode>	Command sent:
	scale: <mode></mode>	video output	auto/manual	>set vidout scale:manual
				Response:
				set manual scale mode for video output
9.	get vidout osd	Get osd enable		Command sent:
		state for video		>get vidout osd
		output		Response:
				get osd off for video output
10.	set vidout	Set osd enable state	<state>= on/off</state>	Command sent:
	osd:< <i>state></i>	for video output		>set vidout osd:on
				Response:

				set osd on for video output
11.	get vidout osd	Get osd color		Command sent:
11.	color	setting for video		>get vidout osd color
	COIOI	_		Response:
		output		get osd color set to blue
12.	set vidout osd	Set osd color setting	<color>= black/blue</color>	Command sent:
	color: <color></color>	for video output	Side of the side o	>set vidout osd color:blue
	601011.4601017	Tor video output		Response:
				set osd color to blue
13.	get vidout osd pos	Get osd position for		Command sent:
		video output		>get vidout osd pos
		·		Response:
				get osd pos set to top left
14.	set vidout osd	Set osd position for	<position>=</position>	Command sent:
	pos: <position></position>	video output	{	>set vidout osd pos:tr
			TR (Top Right),	Response:
		NOTE: The	TL (Top Left),	set osd pos to top right
		command is to set	BR (Bottom Right),	
		OSD Info position in	BL (Bottom Left),	
		Windowing	C (Center)	
		Processor, not OSD	}	
		Menu position in		
		PR-WP-412		
15.	get vidout cec	Get current power	<output channel="">=</output>	Command sent:
	power: <output< td=""><td>status from the sink</td><td>1~2</td><td>>get vidout cec power:1</td></output<>	status from the sink	1~2	>get vidout cec power:1
	channel>	via CEC		Possible response message includes:
				get cec on for sink on output 1
				• get cec fail for sink on output 1
				■ No attached sink
16.	set vidout cec	Set power status	<output channel="">=</output>	Command sent:
	power: <output< td=""><td>on/off for the sink</td><td>1~2</td><td>>set vidout cec power:1,on</td></output<>	on/off for the sink	1~2	>set vidout cec power:1,on
	channel>, <state></state>	device via CEC	<state>=on/off</state>	Possible response message includes:
				• set cec on for sink on output 1
				No attached sink
17.	set vidout cec	Set power standby	<output channel="">=</output>	Command sent:
	standby: <output< td=""><td>for the sink device</td><td>1~2</td><td>>set vidout cec standby:1</td></output<>	for the sink device	1~2	>set vidout cec standby:1
	channel>	via CEC on specified		Possible response message includes:
		output port		• set cec standby for sink on output 1
				No attached sink
18.	set vidout cec	Make active for the	<output channel="">=</output>	Command sent:
	makeactive: <outpu< td=""><td>sink device via CEC</td><td>1~2</td><td>>set vidout cec makeactive:1</td></outpu<>	sink device via CEC	1~2	>set vidout cec makeactive:1
				Possible response message includes:

	t channel>	on specified output		■ make active for sink on output 1
		port		No attached sink
19.	get vidout cec disp	Get cec display auto	<output channel="">=</output>	Command sent:
13.	auto: <output< td=""><td>on/off state for</td><td>1~2</td><td>>get vidout cec disp auto:2</td></output<>	on/off state for	1~2	>get vidout cec disp auto:2
	channel>	specified output	1 2	Response:
	Channel>	specified output		get cec display auto off for output 2
20.	set vidout cec disp	Set cec display auto	<output channel="">=</output>	Command sent:
20.	auto: <output< td=""><td>on/off state for</td><td>1~2</td><td>>set vidout cec disp auto:2,on</td></output<>	on/off state for	1~2	>set vidout cec disp auto:2,on
	channel>, <state></state>	specified output	<state>= on/off</state>	Response:
	chamier, state	specified output	\state>= on/ojj	set cec display auto on for output 2
21.	get vidout cec	Get cec display auto	<output channel="">=</output>	Command sent:
	sleep	on/off delay time	1~2	>get vidout cec sleep timeout:2
	timeout: <output< td=""><td>for specified output</td><td></td><td>Response:</td></output<>	for specified output		Response:
	channel>	Tor specifica output		get cec sleep timeout set to 30mins for output 2
22		Cat and disculate auto	and the same of	Command sent:
22.	set vidout cec	Set cec display auto	<output channel="">=</output>	>set vidout cec sleep timeout:2,5
	sleep	on/off delay time	1~2	Response:
	timeout: <output< td=""><td>for specified output</td><td><time>= 1~30</time></td><td></td></output<>	for specified output	<time>= 1~30</time>	
	channel>, <time></time>		minutes	set cec sleep timeout set to 5mins for output 2
23.	get vidout mute	Get video mute		Command sent:
		state for specified		>get vidout mute
		output		Response:
				get video mute off for output 1 and output 2
24.	set vidout	Set video mute for	<state>= on/off</state>	Command sent:
	mute: <state></state>	specified output		>set vidout mute:on
				set video mute on for output 1 and output 2
25.	get vidout freeze	Get video freeze		Command sent:
		state for output		>get vidout freeze
				Response:
				get video freeze off for output 1 and output 2
26.	set vidout	Set vidout freeze for	<state>= on/off</state>	Command sent:
	freeze: <state></state>	specified output		>set vidout freeze:on
				Response:
				set vidout freeze on for specified output 1 and output
				2
27.	get vidout blank	Get video blank		Command sent:
		setting for specified		>get vidout blank
		output		Response:
				get video blank set to black for output 1 and output 2
28.	set vidout blank:	Set vidout blank	<pattern>=</pattern>	Command sent:
	<pattern></pattern>	setting for specified	{	>set vidout blank:blue
		output	black (no blank	Response:
				set video test pattern to off for output 1 and output 2

			color),	>set video blank to red for output 1 and output 2
		NOTE: When select		
		NOTE: When select	red,	>set video mute off for output 1 and output 2
		to LOGO, the LOGO	green,	
		is fixed in the	blue,	
		<u>center</u>	logo1,	
			logo2,	
			logo3	
			}	
29.	get vidout testpat	Get vidout test		Command sent:
		pattern setting		>get vidout testpat
				Response:
				get video test pattern set to off for output 1 and
				output 2
30.	set vidout	Set vidout test	<pattern>=</pattern>	Command sent:
	testpat: <pattern></pattern>	pattern setting	{	>set vidout testpat:red
			off (no test pattern)	Response:
			red	set video blank to black for output 1 and output 2
			green	>set video test pattern to red for output 1 and output
			blue	2
			}	
31.	get vidout	Get vidout tmds	,	Command sent:
	sleep: <output< th=""><th>sleep on/off setting</th><th></th><th>>get vidout sleep:1</th></output<>	sleep on/off setting		>get vidout sleep:1
	channel>	for specified output		Response:
	enamer	Tor specifica output		get video sleep on for output 1
32.	set vidout	Set vidout tmds	<output channel="">=</output>	Command sent:
	sleep: <output< th=""><th>sleep on/off setting</th><th>1~8</th><th>>set vidout sleep:1,off</th></output<>	sleep on/off setting	1~8	>set vidout sleep:1,off
	channel>, <state></state>	for specified output	<state>= on/off</state>	Response:
				set video sleep off for output 1
				>set vidout freeze off for specified output 1 and
				output 2
				>set aspect ratio to user for input 1
				>set aspect ratio to best fit for input 2
				>set aspect ratio to best fit for input 3
				>set aspect ratio to best fit for input 4
33.	get vidout sleep	Get vidout tmds		Command sent:
	delay: <output< th=""><th>sleep on/off delay</th><th></th><th>>get vidout sleep delay:1</th></output<>	sleep on/off delay		>get vidout sleep delay:1
	channel>	time setting for		Response:
	Chamile/	_		get video sleep off delay time set to 300 seconds for
		specified output		output 1
34.	set vidout sleep	Set vidout tmds	<output channel="">=</output>	Command sent:
<u></u>	Jet Hadat Sicep	See thadae thias	- Cacpac Chainler -	
	delay: <output< th=""><th>sleep on/off delay</th><th>1~8</th><th>>set vidout sleep delay:1,100</th></output<>	sleep on/off delay	1~8	>set vidout sleep delay:1,100

seconds for out 1 and output
ut 1 and output
ut 1 and output

		audia off)	
		audio off)	
		AUDOUT_FORMAT -	
		ANALOG (HDMI	
		audio off, AUDIO	
		OUT audio plays)	
		AUDOUT_FORMAT -	
		ALL (HDMI audio	
		plays, AUDIO OUT	
		audio plays)	
37.	get vidout	Get edid data for	Command sent:
	ediddata: <output< td=""><td>the sink on</td><td>>get vidout ediddata:1</td></output<>	the sink on	>get vidout ediddata:1
	channel>	specified output	Response:
			get edid data from output 1: 00 FF FF FF FF FF 00
			05 B8 00 11 04 00 00 00 1C 19 01 03 80 00 00 78 OE
			EE 95 A3 54 4C 99 26 0F 50 54 FF FF 80 D1 00 B3 00
			A9 40 81 00 81 C0 81 80 8B C0 95 00 02 3A 80 18 71
			38 2D 40 58 2C 45 00 40 84 63 00 00 1E 00 00 00 FC
			00 41 4D 58 5F 48 44 4D 49 31 76 34 OA 20 00 00 00
			FD 00 17 78 0F 66 11 00 0A 20 20 20 20 20 20 00 00
			00 FA 00 D1 C0 A9 C0 90 40 81 40 01 01 01 01 0A 01
			5F 02 03 30 70 67 03 0C 00
			1F 21 05 14 04 03 13 02
			1E 27 29 2A 2B 2C 2D 2F 30 31 01 23 09 07 07 1A 36
			80 A0 70 38 1F 40 30 20 35 00 40 84 63 00 00 1A 46
			37 80 70 72 38 22 40 70 C8 35 00 40 84 63 00 00 1C
			D1 3D 80 80 72 B0 26 40 78 C8 36 00 40 E8 63 00 00
			1C 28 3C 80 A0 70 B0 23 40 30 20 36 00 40 E8 63 00
			00 1A 00 00 00 00 00 00 045
			00 IA 00 00 00 00 00 00 43

Switching Commands

	Command	December	Mandalala	Formula
No.	Command	Description	Variables	Example
1.	load preset: <preset< td=""><td>Load the specified</td><td><preset mode="">=</preset></td><td>Command sent:</td></preset<>	Load the specified	<preset mode="">=</preset>	Command sent:
	mode>	preset mode for	1~8	>load preset:1
		switcher setting		Response:
				loaded preset 1
2.	save preset: <preset< td=""><td>Save current</td><td><pre><preset mode="">=</preset></pre></td><td>Command sent:</td></preset<>	Save current	<pre><preset mode="">=</preset></pre>	Command sent:
	mode>	switcher setting as	1~8	>save preset:2
		the specified preset		Response:
		mode		saved current switcher as preset mode 2
3.	get preset	Get preset name for	<pre><preset mode="">=</preset></pre>	Command sent:
	name: <preset< td=""><td>the specified preset</td><td>1~8</td><td>>get preset name:2</td></preset<>	the specified preset	1~8	>get preset name:2
	mode>	mode		Response:
				get Preset 2 as name for preset mode 2
4.	set preset	Set preset name for	<pre><preset mode="">=</preset></pre>	Command sent:
	name: <preset< td=""><td>the specified preset</td><td>1~8</td><td>>set preset name:2,1toALL</td></preset<>	the specified preset	1~8	>set preset name:2,1toALL
	mode>, <name></name>	mode	<name>= name</name>	Response:
			string	set 1toAll as name for preset mode 2
5.	get switch VI <input< td=""><td>Get which video</td><td><input channel=""/>=</td><td>Command sent:</td></input<>	Get which video	<input channel=""/> =	Command sent:
	channel>	outputs is switched	1~4	>get switch VI1
		to specified input		Possible response message includes:
		or		get switch video from input 1 for all output
		get which window		get switch video from input 1 for no output
		is switched to		get switch video from input 1 for output 1,2
		specified video		get switch video from input 1 for window 1
		-		•invalid
		input (just for PR-		
		WP-412 under		
		Windowing mode)		
6.	get switch	Get which video	<channel>=</channel>	Command sent:
	VO <channel></channel>	input is switched to	{	>get switch VO2
		specified output	1~4 for PR-WP-412	Possible response message includes:
		or	Window Channel	•get switch video from input 1 for output 2
		get which video	under Windowing	get switch no video from no input for output 2
		input is switched to	mode,	get switch video from input 1 for window 2
		specified window	1~2 for PR-WP-412	eget switch video from no video input for window 2
		(just for PR-WP-412	Output Channel	•invalid
		under Windowing	under Matrix Mode	
		mode)	}	
7.	set switch VI <input< td=""><td>Set switch video for</td><td></td><td>Possible command sent:</td></input<>	Set switch video for		Possible command sent:
	channel>O <channel></channel>	input port to the	1~4 for PR-WP-412	set switch VI1OALL
		output port.	}	set switch VI2O1

	Т	Т	Т	
		Or	<output channel="">=</output>	set switch VI4O2
		set switch video	{	set switch VI2O1,2,3
		input to the	0 for Selection of No	■set switch VI2O0
		specified window	channel,	Possible response message includes:
		(just for PR-WP-412	1~4 for PR-WP-412	set switch video from input 1 for all output
		under Windowing	Window Channel	set switch video from no input for output 1
		mode)	under Windowing	set switch video from no input for window 1
			mode,	set switch video from no input for output 1,2
		NOTE: The	1~2 for PR-WP-412	set switch video from input 2 for window 1,2,3
		command is linked	Output Channel	set switch video from input 2 for no output
		to "set win	under Matrix Mode,	•invalid switch
		select" for PR-WP-	all for Selection of	
		412 in Windowing	ALL channel	
		<u>Mode</u>	}	
8.	get switch CI <input< td=""><td>Get audio/video in</td><td><input channel=""/>=</td><td>Command sent:</td></input<>	Get audio/video in	<input channel=""/> =	Command sent:
	channel>	specified input are	1~4	get switch CI1
		switched to which		Possible response message includes:
		outputs		For PR-WP-412, Matrix Mode
				get switch video from input 1 for all output
		NOTE: "get switch		get switch audio from input 1 for all output
		<u>CI" command</u>		get switch video from input 1 for output 1
		response as "get		•get switch audio from input 1 for output 2
		switch AI" and "get		get switch audio from input 1 for no output
		switch VI" for PR-		
		WP-412 under		For PR-WP-412, Windowing Mode
		Matrix Mode, as its		no support in windowing video mode
		audio and video		
		can be routed		
		independently		
		NOTE: "get switch		
		CI" command isn't		
		supported for PR-		
		WP-412 in_		
		Windowing Mode		
9.	get switch	Get audio/video in	<output channel="">=</output>	Command sent:
	CO <output channel=""></output>	specified output are	1~2 for PR-WP-412	>get switch CO2
	-	switched from	Output Channel	Possible response message includes:
		which inputs	under Matrix Mode	For PR-WP-412, Matrix Mode
		·		■get switch video from input 1 for output 2
				get switch audio from input 1 for output 2
				56

		NOTE: "get switch		•get switch video from no input for output 2
		CO" command		•get switch audio from input 1 for output 2
		response as "get		•get switch video from input 1 for output 2
		switch AO" and		•get switch audio from no input for output 2
				-get switch addio from no input for output 2
		"get switch VO" for		For PR-WP-412, Windowing Mode
		PR-WP-412 under		
		Matrix Mode, as its		•no support in windowing video mode
		audio and video		
		can be routed		
		<u>independently</u>		
		NOTE: Il such assistab		
		NOTE: "get switch		
		CO" command isn't		
		supported for PR-		
		<u>WP-412 in</u>		
		Windowing Mode		
10.	set switch CI <input< th=""><th>Set switch both the</th><th><input channel=""/>=</th><th>Possible command sent:</th></input<>	Set switch both the	<input channel=""/> =	Possible command sent:
	channel>O <channel></channel>	audio and video	{	•set switch CI1OALL
		input to the output	0 for Selection of No	set switch Cl0O1
		port.	input channel,	set switch Cl0O1,2
			1~4 for PR-WP-412	set switch CI2O0
		NOTE: "set switch	input channel	Possible response message includes:
		CI" command isn't	}	set switch audio and video from input 1 for all output
		supported for PR-		set switch audio and video from no input for output
		WP-412 in	<output channel="">=</output>	1
		Windowing Mode	{	set switch audio and video from no input for window
			0 for Selection of No	1
		NOTE: "set switch	channel,	set switch audio and video from no input for output
		CI" command isn't	1~2 for PR-WP-412	1,2
		supported set input	Output Channel	set switch audio and video from input 2 for window
		channel to None	under Matrix Mode,	1,2,3
		(input channel = 0)	all for Selection of	set switch audio and video from input 2 for no
		for PR-WP-412 in	ALL channel	output
		<u>Matrix Mode</u>	}	•invalid switch
11.	get switch Al <input< th=""><th>Get which audio</th><th><input channel=""/>=</th><th>Command sent:</th></input<>	Get which audio	<input channel=""/> =	Command sent:
	channel>	outputs is switched	1~4	>get switch Al1
		to specified audio		Possible response message includes:
		input		get switch audio from input 1 for all output
				get switch audio from input 1 for no output
				get switch audio from input 1 for output 1
				•invalid 57

12.	get switch	Get which audio	<output channel="">=</output>	Command sent:
	AO <output channel=""></output>	input is switched to	1~2	>get switch AO2
		specified audio		Possible response message includes:
		output		■get switch audio from input 1 for output 2
				get switch audio from no input for output 2
				•invalid
13.	set switch Al <input< th=""><th>Switch the audio</th><th><input channel=""/>=</th><th>Possible command sent:</th></input<>	Switch the audio	<input channel=""/> =	Possible command sent:
	channel>O <output< th=""><th>channel for the</th><th>{</th><th>set switch Al1OALL</th></output<>	channel for the	{	set switch Al1OALL
	channel>	specified output or	0 for no channel,	■set switch Al2O1,2
		window ,both HDMI	1~4 for input	■set switch Al2O0
		Embedded audio	channel	set switch Al2O1
		and analog audio	}	Possible response message includes:
		output	<output channel="">=</output>	set switch audio from input 1 for all output
			{	set switch audio from input 2 for output 1,2
		NOTE: The	0 for Selection of No	set switch audio from input 2 for no output
		command is linked	output channel,	set switch audio from input 2 for window 1
		to "set audout	1~2 for output	•invalid switch
		priority" command	channel (both	
			Windowing and	
			Matrix Mode),	
			all for selection of	
			all output	
			}	

Windowing Commands

	lowing communation			
No.	Command	Description	Variables	Example
1.	get video mode	Get video		Command sent:
		mode for video		>get video mode
		output		Response:
				get quad video mode for video output
2.	set video	Set video	<mode>=</mode>	Command sent:
	mode: <mode></mode>	mode for video	{	>set video mode:pip
		output	matrix,	Response:
			pip,	set pip video mode for video output
			3stack,	
			quad,	
			}	
3.	got win	Get the video	<pre><window channel="">= 1~4</window></pre>	Command sent:
3.	get win		<window channel="">= 1 4</window>	>get win select:1
	select: <window< td=""><td>input to be</td><td></td><td>Response:</td></window<>	input to be		Response:
	channel>	used for the		get video input 1 to be used for window 1
		specified		get video input I to be used for window I
		window		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		under		
		Windowing		
		mode		
4.	set win	Set the video	<window channel="">= 1~4</window>	Command sent:
''	select: <window< td=""><td>input to be</td><td><input channel=""/>= 1~4</td><td>>set win select:1,2</td></window<>	input to be	<input channel=""/> = 1~4	>set win select:1,2
		used for the	\limput channel=1 4	Response:
	channel>, <input< td=""><td></td><td></td><td>set video input 2 to be used for window 1</td></input<>			set video input 2 to be used for window 1
	channel>	specified		>set switch video from input 2 for window 1
		window		7 Set Switch video from input 2 for window 1
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		Windowing		
		<u>mode</u>		
5.	get win pos	Get the	<window channel="">= 1~4</window>	Command sent:
	x: <window< td=""><td>position</td><td></td><td>>get win pos x:1</td></window<>	position		>get win pos x:1
		L		

	channel>	x(horizontal)		Response:
	ondinier-	for the		get position x of window 1 is 50
		specified		get position x of willdow 1 is 30
		window		
		Window		
		NOTE T		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		Windowing		
		<u>mode</u>		
6.	set win pos	Set the	<window channel="">= 1~4</window>	Command sent:
	x: <window< th=""><th>position</th><th><value>= 0~Width of current</value></th><th>>set win pos x:1,100</th></window<>	position	<value>= 0~Width of current</value>	>set win pos x:1,100
	channel>, <value></value>	x(horizontal)	output resolution	Possible response message includes:
		for the		set position x of window 1 to 100
		specified		• out of range
		window		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		under		
		Windowing		
		mode		
7.	get win pos	Get the	<window channel="">= 1~4</window>	Command sent:
,.	y: <window< th=""><th>position</th><th>Window chainless = 1 4</th><th>>get win pos y:1</th></window<>	position	Window chainless = 1 4	>get win pos y:1
	channel>	y(vertical) for		Response:
	Chamiei/	the specified		get position y of window 1 is 50
		window		
		WIIIUUW		
		NOTE T		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		Windowing		
		<u>mode</u>		
8.	set win pos	Set the	<window channel="">= 1~4</window>	Command sent:
				>set win pos y:1,100 60

	y: <window< th=""><th>position</th><th><value>= 0~Height of current</value></th><th>Possible response message includes:</th></window<>	position	<value>= 0~Height of current</value>	Possible response message includes:
	-	-		
	channel>, <value></value>	y(vertical) for	output resolution	• set position y of window 1 to 100
		the specified		• out of range
		window		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		Windowing		
		<u>mode</u>		
9.	get win size	Get the width	<window channel="">= 1~4</window>	Command sent:
	width: <window< td=""><td>size for the</td><td></td><td>>get win size width:2</td></window<>	size for the		>get win size width:2
	channel>	specified		Response:
	-	window		get the width size for window 2 is 300
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		<u>Windowing</u>		
		<u>mode</u>		
10.	set win size	Set the width	<window channel="">= 1~4</window>	Command sent:
	width: <window< td=""><td>size for the</td><td><value>= 0~Width of current</value></td><td>>set win size width:2,400</td></window<>	size for the	<value>= 0~Width of current</value>	>set win size width:2,400
	channel>, <value></value>	specified	output resolution	Response:
		window		set the width size for window 2 to 400
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		under		
		Windowing		
		<u>mode</u>		
11.	get win size	Get the height	<window channel="">= 1~4</window>	Command sent:
	height: <window< td=""><td>size for the</td><td></td><td>>get win size height:2</td></window<>	size for the		>get win size height:2
	channel>	specified		Response:
	Chamier/			get the height size for window 2 is 300
		window		5 - 10 - 11 - 11 - 11 - 11 - 11 - 11 - 1

		NOTE: The		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		<u>Windowing</u>		
		<u>mode</u>		
12.	set win size	Set the height	<window channel="">= 1~4</window>	Command sent:
	height: <window< th=""><th>size for the</th><th><value>= 0~Height of current</value></th><th>>set win size height:2,400</th></window<>	size for the	<value>= 0~Height of current</value>	>set win size height:2,400
	channel>, <value></value>	specified	output resolution	Response:
		window		set the height size for window 2 to 400
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		Windowing		
		<u>mode</u>		
13.	get win	Get the display	<window channel="">= 1~4</window>	Command sent:
	priority: <window< th=""><th>layer priority</th><th></th><th>>get win priority:1,4</th></window<>	layer priority		>get win priority:1,4
	channel>	for the		Response:
		specified		get display layer priority 4 for window 1
		window		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		Windowing		
		<u>mode</u>		
14.	set win	Set the display	<window channel="">= 1~4</window>	Command sent:
	priority: <window< th=""><th>layer priority</th><th><pre><pre><pre><pre><pre><pre><pre><pre></pre></pre></pre></pre></pre></pre></pre></pre></th><th>>set win priority:1,3</th></window<>	layer priority	<pre><pre><pre><pre><pre><pre><pre><pre></pre></pre></pre></pre></pre></pre></pre></pre>	>set win priority:1,3
	channel>, <priority></priority>	for the	-priority: - ± -	Response:
	enaminer, spiloney	specified		set display layer priority 3 for window 1
		window		
		VVIIIGOVV		
		NOTE: The		
1		NOTE: The		

45		command is only supported for PR-WP-412 under Windowing mode		Command sent:
15.	get audout priority: <output channel=""></output>	Get the audio source priority state for the specified Windowing output port	<pre><output channel="">= 1~2 <priority>= { auto, 1~4, w1~w4 (under Windowing mode) }</priority></output></pre>	>get audout priority:1 Response: get audio out priority for output 1 to auto
16.	set audout priority: <output channel="">,<priority></priority></output>	Set audio source priority for the specified Windowing output port Priority Mode Definitions auto: •Under Matrix mode, active audio source of certain output channel follow input channel routing to the output •Under Windowing mode, active audio source of certain output channel	<pre><output channel="">= 1~2 <priority>= { auto, 1~4, w1~w4 (under Windowing mode) }</priority></output></pre>	Command sent: >set audout priority:1,w1 Response: set audio out priority for output 1 to window 1

			T	
		set as first		
		priority		
		1~4: set active		
		audio source		
		of certain		
		output channel		
		fixed in the		
		specified input		
		channel		
		w1~w4:		
		set active		
		audio source		
		of certain		
		output channel		
		fixed in the		
		specified		
		window		
		channel, only		
		work under		
		Windowing		
		mode		
		NOTE: The		
		command is		
		linked to "set		
		switch AI"		
		command		
17.	get win	Get the border	<window channel="">= 1~4</window>	Command sent:
	border: <window< th=""><th>on or off for</th><th></th><th>>get win border:3</th></window<>	on or off for		>get win border:3
	channel>	the specified		Response:
		window		get the border off for window 3
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		<u>Windowing</u>		
		mode		
		moue		

18.	set win	Set the border	<window channel="">= 1~4</window>	Command sent:
	border:< <i>window</i>	on or off for	<state>= on/off</state>	>set win border:3,off
	channel>, <state></state>	the specified	, 5,,	Response:
		window		set the border off for window 3
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		Windowing		
		<u>mode</u>		
19.	get win border	Get the border	<window channel="">= 1~4</window>	Command sent:
	color: <window< td=""><td>color setting</td><td><color>=</color></td><td>>get win border color:4</td></window<>	color setting	<color>=</color>	>get win border color:4
	channel>	for the	{	Response:
		specified	bk for Black,	get the border color black for window 4
		window	r for Red,	
			g for Green,	
		NOTE: The	b for Blue,	
		command is	y for Yellow,	
		only supported	m for Magenta,	
		for PR-WP-412	c for Cyan,	
		<u>under</u>	w for White,	
		Windowing	dr for Dark Red,	
		<u>mode</u>	dg for Dark Green,	
			db for Dark Blue,	
			dy for Dark Yellow,	
			dm for Dark Magenta,	
			dc for Dark Cyan,	
			gr for Gray	
			}	
20.	set win border	Set the border	<window channel="">= 1~4</window>	Command sent:
	color: <window< th=""><th>color setting</th><th><color>=</color></th><th>>set win border color:4,g</th></window<>	color setting	<color>=</color>	>set win border color:4,g
	channel>, <color></color>	for the	f	Response:
		specified	bk for Black,	set the border color green for window 4
		window	r for Red,	
			g for Green,	
		NOTE: The	b for Blue,	
		command is	y for Yellow,	
		only supported	m for Magenta,	

		for DD 14/2 442	a fau Cum	
		for PR-WP-412	c for Cyan,	
		<u>under</u>	w for White,	
		Windowing	dr for Dark Red,	
		<u>mode</u>	dg for Dark Green,	
			db for Dark Blue,	
			dy for Dark Yellow,	
			dm for Dark Magenta,	
			dc for Dark Cyan,	
			gr for Gray	
			}	
21.	get win	Get the video	<window channel="">= 1~4</window>	Command sent:
	mirror: <window< th=""><th>mirror state for</th><th></th><th>>get win mirror:1</th></window<>	mirror state for		>get win mirror:1
	channel>	the specified		Response:
		window		get the video mirror off for window 1
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		under		
		Windowing		
		mode		
22.	set win	Set the video	<window channel="">= 1~4</window>	Command sent:
22.	mirror: <window< th=""><th>mirror on or</th><th><state>= on/off</state></th><th>>set win mirror:1,on</th></window<>	mirror on or	<state>= on/off</state>	>set win mirror:1,on
	channel>, <state></state>	off state for	\state>= onyojj	Response:
	channel>, <state></state>			set the video mirror on for window 1
		the specified		
		window		
		NOTE: The		
		command is		
		only supported		
		for PR-WP-412		
		<u>under</u>		
		<u>Windowing</u>		
		<u>mode</u>		
23.	get win	Get the video	<window channel="">= 1~4</window>	Command sent:
	display: <window< th=""><th>display state</th><th></th><th>>get win display:1</th></window<>	display state		>get win display:1
	channel>	for the		Response:
		specified		get the video display on for window 1
		window		

		NOTE: The command is only supported for PR-WP-412 under Windowing mode		
24.	set win display: <window channel="">,<state></state></window>	Set the video display on or off state for the specified window NOTE: The command is only supported for PR-WP-412 under Windowing mode	<window channel="">= 1~4 <state>= on/off</state></window>	Command sent: >set win display:1,off Response: set the video display off for window 1
25.	reset win layout: <video mode="">,<window channel=""></window></video>	Reset the specified window layout of certain Video mode to default setting	<video mode="">= {pip,3stack,quad,all}<window channel="">= {1~4,all}</window></video>	Command sent: >reset win layout:all,all Response: reset all window layout of all video mode to default

